



OWNER'S / OPERATOR'S MANUAL



READ THIS MANUAL CAREFULLY!
It contains important safety information.

YTF1AX7F EFI

UTILITY VEHICLE

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

YAMAHA

LIT-CALIF-65-01

INTRODUCTION

Congratulations on your purchase of a Yamaha Electronic Fuel Injection (EFI) utility vehicle. This manual contains information you will need for proper operation, maintenance, and care of your utility vehicle. A thorough understanding of these simple instructions will help you to obtain maximum enjoyment from your new Yamaha.

If you have any questions about the operation or maintenance of your utility vehicle, please consult a Yamaha dealer.

Yamaha Motor Corporation USA

YTF1AX7F OWNER'S/OPERATOR'S MANUAL

**© 2017 by Yamaha Motor Corporation
USA**

1st Edition

**All rights reserved. Any reprinting
or unauthorized use without the
written permission of
Yamaha Motor Corporation USA
is expressly prohibited.**

Printed in U.S.A.

LIT-19626-61-17



JW6-F8199-22

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following notations:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

A **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

A **NOTICE** indicates special precautions that must be taken to avoid damage to the vehicle or other property.

TIP

A **TIP** provides key information to make procedures easier or clearer.

TIP

Yamaha continually seeks advancements in product design and quality; therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your utility vehicle and this manual. If you have any questions concerning this manual, please consult your Yamaha dealer.

WARNING

Read and understand this manual completely before operating your utility vehicle. This manual should be considered a permanent part of your utility vehicle and should remain with the vehicle when resold.

CONTENTS

WARRANTY

1

IMPORTANT LABELS

2

OPERATOR SAFETY

3

SAFETY CONSIDERATIONS

4

CONTROLS

5

PRE-OPERATION CHECKS

6

OPERATION

7

MAINTENANCE

8

STORAGE

9

SPECIFICATIONS

10

WIRING

11

WARRANTY

LIMITED 2-YEAR WARRANTY FOR TRANSPORTATION AND UTILITY VEHICLES

Yamaha Golf-Car Company hereby warrants that any new Yamaha utility vehicle or any multi passenger cars or specialty vehicles purchased from Yamaha, or an Authorized Dealer or Distributor in the United States will be free from defects in material and workmanship for TWO years from date of purchase, subject to the stated limitations. DURING THE PERIOD OF WARRANTY, any authorized Yamaha golf car service technician, dealer, or distributor will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the vehicle's warranty period. All parts replaced under warranty become property of Yamaha Golf-Car Company.

Common Parts		Electric Car Specific	
Frame	2 Years	Battery - Trojan ' T875 ' <u>without</u> HydroLink Watering System	4 Years or 23,500 amp-hours whichever comes first *Detailed condition on the next page
Transaxle	2 Years		
Pedals	2 Years		
Brakes (excluding shoes / pads)	2 Years		
Electrical wires, switches, and relays	2 Years		
Suspension / Steering components	2 Years	Electric Motor	2 Years
Seats	2 Years	Motor Controller / Charger	2 Years
Sun Top	2 Years	Charger Cord	2 Years
Bumpers / Body Parts	2 Years	Charger Receptacle	2 Years
Floor Mats	2 Years	Throttle Position Sensor	2 Years
Scorecard Holders	2 Years	GAS Car specific	
Bag Carrier	2 Years	Exhaust / Intake / Generator	2 Years
Common Accessories		Gas Engine	2 Years
Windshield	3 Years	Throttle Cables / Controls	2 Years
Head Light	2 Years	Battery	1 Years
Tail Light	2 Years	Clutch (excluding drive belt)	2 Years
		All Remaining Parts	1 years

EXCLUSIONS from this Warranty shall include any failures caused by:

- Abnormal strain, neglect, or abuse, including lack of proper maintenance, and use contrary to the Owner's/Operator's Manual instructions.
- Accident or collision damage.
- Installation of parts or accessories that are not original equipment.
- Fading, rust, or deterioration due to exposure or ordinary wear and tear.
- Modifications or alterations that affect the car's condition, operation, performance, or durability, or which makes the car serve a purpose other than use as a two-person, golf course vehicle.
- Damage due to improper transportation.
- Acts of God, i.e. lightning, hail damage, flooding, fire, etc.

This Limited Warranty does not cover any parts replaced due to normal wear or routine maintenance, including oil and air filter elements, brake shoes, tire wear, spark plugs, starter and clutch drive belts. Any charges incurred in transporting a golf car or charger to and from an authorized Yamaha golf car dealer for service or in performing field service are also excluded from this warranty. Gasoline powered golf car starting batteries on vehicles equipped with a golf course GPS device, or any other device with a parasitic current draw, unless the vehicle is equipped from the factory with an optional deep cycle starting battery, are also excluded from this warranty.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to operate and maintain the golf car and charger as specified in the appropriate Owner's/Operator's Manual, and give notice to an authorized Yamaha golf car dealer of any and all apparent defects within ten (10) days after discovery, and make the vehicle or charger available at that time for inspection and repairs by the dealer's authorized representative.

WARRANTY TRANSFER: Any transfer of warranty must take place within the first three years of the original in-service date of the vehicle. The vehicle must be re-registered by an authorized Yamaha Golf-Car Dealer within 30 days of transfer. A fee may be charged for the transfer of the warranty.

Yamaha Golf-Car Company makes no other warranty of any kind, expressed or implied. All implied warranties of merchantability and fitness of merchantability and fitness for a particular purpose which exceed the obligations and time limits stated in this warranty are hereby disclaimed by Yamaha Golf-Car Company and excluded from this Warranty. Some states do not allow limitations on how long implied warranty lasts, so the above limitation may not only apply to you. Also excluded from this Warranty is any incidental or consequential damages including loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This Warranty give you specific legal rights, and you may also have other rights, which vary, from state to state.

Yamaha Motor Corporation, USA, KENNESAW, GEORGIA 30144

EFFECTIVE DATE: 7/1/16

WARRANTY

CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

1

The California Air Resources Board and Yamaha Golf-Car Company are pleased to explain the emissions control system warranty on your 2012 or later small off-road engine (SORE) vehicle. In California, new SORE vehicles must be designed, built and equipped to meet the State's stringent anti-smog standards. Yamaha Golf-Car Company must warrant the EECS on your SORE vehicle for the period of time listed below provided there has been no abuse, neglect or improper maintenance of your SORE vehicle.

Your EECS may include parts such as the carburetor, fuel-injection system, the ignition system, catalytic converter, fuel tanks, fuel lines, fuel caps, valves, canisters, filters, vapor hoses, clamps, connectors, and other associated emission-related components.

Where a warrantable condition exists, Yamaha Golf-Car Company will repair your SORE vehicle at no cost to you including diagnosis, parts and labor.

MANUFACTURER'S WARRANTY COVERAGE:

This emissions control system is warranted for two years. If any emission-related part on your equipment is defective, the part will be repaired or replaced by Yamaha Golf-Car Company.

OWNER'S WARRANTY RESPONSIBILITIES:

As the SORE vehicle owner, you are responsible for performance of the required maintenance listed in your owner's manual. Yamaha Golf-Car Company recommends that you retain all receipts covering maintenance on your SORE vehicle, but Yamaha Golf-Car Company cannot deny warranty solely for the lack of receipts.

As the SORE vehicle owner, you should however be aware that Yamaha Golf-Car Company may deny you warranty coverage if your SORE vehicle or a part has failed due to abuse, neglect, or improper maintenance or unapproved modifications.

You are responsible for presenting your SORE vehicle to Yamaha Golf-Car Company's distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have a question regarding your warranty coverage, you should contact Yamaha Customer Relations at 800-962-7926.

GENERAL EMISSIONS WARRANTY COVERAGE:

Yamaha Golf-Car Company warrants to the ultimate purchaser and each subsequent purchaser that the SORE vehicle is:

Designed, built and equipped so as to conform with all applicable regulations; and

Free from defects in materials and workmanship that cause the failure of a warranted part to be identical in all material respects to that part as described in Yamaha Golf-Car Company's application for certification.

The warranty period begins on the date the SORE vehicle is delivered to an ultimate purchaser or first placed into service. The warranty period is two years.

Subject to certain conditions and exclusions as stated below, the warranty on emission-related parts is as follows:

1. Any warranted part that is not scheduled for replacement as required maintenance in the written instructions supplied, is warranted for the warranty period stated above. If the part fails during the period of warranty coverage, the part will be repaired or replaced by Yamaha Golf-Car Company according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period.
2. Any warranted part that is scheduled only for regular inspection in the written instructions supplied is warranted for the warranty period stated above. Any such part repaired or replaced under warranty will be warranted for the remaining warranty period.
3. Any warranted part that is scheduled for replacement as required maintenance in the written instructions supplied is warranted for the period of time before the first scheduled replacement date for that part. If the part fails before the first scheduled replacement, the part will be repaired or replaced by Yamaha Golf-Car Company according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period prior to the first scheduled replacement point for the part.
4. Repair or replacement of any warranted part under the warranty provisions herein must be performed at a warranty station at no charge to the owner.
5. Notwithstanding the provisions herein, warranty services or repairs will be provided at all of our distribution centers that are franchised to service the subject engines or equipment.
6. The SORE vehicle owner will not be charged for diagnostic labor that is directly associated with diagnosis of a defective, emission-related warranted part, provided that such diagnostic work is performed at a warranty station.
7. Yamaha Golf-Car Company is liable for damages to other engine or equipment components proximately caused by a failure under warranty of any warranted part.

WARRANTY

1

8. Throughout the SORE vehicle warranty period stated above, Yamaha Golf-Car Company will maintain a supply of warranted parts sufficient to meet the expected demand for such parts.
9. Any replacement part may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of Yamaha Golf-Car Company.
10. Add-on or modified parts that are not exempted by the Air Resources Board may not be used. The use of any non-exempted add-on or modified parts by the ultimate purchaser will be grounds for disallowing a warranty claims. Yamaha Golf-Car Company will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.

WARRANTED PARTS:

The repair or replacement of any warranted part otherwise eligible for warranty coverage may be excluded from such warranty coverage if Yamaha Golf-Car Company demonstrates that the SORE vehicle has been abused, neglected, or improperly maintained, and that such abuse, neglect, or improper maintenance was the direct cause of the need for repair or replacement of the part. That notwithstanding, any adjustment of a component that has a factory installed, and properly operating, adjustment limiting device is still eligible for warranty coverage. The following emission warranty parts are covered:

NOTICE

Yamaha Golf-Car Company does not approve the use of high-pressure washers to clean the products they manufacture. Doing so may damage the finish on the body or result in doing other damage not covered by warranty.

1. Fuel Tank
2. Fuel Cap
3. Fuel Line
4. Fuel Line Fittings
5. Clamps
6. Control Valves
7. Control Solenoids
8. Electronic Controls
9. Control Cables
10. Control Linkages
11. Vapor Hoses
12. Carbon Cannister
13. Cannister Mounting Brackets


IMPORTANT LABELS

⚠ SAFETY AND INSTRUCTION LABELS


⚠ WARNING

Read the following labels carefully before operating your utility vehicle, and promptly replace any labels which become damaged or removed. Death or serious personal injury can result from failing to read and comply with the safety instruction labels.

2

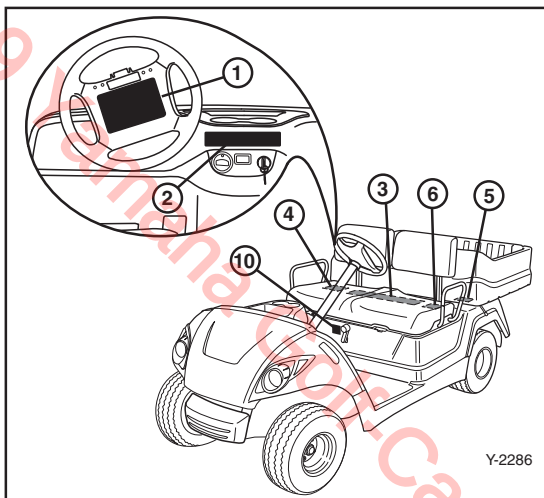

Y-2286

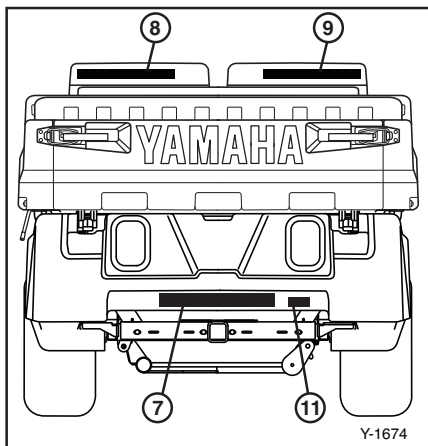

Y-1674

①

⚠ WARNING

To reduce the risk of accidents and injury or DEATH:

- Never travel at speeds too fast for the terrain, visibility conditions, or your experience.
- Drive with extra caution in congested areas, when operating in reverse, and when driving on wet, rough, or loose surfaces.

OPERATING INSTRUCTIONS

- Read the warning label on the beverage holder panel before operating.
- Be sure occupants are seated.
- Select "FORWARD" OR "REVERSE" then turn main switch to "ON".
- Press the accelerator pedal to start moving. The motor will start and the parking brake will release automatically.
- To stop, release the accelerator pedal and press the brake pedal. Press the parking brake until it locks, and turn the main switch to "OFF" before leaving the vehicle.
- Come to a complete stop before reversing direction.
- Read the Owner's/Operator's Manual for more information.

Parking	P	XXXXXX	011
	R	XXXXXX	012
	N	XXXXXX	013
	D	XXXXXX	014
	L	XXXXXX	015
	B	XXXXXX	016
	A	XXXXXX	017
	S	XXXXXX	018
	C	XXXXXX	019
	E	XXXXXX	020

Brake Accelerator

ATTENTION

- This vehicle was not manufactured for use on public streets and does not comply with federal motor vehicle safety standards applicable to passenger cars.

YAMAHA

JWB-K7762-00

IMPORTANT LABELS

②



WARNING

JW6-K758-30

To reduce the risk of accidents and injury or DEATH:

- Vehicle capacity: 1 operator and 1 passenger.
- Remain seated and hold on while in motion.
- Keep entire body inside vehicle.
- Passenger and cargo can affect vehicle handling.
- Drive slowly in turns.

YAMAHA

OFF

ON

ON

 





③



WARNING



AVERTISSEMENT

GASOLINE IS HIGHLY FLAMMABLE AND EXPLOSIVE. A fire or explosion could cause SEVERE INJURY or DEATH.

- Keep heat, sparks, and open flame away from fuel tank and fuel lines.
- Do not add fuel while engine is running or hot.
- Do not modify fuel system.
- Services should be performed by dealer or qualified personnel.

YAMAHA

OPERATION AT HIGHER SPEEDS COULD CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.

- Do not tamper with governor to increase speed.

L'ESSENCE EST HAUTEMENT FLAMMABLE ET EXPLOSIF. Un feu ou une explosion pourraient provoquer la BLESSURE SEVERE ou la MORT.

- Garder étincelles, flammes et chaleur loin du réservoir à essence et des tuyaux à carburant.
- Ne pas ajuster d'essence pendant que le moteur est chaud.
- Ne pas modifier le système d'alimentation.
- Toute révision doit être faite chez le fournisseur ou par du personnel qualifié.

JW1-K8297-01



L'OPERATION A UNE PLUS HAUTE VITESSE POURRAIT PROVOQUER LA PERTE DE CONTRÔLE QUI POURRAIT S'ENSUIVRE DANS LA BLESSURE SÉVÈRE, OU LA MORT.

- Ne pas toucher au régulateur afin d'augmenter la vitesse.

④

This spark ignition system meets all requirements of the Canadian Interference Causing Equipment Regulations.

Ce système d'allumage par étincelle de véhicule respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

YAMAHA JW6-H2377-00

IMPORTANT LABELS

⑥

DATE OF CONSTRUCTION: JAN. 2016 MY2017
YAMAHA MOTOR POWERED PRODUCTS CO., LTD
200-1 SAKAGAWA, KAKEGAWA, JAPAN
MODEL: YTF1A17 MAX. POWER: 8.9 hp (6.7 kW)
VEHICLE WEIGHT: 326 kg (718 lb) LOAD CAP.: 340 kg (749 lb)
BATTERY WEIGHT MAX.: 19 kg
NOMINAL BATTERY VOLTAGE: 12V
This vehicle complies with ANSI/ITDF B56.8-2011-Part III JW6-F4236-A0



2

⑤

Important Emissions Information Yamaha Golf-Car Company

THIS EQUIPMENT CONFORMS TO 2010 CALIFORNIA E/P REGULATIONS FOR SMALL OFF-ROAD ENGINES UNDER 13CCR SECTION 2766(D). THIS ENGINE MEETS 2012 CALIFORNIA EXH EMISSION REGULATIONS AND CONFORMS TO PHASE 2 U.S. EPA REGULATIONS FOR SMALL OFF-ROAD ENGINES. EMISSIONS COMPLIANCE PERIOD: CATEGORY A (EPA)

EF: XXXXX XXXXX

DCM: XXX XXXX

DISPLACEMENT: XXXcc

EMISSION CONTROL SYSTEM: XX

EVAPORATIVE CODE: XXXXXXXX

MAINTENANCE SPECIFICATIONS

 
ENGINE OIL: SAE 10W30

IGNITION TIMING: 27 BTDC

SPARK PLUG GAP: 0.28-0.31

NO OTHER ADJUSTMENTS NEEDED

The air index of this engine is 3



Most Clean

Least Clean

Note: The lower the Air Index, the less Pollution


This engine is certified to be emissions compliant for the following use:

[] Moderate (125 hours) [] Intermediate (250 hours) [X] Extended (1000 hours)

Check owner's manual for further details.


Y-1599xx

⑪

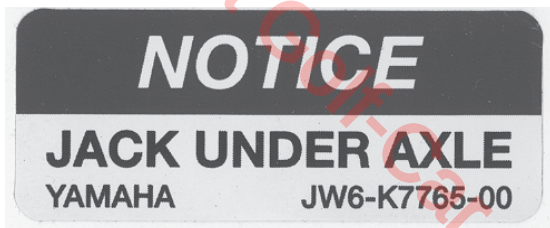

Y-1673a

⑩

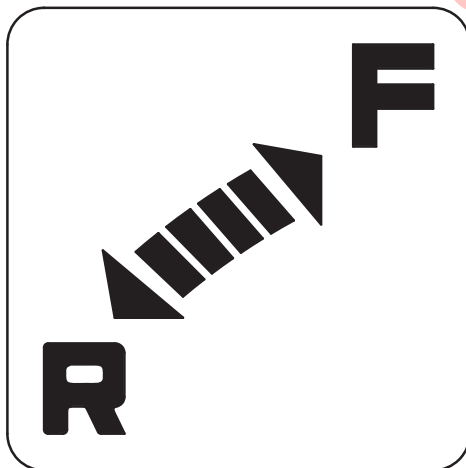

Y-1610

IMPORTANT LABELS

2

7

! WARNING

Improperly loading a trailer or pulling an object can affect handling, stability, and risk of overturn or other accidents.

- Vehicle rated capacity: 750 lb (340 kg) maximum including weight of operator, passenger, accessories, cargo, and (if applicable) trailer tongue weight. G.V.W. = lb (kg)
- Secure load to prevent it from shifting.
- Never load more than 150 lb (68 kg) tongue weight on the towing bracket.
- Do not tow more than 500 lb (227 kg) rolling weight (trailer plus cargo).
- Read Owner's/Operator's Manual before loading, towing, or pulling objects.

YAMAHA

JW6-FT 6956-30

8

! WARNING

IMPROPER USE OF CARGO BED CAN RESULT IN SEVERE INJURY OR DEATH FROM LOSS OF CONTROL, OVERTURN OR OTHER ACCIDENTS.

- Do not carry passengers in cargo bed
- Maximum load in cargo bed: 3000 lb (1336 kg)
- Load may affect handling and stability.
- Secure cargo so that it will not shift - a loose load could change handling unexpectedly or be thrown forward striking occupants.
- Keep weight in the cargo bed centered side to side, and as low and as far forward as possible. Top-heavy loads increase the risk of overturn.
- When loaded with cargo or towing a trailer:
 - Reduce speed and allow more room to stop and avoid hills and rough terrain
 - Turn gradually and go slowly
 - Avoid hills and rough terrain.
- Read Owner's Manual before loading or towing.

BECAUSE

JW6-K7764-01



- Keep hands, body, other persons, away from pinch points when lowering bed.
- Do not operate the vehicle with bed up.

9

! WARNING

STATIC ELECTRICITY SPARKS CAN IGNITE FUEL VAPOR CAUSING FIRE OR EXPLOSION.

- Do not fill portable fuel container (gas can) in cargo bed.
- Set fuel container on the ground and touch fuel nozzle to the unopened container before removing cap.
- Keep the fuel nozzle in contact with the container while fueling.
- Tighten cap before putting fuel container in cargo bed.

YAMAHA


JW6-K7767-01



- Keep hands, body, other persons, away from pinch points when lowering bed.
- Do not operate the vehicle with bed up.

IMPORTANT LABELS

2

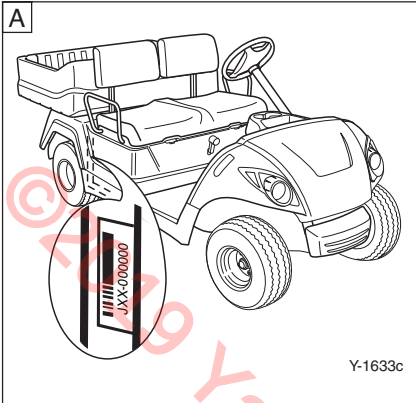


UTILITY VEHICLE SERIAL NUMBER

The utility vehicle serial number (A) is identified in the location shown.


TIP

The first three digits of the serial number are for model identification; the remaining digits are the unit production number. Keep a record of these numbers for reference when ordering parts from a Yamaha dealer.

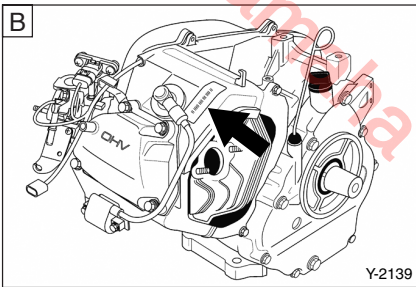

The engine serial number (B) is affixed in the location shown.

© Engine Information

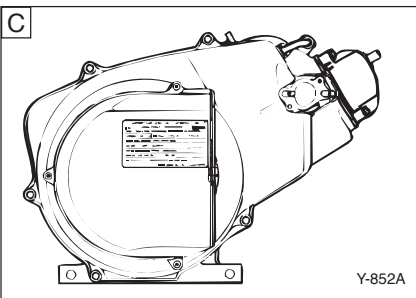

IMPORTANT ENGINE INFORMATION		YAMAHA	
ENGINE FAMILY : *****			
REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.			
DISPLACEMENT: *** cm ³	VALVE LASH(es) IN: **..**	EX: **..**	
IGNITION TIMING & IDLE MIXTURE		NO OTHER ADJUSTMENTS NEEDED	
IDLE SPEED: **** rpm	AT NO LOAD		
FUEL: THIS ENGINE IS CERTIFIED TO OPERATE ON UNLEADED GASOLINE			
ENGINE OIL: SAE 10W-30	TYPE	SD	
THIS ENGINE MEETS ***** CALIFORNIA EMISSION REGULATIONS FOR OFF-ROAD ENGINES. THIS ENGINE CONFORMS TO ***** U.S. EPA REGULATIONS FOR SMALL HONORABLE ENGINES.			
YAMAHA MOTOR CO., LTD.			

Y-851a




OPERATOR SAFETY

3

Yamaha utility vehicles are designed to be simple to operate. However, be sure to observe the following to reduce the risk of serious injury or death due to loss of control and other hazards:

BEFORE OPERATING THE UTILITY VEHICLE

- Read this Owner's/Operator's manual and all safety and instruction labels on the utility vehicle before operating.
- Perform the pre-operation checks found in Section 6 of this manual.
- Only authorized people should drive the utility vehicle, from the driver's side only, and only in designated areas.
- Do not allow more than two occupants per seat. This utility vehicle is restricted to two occupants.
- Never carry passengers in the cargo bed.
- Do not operate the utility vehicle while under the influence of alcohol or drugs; their effect on vision and judgment make operating a utility vehicle dangerous.
- Do not operate the utility vehicle on public streets, roads or highways unless allowed by law or the local regulating authority.

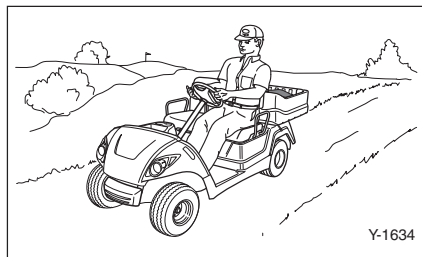




WHILE OPERATING THE UTILITY VEHICLE

- Keep your entire body inside the utility vehicle, remain seated and hold on when the vehicle is in motion.
- Do not start the utility vehicle until all occupants are seated.



OPERATOR SAFETY

3

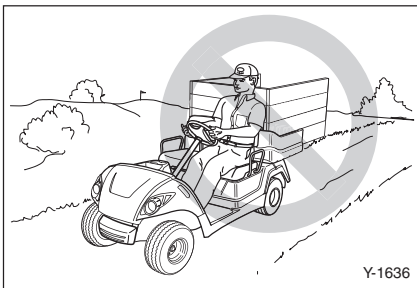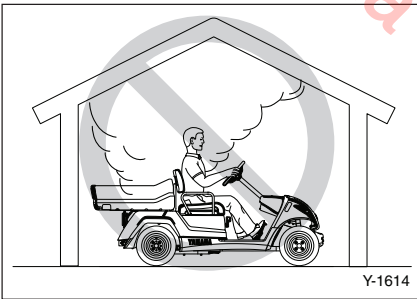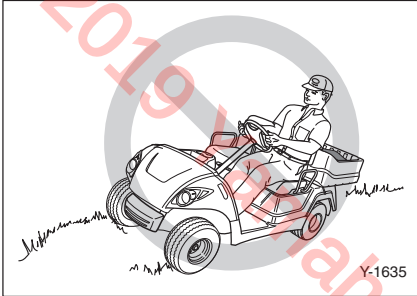

- Keep your hands on the steering wheel and your eyes on the path ahead.
- Use extra care in congested areas or when backing up. Always back up slowly, and watch carefully.
- Avoid starting or stopping abruptly.
- Vary the speed of the utility vehicle to match the terrain of the course.
- Avoid turning the steering wheel too sharply at higher speeds to avoid tipping or rolling the vehicle.
- Always drive slowly straight up or straight down slopes – never at an angle to avoid tipping or rolling the vehicle.
- Do not brake abruptly when carrying loads in the cargo bed or when towing a trailer.
- Do not run the engine indoors. Exhaust gas is poisonous and could result in carbon monoxide poisoning.
- Do not make any modification or addition which affects capacity or safe operation, or make any changes not in accordance with the owner's/operator's manual.



SAFETY CONSIDERATIONS

Like all machines, utility vehicles can cause injury if improperly used or maintained.

Experience has shown that utility vehicles are safe when operated in accordance with the safety warnings affixed to every utility vehicle.

DRIVER QUALIFICATIONS

Allow only authorized people to operate utility vehicles. It is recommended that only people who possess a valid motor vehicle driver's license be allowed to operate utility vehicles.

WARNING

Do not operate golf cars or utility vehicles when under the influence of alcohol or drugs. Death or serious personal injury can result from failing to comply with the safety and warning instructions affixed to the utility vehicle.

HAZARD PREVENTION

The following hazards must be made safe:

- **Steep Grades.** Where steep grades exist, restrict utility vehicles to designated utility vehicle pathways where possible. In addition, identify steep grades with a suitable warning sign like:

WARNING

Descend steep grades slowly with foot on brake. Death or serious personal injury can result from failing to comply with the safety and warning instructions affixed to the utility vehicle.

- **Sharp Turns, Blind Corners, Bridge Approaches.** Chain or rope off these potentially hazardous areas or identify them with a suitable warning describing the nature of the hazard and the proper precautions to be taken to avoid the hazard.
- **Wet Areas.** Wet grass may cause a utility vehicle to lose traction and may affect stability. Operators should reduce speed in wet areas or during periods of inclement weather.



SAFETY CONSIDERATIONS

- **Loose Terrain.** Loose terrain may cause a utility vehicle to lose traction and may affect stability. Repair loose terrain, chain or rope off these areas, or identify loose terrain with a suitable warning.
- **Utility Vehicle and Pedestrian Interference.** Reroute utility vehicle traffic or pedestrian traffic in congested areas wherever possible to prevent accidents. If it is impractical to reroute traffic, erect warning signs to warn pedestrians of utility vehicle traffic, and to warn utility vehicle operators to drive slowly, use caution and watch for pedestrians.

ACCESSORIES AND LOADING

Accessories

Accessories can affect the handling and control of your vehicle. Keep the following in mind when considering an accessory or operating a utility vehicle which has accessories.

- Choose only accessories designed for your utility vehicle. Your Yamaha dealer has a variety of genuine Yamaha accessories. Other accessories may also be available on the market. However, it is not possible for Yamaha to test all non-Yamaha accessories, nor have any control over the quality or suitability of them. Choose a genuine Yamaha accessory, or one that is equivalent in design and quality.
- Accessories should be rigidly and securely mounted. An accessory which can shift position or come off

while you are operating could affect your ability to control the utility vehicle.

- Do not mount an accessory where it could interfere with your ability to control the utility vehicle. Examples include (but are not limited to) an object that limits your ability to turn the steering wheel or one that limits your view.
- Use extra caution when driving a utility vehicle with accessories. The utility vehicle may handle differently than it does without accessories.

Loading

Cargo or a trailer can change the stability and handling of a utility vehicle. You must use common sense and good judgment when carrying cargo or towing a trailer. Keep the following points in mind:

- Never exceed the weight limits shown on page 10-1. An overloaded utility vehicle can be unstable.
- Do not exceed the maximum tongue weight. You can measure tongue weight with a bathroom scale. Put the tongue of the loaded trailer on the scale with the tongue at hitch height. Adjust the load in the trailer, if necessary, to reduce the weight on hitch. If you are carrying cargo and towing a trailer, include the tongue weight in the maximum vehicle load limit.
- Load cargo in the cargo bed as forward as possible to avoid tipping the vehicle.



SAFETY CONSIDERATIONS

4

- Cargo should always be secured in the trailer. Make sure cargo in the trailer cannot move around. A shifting load can cause an accident.
- Make sure the load does not interfere with controls or your ability to see where you are going.
- Drive more slowly than you would without a load. The more weight you carry, the slower you should go. Although conditions vary, it is good practice not to exceed low range whenever you are carrying heavier loads or when towing a trailer.
- Allow more braking distance. A heavier vehicle takes longer to stop.
- Avoid making sharp turns unless at very slow speeds to avoid tipping or rolling the vehicle.
- Avoid hills and rough terrain. Choose terrain carefully. Added weight affects the stability and handling of the utility vehicle.

WARNING

- **Overloading this utility vehicle or carrying or towing cargo improperly could result in a hazard.**
- **This could cause changes in utility vehicle handling which could lead to an accident.**
- **Never exceed the stated load capacity for this utility vehicle.**
- **Cargo should be properly distributed and securely attached.**
- **Reduce speed when carrying cargo or pulling a trailer. Allow greater distance for braking.**

MAINTENANCE REQUIRED FOR UTILITY VEHICLE SAFETY

Practice the following to help ensure the safety of utility vehicle operators:

- **Preventative Maintenance.** Perform all scheduled maintenance in accordance with manufacturer's recommendations to provide a safe, properly operating utility vehicle.
- **Personnel.** Allow only qualified, trained, and authorized personnel to inspect, adjust and maintain utility vehicles.
- **Parts and Materials.** Use only replacement parts and materials recommended by the manufacturer.
- **Ventilation.** Properly ventilate all maintenance and storage areas in accordance with applicable fire codes and ordinances to avoid fire hazards. Ventilation is required to remove flammable vapors and fumes from gasoline powered vehicle storage areas. Ventilation is also required to remove hydrogen gas from the vehicle storage areas during the battery charging process.



SAFETY CONSIDERATIONS

SAFETY PRECAUTIONS DURING MAINTENANCE

When performing maintenance, follow all safety instructions contained in the manufacturer's operation and service manuals, as well as the following safety procedures:

- Properly immobilize utility vehicle before beginning any maintenance to avoid any unexpected vehicle movement.
- Properly block chassis before working underneath utility vehicle to avoid any unexpected vehicle movement.
- Before disconnecting any part of the fuel system, drain the applicable part of the system to prevent fuel leaks.
- When working on the fuel system or the battery, do not smoke, or allow any sparks or open flames near the vehicle, to avoid any fires or explosions.
- Before performing any maintenance, disable the vehicle's electrical system in accordance with the manufacturer's instructions.
- Use only properly insulated tools when working on electrically powered utility vehicles or around batteries to avoid electrical shock or damage to the electrical system.
- Maintain all safety devices, including brakes, steering mechanisms, warning devices and governors, in a safe operating condition. Do not modify these safety devices as supplied by the manufacturer.





- After each maintenance or repair, the vehicle must be driven by a qualified, trained and authorized person – in an area free of pedestrian traffic – to ensure proper operation and adjustment.
- Record all maintenance performed in a maintenance record log by date, name of person performing maintenance and type of maintenance. Periodically inspect maintenance log to ensure accurate and complete entries.
- Maintain in a legible condition all nameplates, warnings, and instructions provided by the manufacturer.
- If new nameplates, warnings or instructions are needed, contact your Yamaha dealer.

FUEL HANDLING/STORAGE

Take the following precautions to ensure maintenance worker safety:


- Supervise the storage and handling of liquid fuels in accordance with applicable fire and safety requirements to avoid any fires or explosions.

CONTROLS

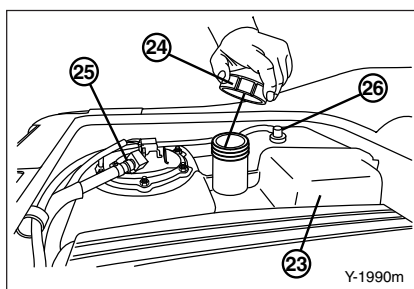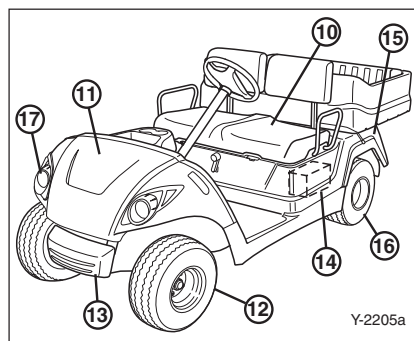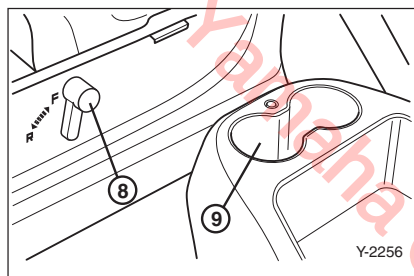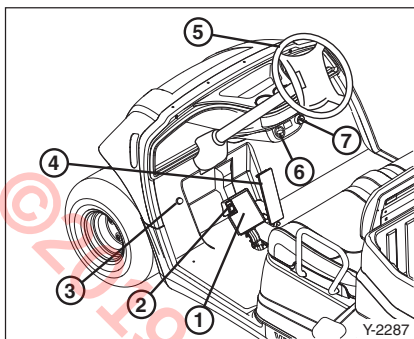

FEATURES

- ① Brake pedal
- ② Parking brake pedal
- ③ Horn switch
- ④ Accelerator pedal
- ⑤ Steering wheel
- ⑥ Engine/oil warning light/fuel gauge/hour meter
- ⑦ Main/headlight switch
- ⑧ Drive select lever
- ⑨ Cupholder
- ⑩ Seat
- ⑪ Front body
- ⑫ Front tire
- ⑬ Front bumper
- ⑭ Battery
- ⑮ Rear body
- ⑯ Rear tire
- ⑰ Headlights
- ⑱ Taillights
- ⑲ Cargo bed
- ⑳ Tailgate
- ㉑ Trailer hitch receiver bracket
- ㉒ Cargo bed release lever
- ㉓ Fuel tank
- ㉔ Fuel cap
- ㉕ E.F.I. fuel pump
- ㉖ Fuel tank vent

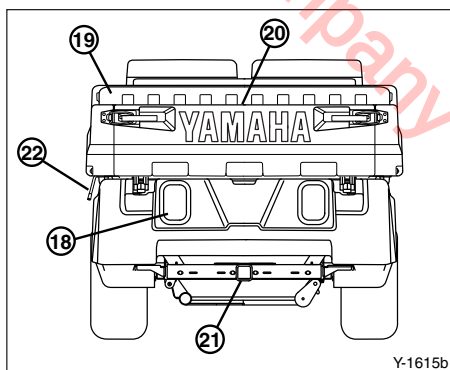


CONTROLS

MAIN SWITCH

The main switch controls the following items:


"OFF"

All electrical circuits are switched off. The key can be removed only in this position.

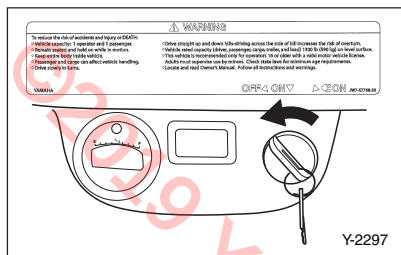


"ON"

Electrical circuits are switched on. The utility vehicle can be driven.

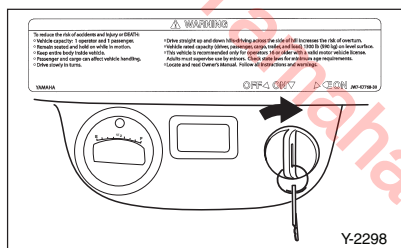

"ON" WITH LIGHTS

The functions for this position are the same as for the ON position; however, this position will activate the headlights and taillights.

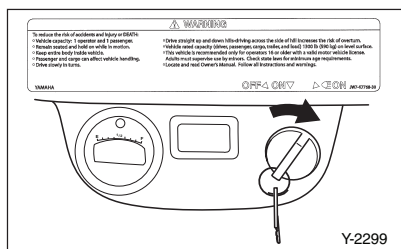


ENGINE/OIL WARNING LIGHT

When the engine oil level falls below an acceptable level, this light comes on.

NOTICE

If the light comes on, stop the engine, check the engine oil level and add oil as necessary. (See page 6-3.)

CONTROLS

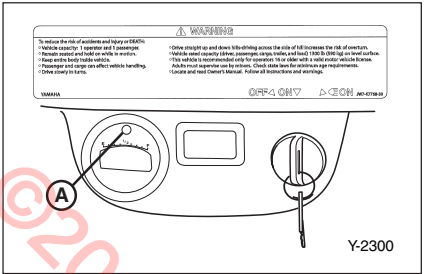

When the engine/oil warning light is flashing while the key is on, there may be a problem with the fuel injection system, which may affect performance, emissions and fuel economy or cause damage to the fuel injection system or engine.

NOTICE

If the light is flashing, do not operate the vehicle. Contact your Yamaha Service representative to have the vehicle serviced.

Ⓐ Engine/oil warning light



DRIVE SELECT LEVER

The drive select lever is used to shift the utility vehicle into forward or reverse. After coming to a complete stop, move the lever to the desired position.

Lever Position	Car Movement
F	FORWARD
R	REVERSE

TIP

The reverse alarm will sound when the drive select lever is turned to "R."

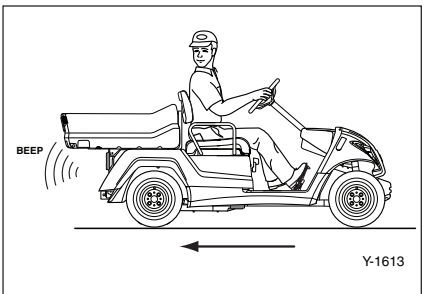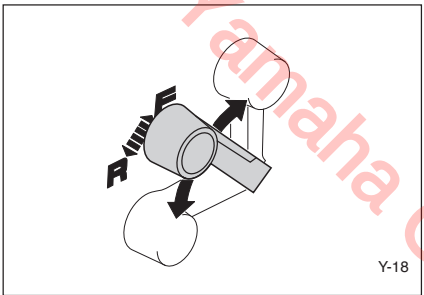

CONTROLS

ACCELERATOR PEDAL

The accelerator pedal controls the vehicle's speed.

Action	Car Speed
Depress pedal	Increase
Release pedal	Decrease

(A) Accelerator pedal

BRAKE PEDAL

Press down on the brake pedal to stop the utility vehicle.

(B) Brake pedal

PARKING BRAKE PEDAL

Press down on the parking brake pedal whenever parking the utility vehicle.

(C) Parking brake pedal

TIP

Release the parking brake by depressing the accelerator pedal.


⚠ WARNING

The parking brake will automatically release when the accelerator pedal is depressed. If the main switch is in the "ON" position, depressing the accelerator may suddenly cause the utility vehicle to move. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

CONTROLS

CARGO BED

- (A) Cargo bed

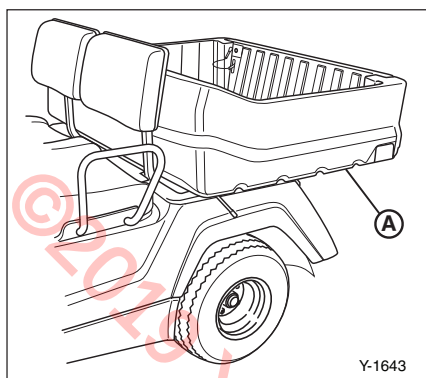


OPENING AND CLOSING THE TAILGATE

5

To open, unhook the latches, and then lower the tailgate.



To close, place the tailgate in its original position, and then hook the latches.

- (A) Tailgate
(B) Latch

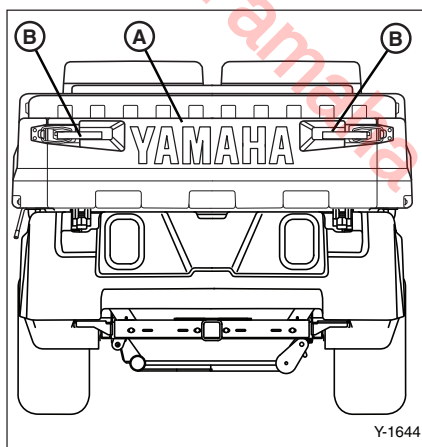

CONTROLS

5

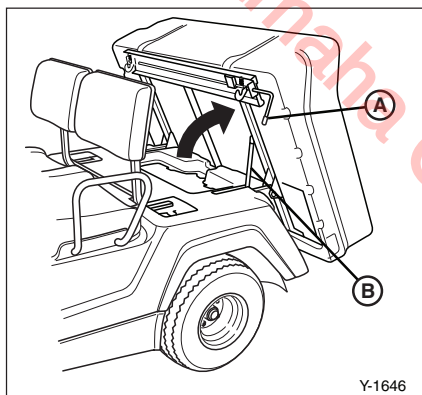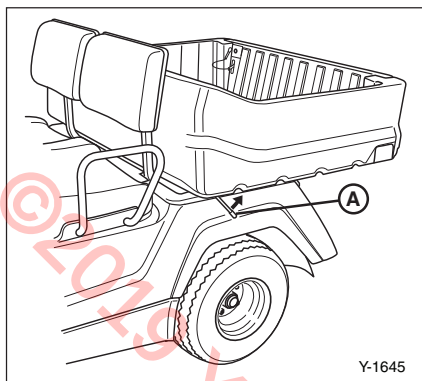

RAISING AND LOWERING THE CARGO BED

To raise, pull the cargo bed release lever toward the rear to unlatch the latches. The gas spring assists in raising and holding the cargo bed open.

TIP

The gas spring will only open/hold the cargo bed when it is empty.

To lower, push down on the box to lower it in the original position. Make sure the latches for the cargo bed are securely latched.

- (A) Cargo bed release lever
- (B) Gas spring

Maximum load limit:
136 kg (300 lb)

⚠ WARNING

Uncontrolled Movement Hazard

- Never exceed the stated load capacity for this vehicle.
- Distribute the load evenly.
- Secure cargo in cargo bed.
- Never tow cargo that is not secured.
- Reduce speed and allow greater distances for braking.

Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

⚠ WARNING

Fall and Thrown Object Hazard

- Do not carry passengers in the cargo bed.

Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

CONTROLS

⚠ WARNING

Crush Hazard

- Keep hands and fingers away from cargo bed and seat tracks.
- Have others back away from vehicle before closing cargo bed.
- Do not allow passengers to sit on the seat when closing cargo bed.

Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

⚠ WARNING

Fire or Explosion Hazard


- Do not fill fuel containers in the plastic cargo bed.
- Set fuel container on the ground.
- Keep fuel nozzle in contact with can inlet while filling.
- Tighten cap before setting fuel container in cargo bed.

Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

TRAILER HITCH RECEIVER BRACKET

This vehicle is equipped with a 5 cm (2 in.) receiver bracket for a standard trailer hitch. Trailer towing equipment can be obtained at a Yamaha dealer.

- Ⓐ Trailer hitch receiver bracket

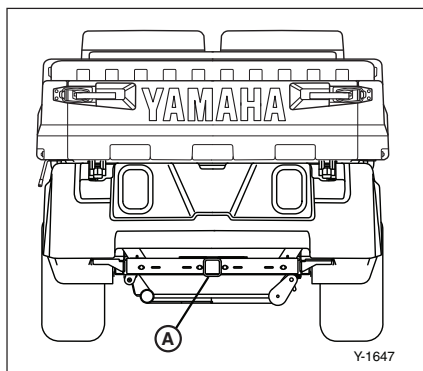

PRE-OPERATION CHECKS

Pre-operation checks should be made each time you use your utility vehicle. Get in the habit of performing the following checks in the same way so that they become second nature.

⚠ WARNING

To keep vehicle from moving while performing pre-operation checks:

- Remove main switch key.
- Apply parking brake.


Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

PRE-OPERATION CHECKS


Refer to the Periodic Maintenance charts on pages 8-1 and 8-2.

SEAT

Open the seat for checking and servicing.

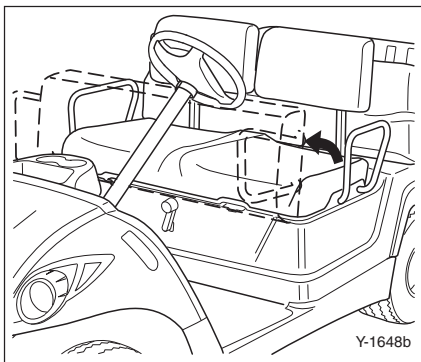

PRE-OPERATION CHECKS

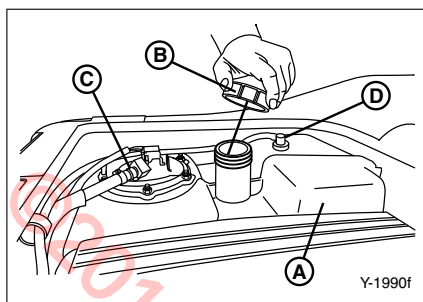

FUEL SYSTEM

Make sure there is sufficient fuel in the tank and that the fuel shutoff valve is open. Also check fuel line and connections for leakage.

- (A) Fuel tank
- (B) Fuel cap
- (C) E.F.I. fuel pump
- (D) Fuel tank vent

⚠ WARNING

Gasoline and its vapors are highly flammable and explosive. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

1. Stop engine and allow it to cool for several minutes before refueling.
Do not smoke when refueling and keep away from sparks, flames or other sources of ignition.
Refuel in a well-ventilated area.
2. Take care not to spill gasoline. If gasoline spills, wipe it up immediately with dry rags. Always dispose of gasoline-soaked rags properly.
3. Tighten the filler cap securely after refueling.

⚠ WARNING

Gasoline is poisonous and can cause injury or death. If you swallow gasoline, inhale a lot of gasoline vapor or get gasoline in your eyes, get immediate medical attention.

If any gasoline gets on your skin, immediately wash with soap and water. Change clothing if gasoline spills on it.




Recommended fuel:
Unleaded gasoline

Fuel tank capacity:
20.0 L (5.2 US gal)

Gasoline-based fuels containing more than 10% ethanol are not recommended and may void the warranty.

PRE-OPERATION CHECKS

6

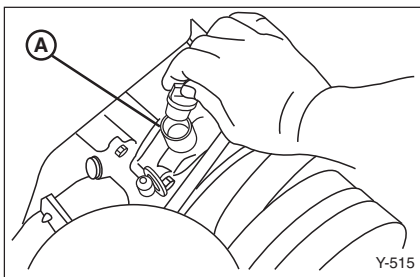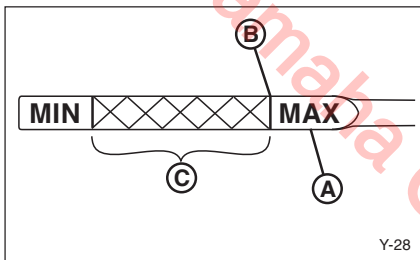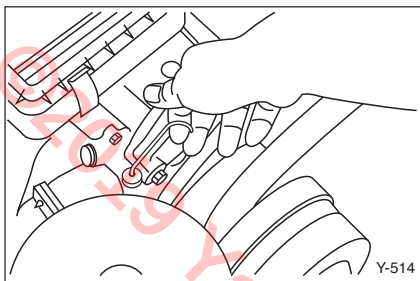

Recommended oil:
YAMALUBE 4-cycle oil or 10W/30

Engine oil capacity:
1.0 L, 1000 cc
(1.0 US qt)

Oil change quantity:
1.0 L, 1000 cc
(1.0 US qt)

NOTICE

Avoid using gasoline blended with methyl alcohol which can damage fuel system parts.

ENGINE OIL

With the utility vehicle parked on level ground, remove the dipstick and make sure the engine oil is between the MIN and MAX marks (the crosshatched area on the end of the dipstick).

- (A) Oil level dipstick
- (B) Maximum oil level
- (C) Safe operating range

If the oil level is **below** the MIN mark on the dipstick, add oil through the oil filler hole until the oil level is between the MIN and MAX marks.

- (A) Oil filler hole

NOTICE

Engine damage can result.

- Use care not to fill past the MAX dipstick mark, and be sure no foreign material enters the crankcase.
- Use care not to get oil on the starter belt.


TIP

The distance between the dipstick marks represents approx. 1/2 L (1/2 US qt) of oil.

TIP

Recommended engine oil classification: API Service SE, SF, or SG. Engine oils labeled "Energy Conserving II" are recommended.

PRE-OPERATION CHECKS

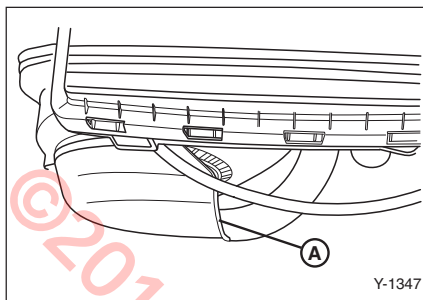

Engine Cooling Inlet Duct


Check the engine cooling inlet duct for debris. Remove any debris present.

- Ⓐ Engine cooling inlet duct

BATTERY

Check that the battery is held securely in place to prevent the battery from being damaged from vibration or jarring. Tighten the battery hold-down nuts if loose. Also check that the battery cap is not missing to prevent battery acid from spilling from the battery. Check the battery terminals for corrosion.

- ① Battery hold-down nuts

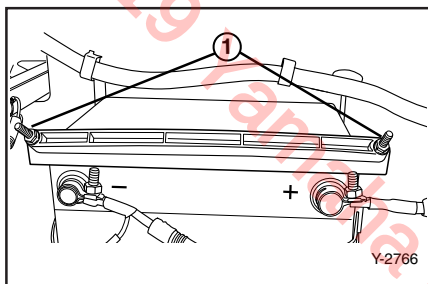

⚠ WARNING


Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes or clothing. Ventilate when charging or using in enclosed space. Always shield eyes when working near batteries. KEEP OUT OF REACH OF CHILDREN.

TIRE CONDITION


Tire Air Pressure

Check the tire air pressure before operating the utility vehicle.

Tire pressure:
138 kPa, 1.4 kgf/cm² (20 psi)

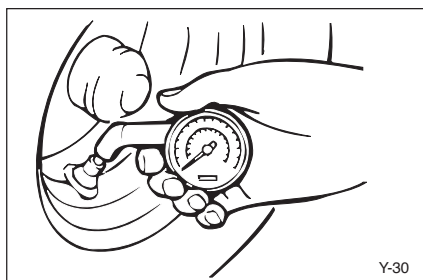

PRE-OPERATION CHECKS

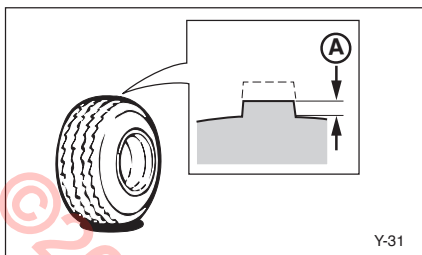

Tire Wear Limit

Check the tire surface for damage, cracks or embedded objects. When tire tread wears down to 1 mm (0.04 in.), replace the tire.


Ⓐ Wear limit

STEERING SYSTEM

Check the steering system for excessive free play by:

- moving the steering wheel up and down, and back and forth.
- turning the steering wheel slightly to the right and left.

If you feel excessive free play, or hear rattling sounds which may indicate loose steering components, consult a Yamaha dealer.

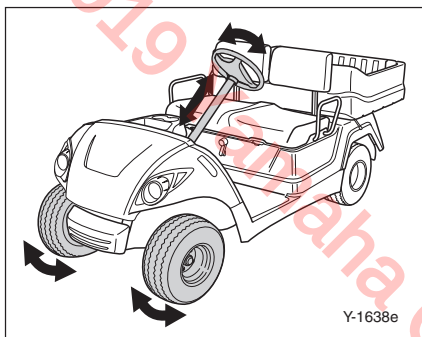


REVERSE ALARM


Check the reverse alarm by moving the drive select lever to "R" for reverse. The alarm should sound.

PEDAL OPERATION

Check the following pedal controls for proper operation. If a pedal does not work properly, consult a Yamaha dealer.

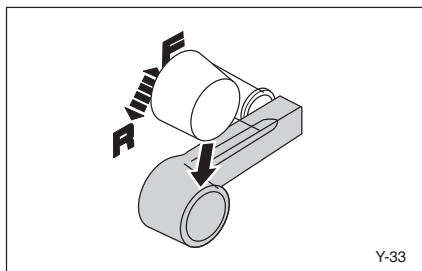

PRE-OPERATION CHECKS

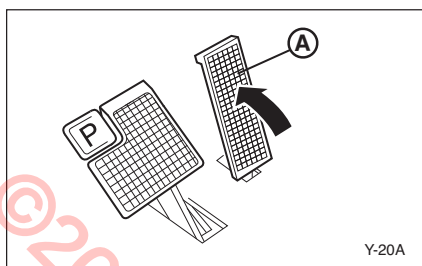


Accelerator Pedal

⚠ WARNING

With the main switch in the “OFF” position, make sure the accelerator pedal operates smoothly.


- Ⓐ Accelerator pedal

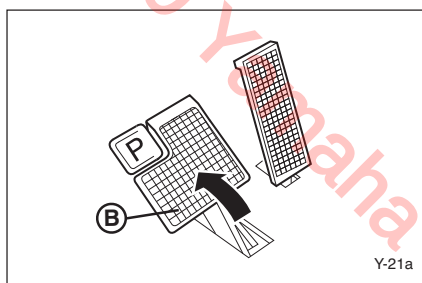

Brake Pedal

Make sure the brake pedal feels firm when pressed and returns to its original position when released.

- Ⓑ Brake pedal

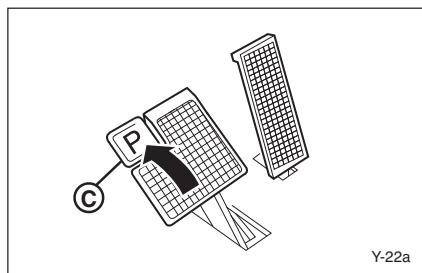

Parking Brake Pedal

Make sure the parking brake pedal locks in place with a positive click, and releases when the accelerator pedal is pressed.

- Ⓒ Parking brake pedal


TIP

Release the parking brake by depressing the accelerator pedal.

BODY AND CHASSIS

Before each use, visually inspect the utility vehicle body and chassis for damage and/or missing parts.

PRE-OPERATION CHECKS

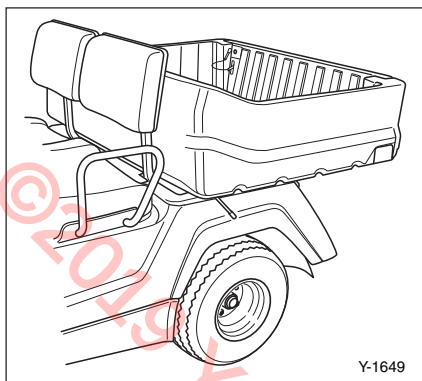

CARGO BED

Make sure cargo bed is lowered completely and is latched in the down position. Make sure both tailgate latches are latched.


Headlights/Taillights

Ensure the headlights and taillights are operational.

WARNING

Never operate the utility vehicle at night or during inclement weather without properly working headlights/taillights.


6

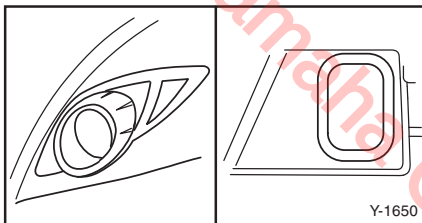


Horn Switch

Make sure the horn operates correctly.

Ⓐ Horn switch

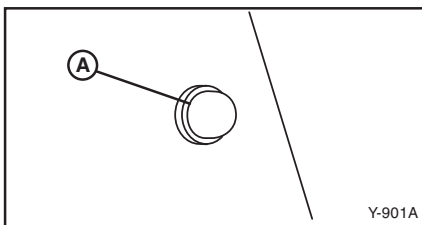

OPERATION

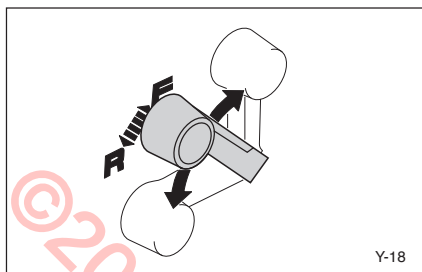


STARTING

1. With the parking brake applied, turn the drive select lever to "F" for forward, or "R" for reverse.

NOTICE


Do not shift from "F" forward to "R" reverse while the utility vehicle is moving. Transmission damage can result.

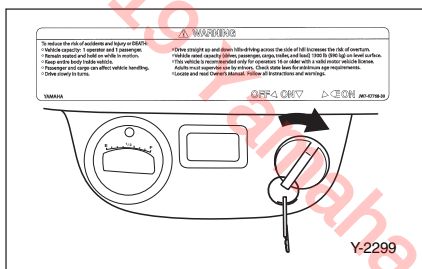

2. Turn the main switch to "ON."

WARNING

Do not depress the accelerator pedal when turning on the main switch or the vehicle may start moving unexpectedly.

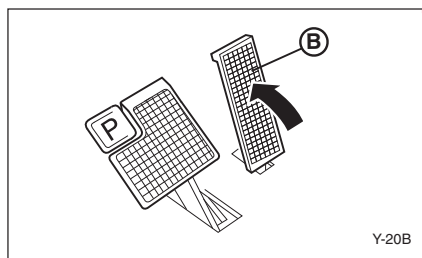


3. Check that your path is clear in the direction you plan to go, and slowly depress the accelerator pedal. The vehicle will start to move.

Ⓑ Accelerator pedal

TIP

The parking brake automatically releases when the accelerator pedal is depressed.

OPERATION

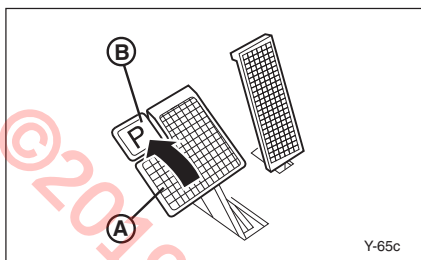

STOPPING

To stop the utility vehicle, gradually press down on the brake pedal.

(A) Brake pedal

When the vehicle has come to a stop, apply the parking brake pedal and turn the main switch to “OFF.”

(B) Parking brake pedal

NOTICE

Do not hold the utility vehicle on an incline with the accelerator – use the brake. Transmission damage can result.

LOADING

Cargo or a trailer can change the stability and handling of a vehicle.

You must use common sense and good judgment when carrying cargo or towing a trailer. Keep the following points in mind:

- Never exceed the weight limits shown. An overloaded vehicle can be unstable.

MAXIMUM LOADING LIMIT

- Vehicle Rated Capacity:
340 kg (750 lb)
- Maximum Cargo Bed Capacity:
136 kg (300 lb)
- Maximum Towing Capacity:
227 kg (500 lb)
- Maximum Tongue Weight:
68 kg (150 lb)
- Gross Vehicle Weight:
704 kg (1552 lb)

OPERATION

- Do not exceed the maximum tongue weight. You can measure tongue weight with a bathroom scale. Put the tongue of the loaded trailer on the scale with the tongue at hitch height. Adjust the load in the trailer, if necessary, to reduce the weight on hitch. If you are carrying cargo and towing a trailer, include the tongue weight in the maximum vehicle load limit.
- Load cargo in the cargo bed as close to the center of the vehicle as possible to avoid tipping the vehicle.
- Cargo should always be secured in the trailer. Make sure cargo in the trailer cannot move around. A shifting load can cause an accident.
- Make sure the load does not interfere with controls or your ability to see where you are going.
- Drive more slowly than you would without a load. The more weight you carry, the slower you should go.
- Allow more braking distance. A heavier vehicle takes longer to stop.
- Avoid making sharp turns unless at very slow speeds to avoid tipping or rolling the vehicle.
- Avoid hills and rough terrain. Choose terrain carefully. Added weight affects the stability and handling of the vehicle.

⚠ WARNING

Uncontrolled Movement Hazard

- **Never exceed the stated load capacity for this vehicle.**
- **Distribute the load evenly.**
- **Secure cargo in cargo bed.**
- **Never tow cargo that is not secured.**
- **Reduce speed and allow greater distances for braking.**

⚠ WARNING

Fall and Thrown Object Hazard

- **Do not carry passengers in the cargo bed.**

⚠ WARNING

Fire or Explosion Hazard

- **Do not fill fuel containers in the plastic cargo bed.**
- **Set fuel container on the ground.**
- **Keep fuel nozzle in contact with can inlet while filling.**
- **Tighten cap before setting fuel container in cargo bed.**

MAINTENANCE

PERIODIC MAINTENANCE CHARTS

Regular maintenance is required for the best performance and safe operation of your utility vehicle.

⚠ WARNING

Be sure to turn off the main switch and apply the parking brake when you perform maintenance, unless otherwise specified. If the owner is not familiar with servicing the machine, death or serious personal injury can result. When in doubt the work should be done by a Yamaha dealer or other qualified mechanic.

NOTICE

Yamaha Golf-Car Company does not approve the use of high-pressure washers to clean the products they manufacture. Doing so may damage the finish on the body or result in doing other damage not covered by warranty.

CS - CHECK CA - CHECK AND ADJUST R - REPLACE S - SERVICE CL - CLEAN AND LUBRICATE L - LUBRICATE

	Remarks	Daily Pre- Operation	40 Rounds 20 hours 100 miles 160 kms (Every month)	250 rds 125 hrs 600 mls 1000 kms (Every 6 months)	500 rds 250 hrs 1200 mls 2000 kms (Every year)	1000 rds 500 hrs 2500 mls 4000 kms (Every 2 years)	2000 rds 1000 hrs 5000 mls 8000 kms (Every 4 years)	Page
PRE-OP	Check engine oil	CS	CS	CS				6-3
	Check air cooling duct	CS	CS	CS	CS	CS	CS	*
	Check fuel lines for leakage	CS	CS	CS	CS	CS	CS	6-2
	Check fuel level	CS	CS	CS	CS	CS	CS	6-2
	Check for looseness and corrosion of battery terminals and hold downs	CS	CS	CS	CS	CS	CS	6-4
	Check brake pedal free play and adjust if necessary	CS	CA	CA	CA	CA	CA	8-12
	Check steering operation	CS	CS	CS	CS	CS		6-5
	Check tire pressure, tread depth, tire surface for damage	CS	CA	CA	CA	CA	CA	6-4/ 6-5
	Check body and chassis for damage	CS	CS	CS	CS	CS	CS	6-6
	Check tightness of all bolts, nuts, screws and rivets	CS	CS	CS	CS	CS	CS	*
EVERY MONTH	Check reverse alarm operation	CS	CS	CS	CS	CS	CS	6-5
	Check fuel filter for clogging		CS	CS	CS	CS	CS	*
	Check wear of drive belt		CS	CS	CS	CS	CS	8-7
	Check operation of Forward / Reverse shifting		CS	CS	CS	CS	CS	7-1
EVERY 6 MONTHS	Clean / Lube pedal control area		CL					*
	Wash pre-filter, check air cleaner element			S	S	S	S	8-6/ 8-7
	Check spark plug and plug cap condition** / Check compression			CS	CS	CS	CS	8-4
	Check shock absorbers for oil leaks and damaged springs			CS	CS	CS		*

* Items without a page number reference should be serviced by a Yamaha dealer or other qualified mechanic. This manual does not contain these procedures. They are contained in the Service Manual.

**Related to emission control system.

MAINTENANCE

CS - CHECK CA - CHECK AND ADJUST R - REPLACE S - SERVICE CL - CLEAN AND LUBRICATE L - LUBRICATE

	Remarks	Daily Pre- Operation	40 Rounds 20 hours 100 miles 160 kms (Every month)	250 rds 125 hrs 600 mls 1000 kms (Every 6 months)	500 rds 250 hrs 1200 mls 2000 kms (Every year)	1000 rds 500 hrs 2500 mls 4000 kms (Every 2 years)	2000 rds 1000 hrs 5000mls 8000 kms (Every 4 years)	Page
EVERY YEAR	Replace engine oil				R	R	R	8-5
	Adjust throttle cables,** choke cable, check carburetor throttle shaft for wear**				CA	CA	CA	*
	Check starter V-belt for damage and tension				CS	CS	CS	*
	Check drive belt for slippage, wear or scratches				CS	CS	CS	8-7
	Check operation of speed limiter				CS	CS	CS	*
	Apply battery terminal protectant				S	S	S	*
	Check wiring connections and insulation				CS	CS	CS	*
	Check rear axle bearing play for roughness or freewheel				CS	CS	CS	*
	Perform primary and secondary clutch maintenance: (primary) - Inspect sheaves for wear and damage - Inspect weights/washer and sliders for wear (secondary) - Inspect ramp shoes for wear - Replace if necessary				CL	CL	CL	*
	Check steering knuckle bushing free play / Adjust wheel alignment				CA	CA	CA	*
	Check wheel nut tightness, front wheel bearing play				CS	CS	CS	*
	Check transaxle oil level and inspect for leakage				CS	CS	CS	8-10
	Check operation and adjust pedal stop if necessary				CA	CA	CA	*
	Adjust parking brake release				CA	CA	CA	8-13
EVERY 2 YEARS	Check starter brushes for wear and commutator for dirt					CS	S	*
EVERY 4 YEARS	Replace transaxle oil						R	*
	Replace fuel hoses						R	*
	Check tightness of cylinder head / Adjust valves						CA	*
	Inspect brake shoes and adjust or replace if necessary						CS R	*

* Items without a page number reference should be serviced by a Yamaha dealer or other qualified mechanic. This manual does not contain these procedures. They are contained in the Service Manual.

MAINTENANCE

EXHAUST EMISSION CONTROL SYSTEM AND COMPONENTS

Item	Abbreviation
• ELECTRONIC FUEL INJECTION	EFI
• ELECTRONIC CONTROL UNIT & PLUG, SPARK	ECU
• CRANKCASE 1 & HEAD, CYLINDER 1	PCV (Positive Crankcase Ventilation)
• AIR FILTER ASSY.	ACL (Air Cleaner)
• MUFFLER	MUFF., 2
• CARBON CANISTER	CC
• INVERSION VALVE	IV

The above items and the corresponding abbreviations are provided in accordance with U.S. EPA REGULATIONS FOR SMALL NONROAD ENGINES and the CALIFORNIA REGULATIONS FOR NEW 1995 AND LATER OFF-HIGHWAY RECREATIONAL VEHICLES AND ENGINES.

The abbreviations conform to the latest version of the SAE's recommended practice document J1930, "Diagnostic Acronyms, Terms, and Definitions For Electrical/Electronic System."

It is recommended that these items be serviced by a Yamaha dealer or other qualified mechanic.

TROUBLESHOOTING

If the vehicle's engine will not start, use the following chart:

Cause	Remedy
Fuel System	
No fuel in tank	Fill fuel tank
Fuel pump inoperable	Consult Yamaha dealer
Clogged fuel line	Consult Yamaha dealer
Foreign matter in fuel filter	Consult Yamaha dealer
Dirty injector	Consult Yamaha dealer
Electrical System	
Spark plug dirty with carbon, or wet	Clean carbon or wipe spark plug dry
Faulty ignition system	Consult Yamaha dealer


MAINTENANCE

Spark Plug Inspection

You should periodically remove and inspect the spark plug. Dirty or worn spark plugs can cause poor performance.

⚠ WARNING

When removing or installing the spark plug, be careful not to damage the insulator. A damaged insulator could allow external sparks, which could lead to explosion or fire. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

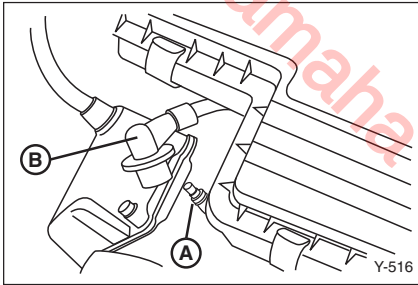

- (A) Spark plug
- (B) Spark plug cap


1. Check for discoloration and remove carbon deposits with a spark plug cleaner or wire brush. The normal electrode color will be tan.
2. Check the spark plug type, and check the spark plug gap with a feeler gauge.

Standard spark plug:
BPR2ES/BPR4ES

Spark plug gap:
0.7 ~ 0.8 mm (0.028 ~ 0.031 in.)

- (A) Gap
3. Clean the gasket and plug surfaces and install the spark plug finger-tight before tightening to the following torque:

Spark plug torque:
20 Nm, 2.0 m·kg
(14.5 ft·lb)

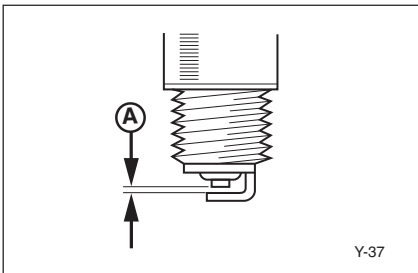

MAINTENANCE

Engine Oil Replacement

1. Warm up the engine for several minutes, place the utility vehicle on a level surface, then stop the engine.

WARNING

Use caution not to touch hot engine oil or hot engine parts, during the following procedure. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

2. Place an oil pan under the engine drain plug.
3. Remove the oil drain plug and let the oil drain completely.

TIP

Dispose of used oil in an environmentally safe way, such as taking oil to an oil collection station.


4. Install the drain plug, along with a new drain plug gasket, finger-tight before tightening to the following torque:

Drain plug torque:
31 Nm, 3.1 m·kg
(23 ft·lb)

5. Add the correct quantity of oil through the oil filler hole.

TIP

Recommended engine oil classification: API Service SE, SF, or SG. Engine oils labeled “Energy Conserving II” are recommended.

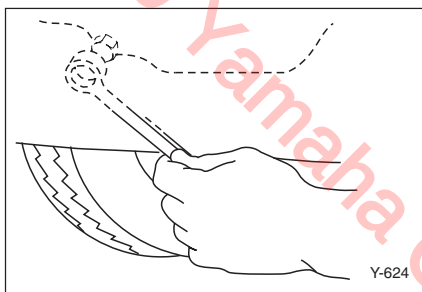


Recommended oil:
YAMALUBE SAE 10W30
4-cycle oil

Engine oil capacity:
1.0 L, 1000 cc
(1.0 US qt)

Oil change quantity:
1.0 L, 1000 cc
(1.0 US qt)

MAINTENANCE

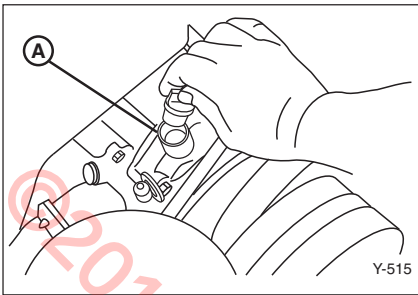


(A) Oil filler hole

NOTICE

Use care not to fill past the MAX dipstick mark, and be sure no foreign material enters the crankcase. Serious engine damage can result.

After replacing engine oil, check for oil leaks around the drain plug. If oil leaks are found, consult a Yamaha dealer.

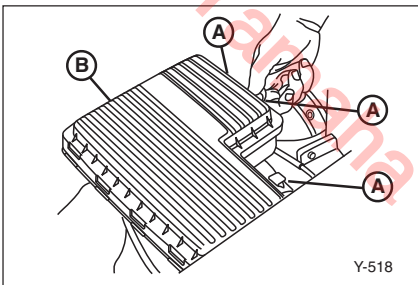

Air Filter


To remove the air filter elements:

1. Unlatch the air filter cover clips and remove cover.

(A) Air filter cover clips
(B) Air filter cover

2. Lift the air filter and pre-filter out of the air filter case.

(C) Air filter
(D) Pre-filter

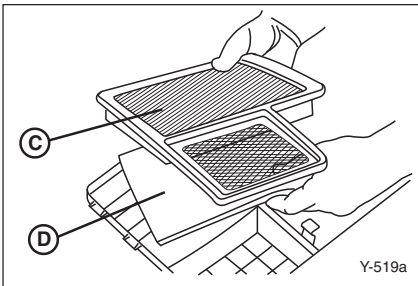

NOTICE


Be careful not to drop anything into the air inlet. Serious engine damage can result.

Inspection and cleaning:

3. Wash the foam pre-filter in soap and water. Allow it to dry.

(A) Soap and water
(B) Foam element

4. Check the filter element. If damaged or dirty, replace it.

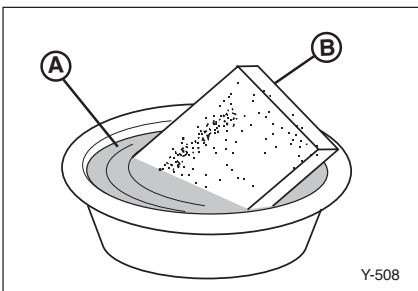

MAINTENANCE

NOTICE

Do not wring out the foam pre-filter, this could cause it to tear.

5. To replace the elements, reverse the above steps.

NOTICE

The pre-filter has a notch on one side. It will only fit in the case one way. Serious engine damage can result from an improperly positioned filter.

Drive Belt

To remove the drive belt:



1. Set the drive select lever halfway between forward and reverse.
2. Pull up on the drive belt and push it outward over the edge of the secondary sheave.
3. Turn the secondary sheave clockwise and the drive belt will roll off the sheave.
4. Remove the drive belt from the primary sheave.

Inspection:

To inspect the drive belt, check for frayed edges or tears, and measure drive belt against the following specification. If the belt shows excessive wear or damage, replace the belt with a new one.

- (A) New: 31.0 mm (1.20 in.)
- (B) Replace when belt reaches: 27.0 mm (1.06 in.)
5. To install the drive belt, reverse the above steps, rolling the belt back over the secondary sheave.

8

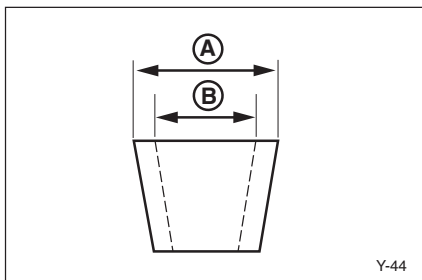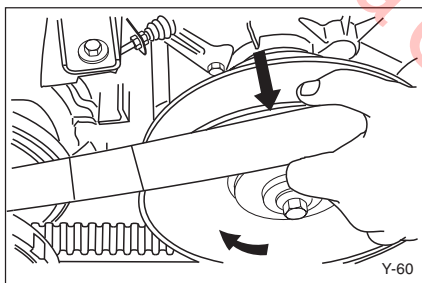


MAINTENANCE

Clutch

Maintenance is required each year for proper drive operation. Refer to the Periodic Maintenance chart in this owner's manual.

Battery

The 12-volt battery that provides starting power to your gas vehicle normally does not require the addition of water. If the battery loses its charge, have an experienced mechanic charge it.

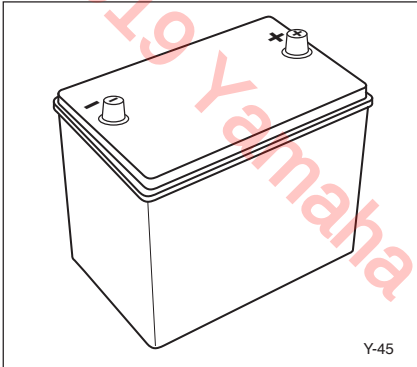

⚠ WARNING

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes, or clothing.

Antidote:

EXTERNAL: Flush with water.

INTERNAL: Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg, or vegetable oil. Call physician immediately.

EYES: Flush with water for 15 minutes and get prompt medical attention.

Batteries produce explosive gases. Keep sparks, flame, cigarettes, etc., away.

Ventilate when charging or using in enclosed space. Always shield eyes when working near batteries.

KEEP OUT OF REACH OF CHILDREN.

MAINTENANCE

Fuse Replacement

⚠ WARNING



Be sure to use the specified fuse. Using a wrong fuse can cause electrical system damage and create a fire hazard. Death or serious personal injury can result from failing to comply with the warning labels in this manual.

NOTICE

When replacing a fuse, be sure the main switch is turned off to prevent accidental short-circuiting, which could cause electrical system damage.

1. Locate the in-line fuse holder on the main wire harness adjacent to the battery.
2. Pull fuse holder cover off.
3. Pull fuse out, inspect and replace if necessary.

Ⓐ Fuse holder

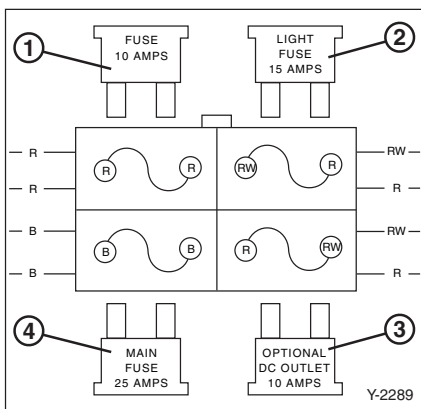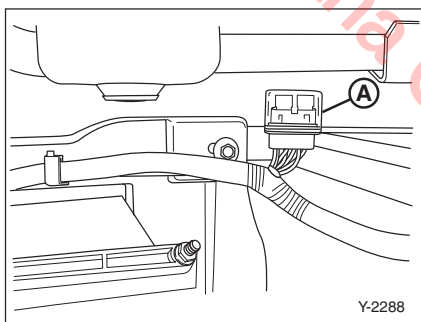


- ① Fuse: 10 Amps
- ② Light Fuse: 15 Amps
- ③ Optional DC Outlet: 10 Amps
- ④ Main Fuse: 25 Amps

MAINTENANCE

Transaxle Oil


To check transaxle oil level:

1. Place the utility vehicle on a flat, level surface.
2. Raise the cargo bed.
3. Place an oil pan under the transaxle case.
4. Clean the area around the oil level plug ① and then remove the plug.

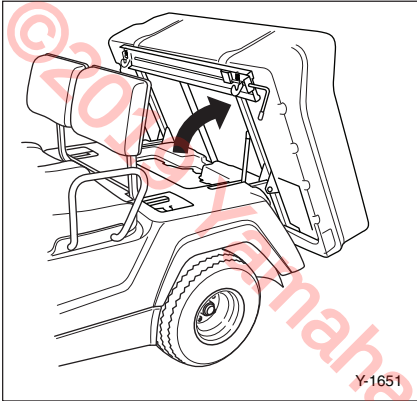

NOTICE

Do not allow foreign material to enter transaxle. Serious transaxle damage can result.

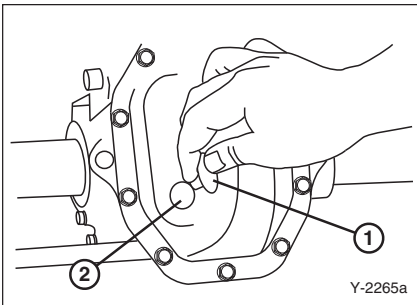


5. The oil level should be right at the bottom of the oil level plug hole ② or just starting to flow out of the hole.
6. If needed, add Yamalube SAE 90 gear oil until it starts to flow from the oil level plug hole.
7. Allow excess gear oil to flow out of the hole until it stops.
8. Install the oil level plug.
9. Lower the cargo bed.

TIP

For transaxle oil replacement, consult a Yamaha dealer or other qualified mechanic.

MAINTENANCE

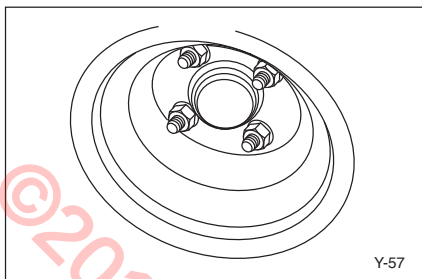

Wheel nut tightening torque:
88 Nm, 8.8 m·kg (65 ft·lb)

8

NOTICE

Before performing wheel or brake maintenance, verify that the main switch is in the “OFF” position. Accidental starting of the vehicle could cause the vehicle to move, causing death or serious personal injury.

Wheel Replacement

To remove and install a wheel on your utility vehicle:

1. With the wheels blocked to prevent the utility vehicle from moving, loosen the wheel nuts.
2. Elevate the utility vehicle with a jack and remove the wheel nuts and the wheel.
3. Reverse the removal steps when installing the wheel.

Brake Adjustment


The brakes on your utility vehicle are self-adjusting.

Before you operate the vehicle, press down on the brake pedal several times to make sure the brakes are functioning properly.

⚠ WARNING

Consult your Yamaha dealer before using your utility vehicle if you suspect brake problems.


MAINTENANCE

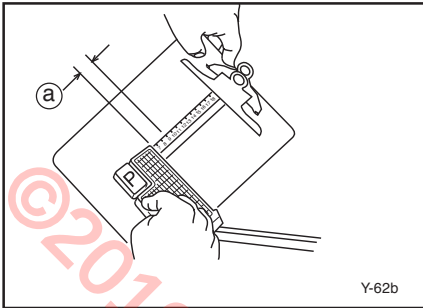

Brake Pedal Free Play Adjustment


Check the brake pedal free play by pressing against the pedal with two fingers (using light force) and measuring the distance the pedal travels before resistance is felt.

Brake pedal free play (a):
20-25 mm (0.79-0.98 in.)

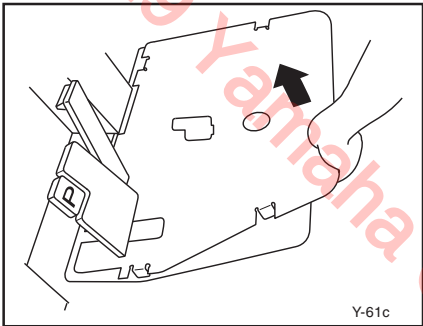

To adjust the brake pedal free play:


1. Remove the floor mat and service lid from the floor of the utility vehicle.
2. If the free play distance needs adjusting, loosen the lock nut (A) and turn the adjusting nut (B) in or out until the free play specification is met. Then tighten the lock nut in place.

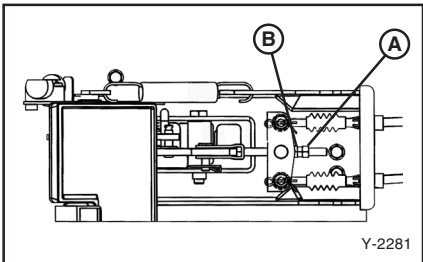

⚠ WARNING

Do not over-tighten the brake cables. Over-tightening will increase brake wear and affect the overall performance of the vehicle. Premature brake wear can result. Death or serious personal injury can result from failing to comply with the warning labels in this manual.

MAINTENANCE

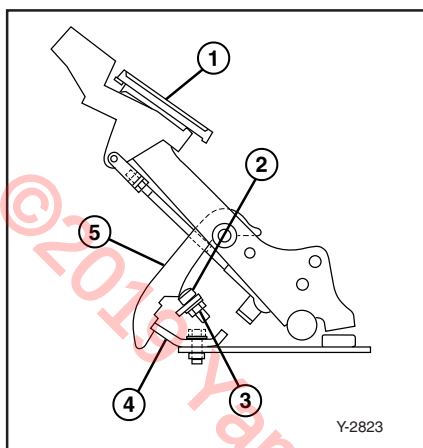

Parking Brake Release Adjustment

NOTICE

Before performing parking brake release adjustment, adjust brake pedal free play.



1. Apply pressure to the parking brake pedal until the brake nail catches the first latch position on the sector.
2. Loosen the locknut and turn the bolt counterclockwise until it contacts the sector.
3. Turn the bolt clockwise $\frac{3}{8}$ (120 degrees), then tighten locknut.

- ① Parking brake pedal
- ② Bolt
- ③ Locknut
- ④ Brake nail
- ⑤ Sector

MAINTENANCE

Replacing a Headlight Bulb

If the headlight burns out replace it as follows:

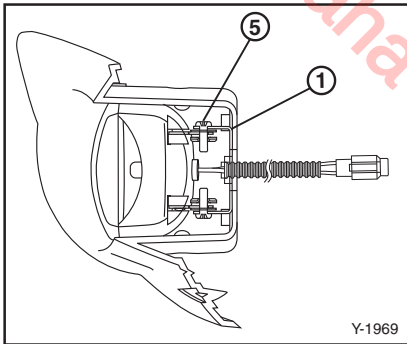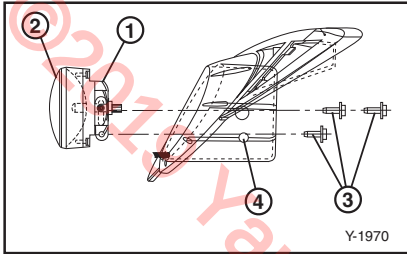

1. Remove the bulb holder ① and bulb ② by removing the three screws ③ located on the back of the bezel ④.
2. Disconnect the wire connectors from the bulb.
3. Remove the two screws ⑤ located on the side of the bulb holder ① to gain access to the headlight bulb ②.
4. Insert a new bulb ② into the bulb holder ① and secure with the two bulb holder screws ⑤. Torque to 3 ~ 4.5 Nm, 0.3 ~ 0.45 m•kg (27 ~ 40 in•lb).
5. Reattach the bulb holder ① to the bezel ④ and torque to 3 ~ 4.5 Nm, 0.3 ~ 0.45 m•kg (27 ~ 40 in•lb).

MAINTENANCE

Adjusting a Headlight

NOTICE


It is recommended to have the headlight adjustment performed by a Yamaha dealer.

1. Loosen the two screws ① for the headlight bulb bracket. Do not remove the screws, just loosen them.


TIP

The screws can be accessed from under the fender through the access holes on the sides of the headlight bezel.

2. Using a Phillips head screwdriver, turn the adjusting screw ②. Turning the screw clockwise will lower the beam and turning the screw counterclockwise will raise the beam.
3. Once the correct adjustment has been made, tighten the screws ① to 3 ~ 4.5 Nm, 0.3 ~ 0.45 m·kg (27 ~ 40 in·lb).

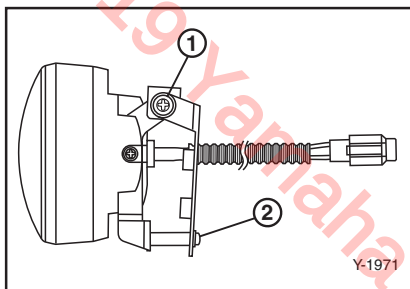

8

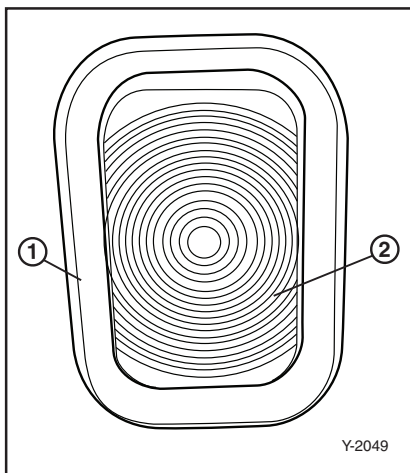

Replacing a Taillight Bulb

1. Disconnect the wire connector from the taillight.
2. Pull the rubber seal ① away from the body while pushing on the back of the taillight ②.
3. Remove the seal ① and the taillight ②.
4. Install the rubber seal into the body first.
5. Carefully push the new taillight into the seal. Make sure the seal stays seated in the rear body and the taillight is seated properly in the groove in the rubber seal.
6. Connect the wire connector.

STORAGE

Fill the fuel tank with fresh fuel and add the specified amount of Yamaha Fuel Stabilizer and Conditioner or equivalent product. Operate the vehicle for at least five minutes to distribute treated fuel through the fuel system.

Specified amount:

7.5 cc of stabilizer for each liter of fuel (1 oz. of stabilizer for each gallon of fuel)

TIP

Use of fuel stabilizer and conditioner eliminates the need to drain the fuel system. Consult a Yamaha dealer if the fuel system needs to be drained instead.

Perform the following preparations when storing your utility vehicle for extended periods of time:

NOTICE

Yamaha Golf-Car Company does not approve the use of high-pressure washers to clean the products they manufacture. Doing so may damage the finish on the body or result in doing other damage not covered by warranty.

TIP

Turn main switch key to "OFF" position, remove key, and store key in a safe place.

DRAINING FUEL

⚠ WARNING

Gasoline and its vapors are highly flammable and explosive. To avoid fire or explosions and reduce the risk of injury, follow these instructions.

- Do not smoke when draining fuel and keep away from sparks, flames, or other sources of ignition.
- Stop engine and allow it to cool for several minutes before draining fuel.
- Drain fuel in a well-ventilated area.
- Take care not to spill gasoline. If gasoline spills, wipe it up immediately with dry rags. Always dispose of gasoline-soaked rags properly.
- Tighten the filler cap securely after checking fuel level to avoid leaking.
- If you inhale a lot of gasoline vapor, or get gasoline in your eyes, get immediate medical attention.
- If any gasoline gets on your skin, immediately wash with soap and water. Change clothing if gasoline spills on it.

ENGINE PREPARATION

With the key removed and the spark plug lead disconnected, turn the clutch by hand until compression is felt. This puts the valves in the closed position.

STORAGE

CHASSIS PREPARATION

1. Verify the tire pressure is set to 138 kPa, 1.4 kgf/cm² (20 psi).
2. Clean exterior of the utility vehicle and apply a rust inhibitor.
3. Cover the utility vehicle with a breathable cover and store it in a dry, well-ventilated area.

BATTERY PREPARATION

1. Remove the battery from the utility vehicle and store it in a cool, dry place that stays between 0°C (32°F) and 30°C (90°F).
2. Have the battery recharged every 60-90 days to keep it fully charged. The battery must be kept fully charged to avoid damage.

3. Batteries like the one supplied with your vehicle normally do not require you to check the water level inside the battery for the one-year warranty period provided by the manufacturer.

NOTICE

Do not allow cleaning solution to enter battery cells. Serious battery damage can result.

4. Clean the top of the battery with a solution of baking soda and water, as necessary, to remove corrosion.

SPECIFICATIONS

GENERAL SPECIFICATIONS

Items	YTF1AX7F EFI UTILITY VEHICLE
Dimensions: Overall length Overall width Overall height (steering height) Height of floor Wheelbase Tread: Front Rear Cargo bed size: Overall length Overall width Overall height Minimum ground clearance	2660 mm (104.7 in.) 1243 mm (48.9 in.) 1190 mm (46.9 in.) 295 mm (11.6 in.) 1637 mm (64.4 in.) 883 mm (34.8 in.) 980 mm (38.6 in.) 949 mm (37.4 in.) 1243 mm (48.9 in.) 357 mm (14.1 in.) 123 mm (4.8 in.)
Weight: Dry weight (without battery)	343 kg (757 lb)
Performance: Factory speed setting Maximum speed Minimum turning radius Seating capacity Vehicle rated capacity Cargo bed capacity Towing capacity Tongue weight Gross vehicle weight	24 km/h (15 mph) 24 km/h (15 mph) 2.8 m (9.2 ft) Two occupants per seat 340 kg (750 lb) 136 kg (300 lb) 227 kg (500 lb) 68 kg (150 lb) 704 kg (1552 lb)
Fuel tank capacity	20.0 L (5.2 US gal)

SPECIFICATIONS

ENGINE

Items	YTF1AX7F EFI UTILITY VEHICLE
Description:	
Engine type	4-stroke, Gasoline, 60° incline OHV
Number of cylinders	Single
Displacement	357 cm³
Bore x stroke	85 x 63 mm (3.30 x 2.48 in.)
Compression ratio	8.1:1
Rated output	8.5 kw/3500 rpm/11.4 hp
Cooling system	Forced air-cooled
Starting system	Starter/Generator
Ignition system	Transistor
Spark plug type	BPR2ES/BPR4ES
Spark plug gap	0.7-0.8 mm (0.028-0.031 in.)
Lubrication system	Splash-style positive oil lubrication
Engine oil type	YAMALUBE SAE 10W30 4-cycle oil
Engine oil capacity	1.0 L, 1000 cc (1.0 US qt)
Oil change quantity	1.0 L, 1000 cc (1.0 US qt)

TRANSMISSION

Items	YTF1AX7F EFI UTILITY VEHICLE
Transmission:	
Type	V-belt automatic centrifugal engagement
V-belt width and outer line length	31.0 x 1010 mm (1.20 x 39.76 in.)
V-belt wear limit	27.0 mm (1.06 in.)
Governor:	
Type	Oil bath flyweight
Factory speed setting	19 km/h (12 mph)
Differential/reduction gear	Secondary reduction system helical gear Secondary reduction ratio: Forward 11.34:1; Reverse 15.25:1 Differential type bevel gear Lubricant/capacity YAMALUBE SAE 90 gear oil/355 cc (355 mL, 0.38 US qt)

SPECIFICATIONS

BATTERIES


Items	YTF1AX7F EFI UTILITY VEHICLE
Battery	BCI group 24, RC: minimum 75 min CCA: minimum 400A

CHASSIS

Items	YTF1AX7F EFI UTILITY VEHICLE
Steering system: Type Steering angle (L.H.) Steering angle (R.H.)	Rack and Pinion 1.85 turn 1.85 turn
Brakes: Brake system Type of brake Brake pedal freeplay linkage adjustment (Brake cable end play)	Mechanical drum brake on each rear wheel with self-adjusters Dual internal expanding shoe Leading/trailing shoes (self-adjusting) 20-25 mm (0.79-0.98 in.) 0.004-0.02 in. (0.1-0.5 mm)
Parking brake: Type	Foot type; parking brake with automatic release.
Wheel: Tire size: Front Rear Rim size: Tire pressure:	18 x 8.50-8.00/4 PR 18 x 8.50-8.00/4 PR 7.00-1-8.00 138 kPa, 1.4 kgf/cm ² (20 psi)
Lights: Bulb voltage, wattage x quantity: Headlight Taillight	12 V, 35 W x 2 12 V / 2.1 amp and 0.48 amp x 2
Body color	Tortuga

WIRING

YTF1AX7F EFI WIRING DIAGRAM

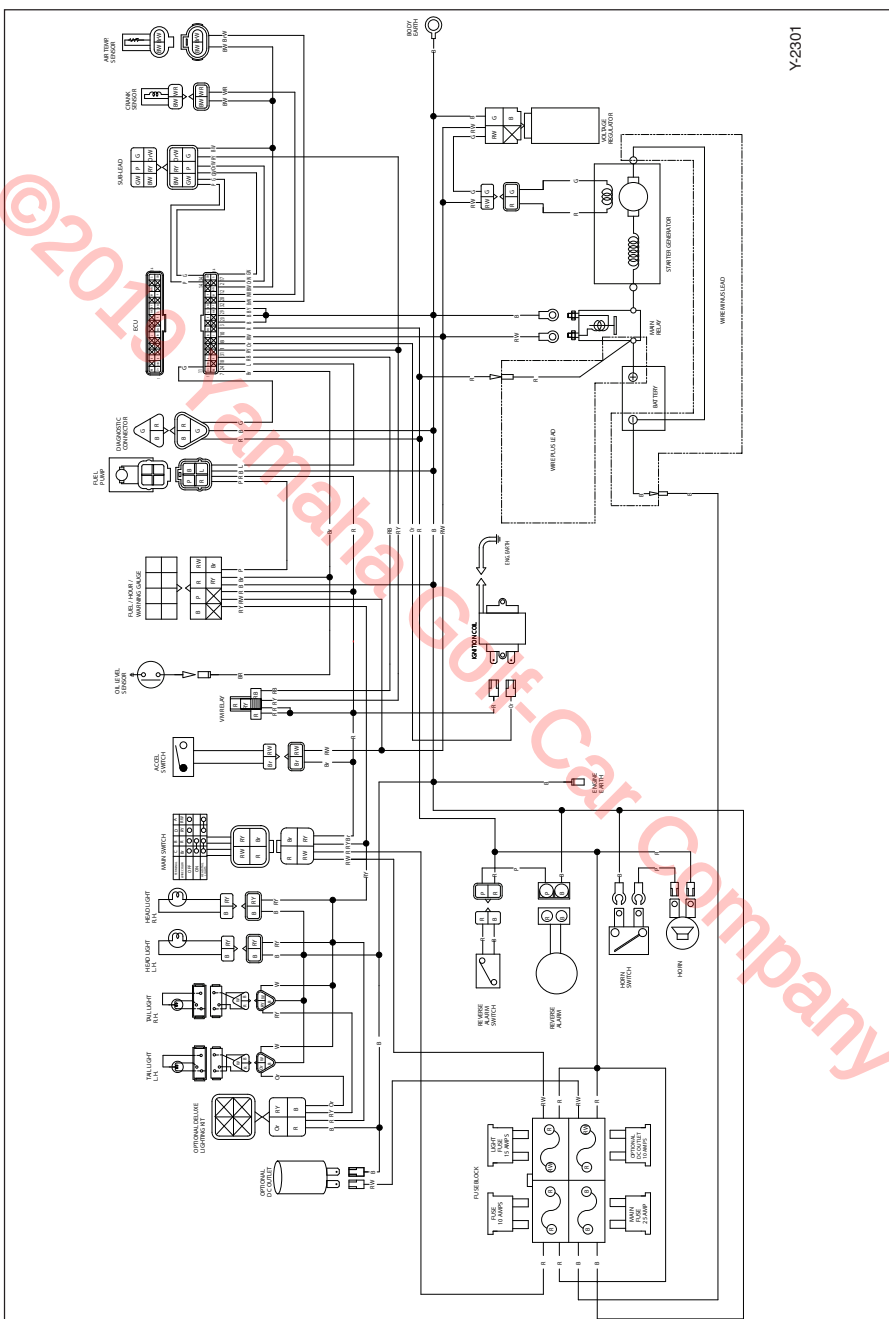

Y-2301

©2019 Yamaha Golf-Car Company

©2019 Yamaha Golf-Car Company



Printed in U.S.A
2017-KCC



Yamaha Motor Corporation USA
800-879-0078