



MODEL YEAR **2019**

OWNER'S / OPERATOR'S MANUAL



GOLF CAR

⚠ Read this manual carefully before operating this vehicle.

DRIVE² **AC**
POWER TECH

DR2E AC

©2019 Yamaha Golf-Car Company

INTRODUCTION

Congratulations on your purchase of a Yamaha golf car. This manual contains information you will need for proper operation, maintenance, and care of your golf car. A thorough understanding of these simple instructions will help you to obtain maximum enjoyment from your new Yamaha.

If you have any questions about the operation or maintenance of your golf car, please consult a Yamaha dealer.

Yamaha Golf-Car Company

DR2E AC OWNER'S/OPERATOR'S MANUAL

**© 2019 by Yamaha Golf-Car Company
1st Edition**

**All rights reserved. Any reprinting
or unauthorized use without the
written permission of
Yamaha Golf-Car Company
is expressly prohibited.**

**Printed in U.S.A.
LIT-19626-A0-09**

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following notations:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

A **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

A **NOTICE** indicates special precautions that must be taken to avoid damage to the vehicle or other property.

TIP

A **TIP** provides key information to make procedures easier or clearer.

TIP

Yamaha continually seeks advancements in product design and quality; therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your golf car and this manual. If you have any questions concerning this manual, please consult your Yamaha dealer.

WARNING

Read and understand this manual completely before operating your golf car. This manual should be considered a permanent part of your golf car and should remain with the car when resold.

CONTENTS

WARRANTY

1

IMPORTANT LABELS

2

OPERATOR SAFETY

3

SAFETY CONSIDERATIONS

4

CONTROLS

5

PRE-OPERATION CHECKS

6

OPERATION

7

MAINTENANCE

8

STORAGE

9

SPECIFICATIONS

10

WIRING

11

WARRANTY

1

LIMITED 4-YEAR WARRANTY FOR DRIVE² GOLF CAR

Yamaha Golf-Car Company hereby warrants that any new Yamaha DRIVE² Gas or DRIVE² Electric golf car purchased from Yamaha, or an Authorized Dealer or Distributor in the United States will be free from defects in material and workmanship for FOUR years from date of purchase, subject to the stated limitations. DURING THE PERIOD OF WARRANTY, any authorized Yamaha golf car service technician, dealer, or distributor will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the vehicle's warranty period. All parts replaced under warranty become property of Yamaha Golf-Car Company.

Common Parts		Electric Car (DC or AC motor) Specific	
Frame	Limited Lifetime to Original Owner	Battery - Trojan® T875 "with HydroLink Watering System"	4 Years or 25,000 amp-hours whichever comes first *Detailed condition on the next page
Transaxle	4 Years	Electric Motor	4 Years
Pedals	3 Years	Motor Controller	4 Years
Brakes (excluding shoes / pads)	4 Years	Charger	4 Years
Electrical wires, switches, and relays	3 Years	Charger Cord	4 Years
Suspension / Steering components	4 Years	Charger Receptacle	4 Years
Seats	2 Years	Throttle Position Sensor	2 Years
Sun Top	4 Years	GAS Car (Quietech and Carb) specific	
Bumpers / Body Parts	3 Years	Exhaust / Intake / Generator	4 Years
Floor Mats	2 Years	Gas Engine	4 Years
Scorecard Holders	2 Years	Throttle Cables / Controls	3 Years
Bag Carrier	3 Years	Battery	1 Year
Common Accessories		Clutch (excluding drive belt)	4 Years
Windshield	3 Years	All Remaining Parts	1 Year
Sand Bottle / Cooler	3 Years		
Information Holder / Bag Cover	3 Years		

EXCLUSIONS from this Warranty shall include any failures caused by:

- Abnormal strain, neglect, or abuse, including lack of proper maintenance, and use contrary to the Owner's/Operator's Manual instructions.
- Accident or collision damage.
- Installation of parts or accessories that are not original equipment.
- Fading, rust, or deterioration due to exposure or ordinary wear and tear.
- Modifications or alterations that affect the car's condition, operation, performance, or durability.
- Damage due to improper transportation.
- Acts of God, e.g. lightning, hail damage, flooding, fire, etc.

This Limited Warranty does not cover any parts replaced due to normal wear or routine maintenance, including oil and air filter elements, brake shoes, tire wear, spark plugs, starter and clutch drive belts. Any charges incurred in transporting a golf car or charger to and from an authorized Yamaha golf car dealer for service or in performing field service are also excluded from this warranty. Gasoline-powered golf car starting batteries on vehicles equipped with a golf course GPS device, or any other device with a parasitic current draw, unless the vehicle is equipped from the factory with an optional deep cycle starting battery, are also excluded from this warranty.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to operate and maintain the golf car and charger as specified in the appropriate Owner's/Operator's Manual, and give notice to an authorized Yamaha golf car dealer of any and all apparent defects within ten (10) days after discovery, and make the vehicle or charger available at that time for inspection and repairs by the dealer's authorized representative.

WARRANTY TRANSFER: Any transfer of warranty must take place within the first three years of the original in-service date of the vehicle. The vehicle must be re-registered by an authorized Yamaha Golf-Car Dealer within 30 days of transfer. A fee may be charged for the transfer of the warranty.

Yamaha Golf-Car Company makes no other warranty of any kind, expressed or implied. All implied warranties of merchantability and fitness of merchantability and fitness for a particular purpose which exceed the obligations and time limits stated in this warranty are hereby disclaimed by Yamaha Golf-Car Company and excluded from this Warranty.

Some states do not allow limitations on how long implied warranty lasts, so the above limitation may not apply to you. Also excluded from this Warranty is any incidental or consequential damages including loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This Warranty give you specific legal rights, and you may also have other rights, which vary from state to state.

YAMAHA GOLF-CAR COMPANY, KENNESAW, GEORGIA 30144

EFFECTIVE DATE: 7/1/16

WARRANTY

1

YAMAHA FOUR-YEAR LIMITED WARRANTY FOR TROJAN BRAND ELECTRIC GOLF CAR AND UTILITY VEHICLE BATTERIES WHEN CHARGED WITH A YAMAHA SUPPLIED 48-VOLT CHARGER

Yamaha Golf-Car Company (herein referred to as "YGC") hereby warrants to the Original Retail Purchaser or Lessee of a YAMAHA The Drive golf car or PTV, Adventure utility vehicle, or YAMAHA Concierge transportation or specialty car purchased from Yamaha, or an Authorized Dealer or Distributor in the United States, that the Trojan batteries charged with a YAMAHA battery charger will be free from defects in materials and workmanship, and will provide "36-hole performance" as follows:

- 4-years or 23,500 amp-hours with T-875
- 4-years or 25,000 amp-hours with T-875 batteries & the addition of a factory-installed Trojan HydroLink Battery Watering System.

WARRANTY LIMITATIONS

Yamaha Golf-Car Company's and Trojan Battery Company's limit of liability shall be to replace a defective battery. Replacement shall mean furnishing a new battery or used battery with sufficient life to complete the remainder of the warranty term, at no cost to the purchaser during the limited warranty period, except for labor or transportation expenses.

The following conditions apply:

- Amp-hours will be determined either through the Genius controller or through other means as necessary in the event of a controller failure or replacement.
- This warranty only applies to factory installed Trojan battery sets charged with a Yamaha battery charger.
- The customer must perform (or have a contracted Yamaha Dealer perform) all periodic maintenance and discharge testing as specified in the Yamaha Service Manual Maintenance Schedule. No labor or transportation expenses are included in this limited warranty. Maintenance records must be kept.
- YGC supplied or approved replacement batteries may be of a different brand or capacity, but are warranted to provide 36-hole performance for the remainder of the original warranty term.
- "36-hole performance" is defined as 60-minutes discharge time as tested and recorded using a Lester model #17770 discharge machine at an ambient temperature of between 60 and 100 degrees F (16 and 38 degrees C). Ambient temperatures between 60 and 80 degrees F (16 and 27 degrees C) must be corrected using the formula: Adjusted Discharge Time = (Discharge Minutes) / $(1 - ((80 - \text{TEMP}) / 100) \times 0.64)$.
- The customer must notify the Dealer within 10 days that a vehicle has failed to make 36 holes per day. YGC reserves the right to test and recharge any battery in question.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE VOID AND EXCLUDED SUBSEQUENT TO ONE YEAR FROM THE DATE OF PURCHASE. THE REPLACEMENT OF THE BATTERY IS THE EXCLUSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY. YAMAHA MAKES NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND, AND NO REPRESENTATIVE, EMPLOYEE, DISTRIBUTOR OR DEALER OF YAMAHA HAS THE AUTHORITY TO MAKE OR IMPLY ANY REPRESENTATION, PROMISE OR AGREEMENT WHICH IN ANY WAY VARIES THE TERMS OF THIS LIMITED WARRANTY.

LIMITED WARRANTY EXCLUSIONS

Without limiting the generality of the foregoing in any way, and as part of its limited warranty exclusion, YAMAHA does not warrant that its battery is suitable for use in any application other than in a golf car or utility vehicle. As in the use of any battery, a prudent owner will read and study the charger owner's manual, the vehicle owner's manual, the operator's instructions, and the battery warning labels; and will exercise due care in working on or around batteries.

THE PROVISIONS OF THIS LIMITED WARRANTY SHALL NOT APPLY IF BATTERIES ARE SUBJECT TO ANY OF THE FOLLOWING CONDITIONS:

- Abuse or neglect such as improper fluid levels, loose wiring, rusted or corroded hardware.
- Lack of proper maintenance as outlined in the electric vehicle Owner's/Operator's Manual. For example, lack of regular battery watering or adding water to the battery before charging.
- Damage caused by improper installation of the battery.
- Neglect, breakage, freezing, fire, explosion, wreckage, the addition of any chemical, or the operation of the battery in an uncharged condition (below half-charge – 1.200 specific gravity).
- Battery charged by systems other than the original equipment type battery charger.
- On fleet golf cars, the use of any non-YAMAHA supplied electrical devices that consume more than one amp-hour per round or two amp-hours per day of battery energy. Examples of these devices include, but are not limited to: heating or cooling systems; GPS (global position system) devices; information gathering devices; lights; radios or stereos; or yardage measuring devices.
- Less than one charger per car or inadequate facility electrical power to power all chargers. Examples include more than one charger on a single circuit, circuit rating of less than 15 amps, or not enough circuits for the number of cars.
- In fleet applications, less than one battery charger per vehicle. For example, using only 10 battery chargers to charge a 15 car fleet.
- The use of any system that does not allow the battery chargers to shut off automatically. For example, timer systems that are designed to switch battery charger AC power on and off during peak demand hours.
- Damage not resulting from a defect in materials or workmanship or which occurs due to abuse or neglect (including failure to provide reasonable and necessary maintenance), accident, alteration or acts of God is excluded from this limited warranty.

THIS BATTERY IS INTENDED TO BE USED BY PERSONS WITH TRAINING AND EXPERIENCE WITH BATTERIES AND ONLY IN YAMAHA ELECTRIC VEHICLES. ANY OTHER USE RENDERS THE LIMITED WARRANTIES EXPRESSED HEREIN AND ALL IMPLIED WARRANTIES NULL AND VOID AND SAME ARE HEREBY EXCLUDED.

ALSO EXCLUDED FROM THIS LIMITED WARRANTY ARE ANY AND ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF USE OR REVENUE, LOSS OF TIME, INCONVENIENCE OR ANY OTHER ECONOMIC LOSS.

Some states do not allow limitation on the duration of an implied warranty, exclusions or limitations of incidental or consequential damages. Therefore, the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

For further information or to submit a warranty claim, contact your local Yamaha Golf-Car Dealer or Yamaha's customer relations.

1270 Chastain Road
Kennesaw, Georgia 30144
1-866-747-4027
EFFECTIVE DATE: 07/01/16

LIT-13710-EL-14


IMPORTANT LABELS

SAFETY AND INSTRUCTION LABELS

WARNING


2

Read the following labels carefully before operating your golf car, and promptly replace any labels which become damaged or removed. Death or serious personal injury can result from failing to read and comply with the safety instruction labels.

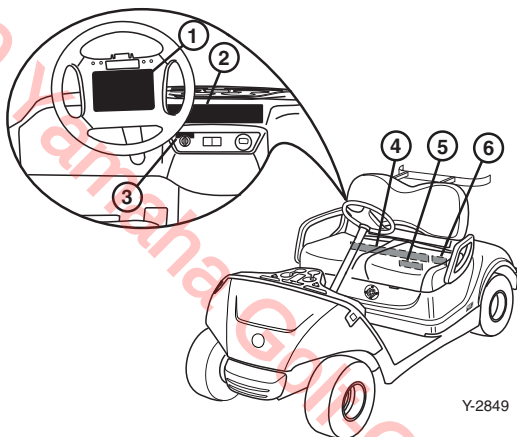

Y-2849

①

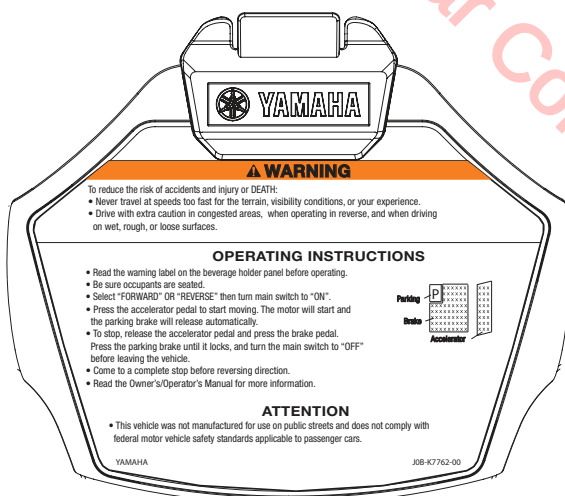

IMPORTANT LABELS

②

▲WARNING

To reduce the risk of accidents and injury or DEATH:

- Read the label located on the steering wheel before operation.
- Operate only when authorized and only in designated areas.
- Set parking brake before leaving vehicle.
- Turn main switch to "OFF" and remove key when not in use.
- Do not start vehicle until all occupants are seated.
- Remain fully seated and hold on when in motion.
- Keep entire body inside vehicle.
- Drive slowly in turns.

YAMAHA

J0B-K7768-00

③

④

▲WARNING

Explosive gases are released from the battery. Keep sparks, flames and open flames away from the battery. Keep well ventilated. Keep eyes when working near batteries.

▲ADVERTISSEMENT

Les gaz explosifs se dégagent de la batterie. Éloignez les étincelles, les flammes et les sources de chaleur de la charge ou de décharge. Garder bien ventilé. Garder des lunettes fermes et protéger les yeux lorsque vous travaillez près des batteries.

INSTALLATION DES BATTERIES ET RACCORDEMENT DES FILS

BATTERY INSTALLATION AND WIRE LEAD CONNECTION

▲WARNING

Subsulfuric acid in batteries can splash into eyes and skin. Do not tip batteries. Keep vent caps tight. In the event of injury, flush with water and call physician immediately.

▲ADVERTISSEMENT

Acide sulfurique des les batteries peut se verser et saupoudrer les yeux et la peau. Ne pas incliner les batteries. Garder les bouchons serrés et toujours à l'abri des chocs. En cas de contact avec l'acide, rincer abondamment à l'eau et appeler un médecin immédiatement.

▲WARNING

Electrical shorts can result in burns. Do not make connection between positive and negative battery terminals.

▲ADVERTISSEMENT

Les courts-circuits électriques peuvent causer des brûlures. Ne pas mettre la borne positive en contact avec la borne négative d'une même batterie.

J0B-K5297-21

2

2-2

IMPORTANT LABELS

2

⑤

NOTICE

Move switch to the "TOW" position before towing or storage. Failure to do so may lead to:

- Drive system damage when towing.
- Complete battery discharge and battery damage when storing long term.
- After moving switch from "RUN" to "TOW", wait 15 seconds minimum before switching again.

NOTIFICATION

Mettre l'interrupteur a position "TOW" avant de remorquer ou avant l'entreposage. Non-observation pourrait:

- Causer une decharge totale de la batterie et endommager la batterie pendant l'entreposage a long terme.
- Dommages de système d'entrainement en remorquant.
- Causer une decharge totale de la batterie et endommager la batterie pendant l'entreposage a long terme.
- Après avoir change l'interrupteur de position "RUN" a position "TOW", attendre un minimum de 15 seconds avant de le remettre.

YAMAHA

***-K8298-**

⑥

DATE OF CONSTRUCTION: *** ****

MY****

YAMAHA MOTOR POWERED PRODUCTS CO., LTD

200-1 SAKAGAWA, KAKEGAWA, JAPAN



MAX. BATTERY WEIGHT: *** kg

MODEL: *****

NOMINAL SYSTEM VOLTAGE: **V


MAX. POWER: *** hp (** kW)

WEIGHT: *** kg

VEHICLE LOAD CAPACITY: *** kg PER SEAT, ** kg BAGWELL

***-F4236-**

IMPORTANT LABELS

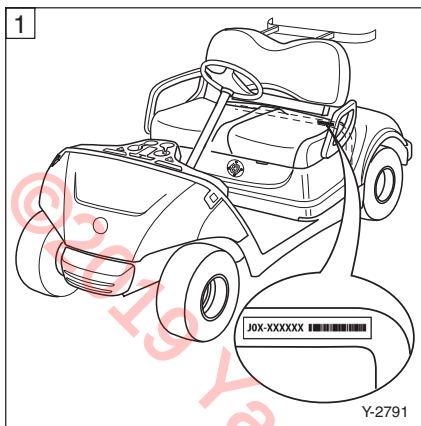

GOLF CAR SERIAL NUMBER

The golf car serial number ① is identified in the location shown.

TIP

The first three digits of the serial number are for model identification; the remaining digits are the unit production number. Keep a record of these numbers for reference when ordering parts from a Yamaha Golf-Car Company dealer.

2




OPERATOR SAFETY

Yamaha golf cars are designed to be simple to operate. However, be sure to observe the following to reduce the risk of serious injury or death due to loss of control and other hazards:

BEFORE OPERATING THE GOLF CAR

- Read this Owner's/Operator's manual and all safety and instruction labels on the golf car before operating.
- Perform the pre-operation checks found in Section 6 of this manual.
- Only authorized people should drive the golf car, from the driver's side only, and only in designated areas.
- Do not allow more than two occupants per seat. This golf car is restricted to two occupants unless equipped with a rear seat.
- Do not operate the golf car while under the influence of alcohol or drugs; their effect on vision and judgment make operating a golf car dangerous.
- Do not operate the golf car on public streets, roads or highways unless allowed by law or local regulating authority.

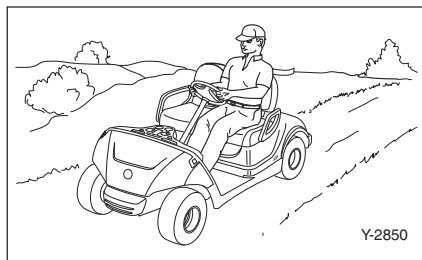

WHILE OPERATING THE GOLF CAR



- Keep your entire body inside the golf car, remain seated, and hold on when the car is in motion.
- Do not start the golf car until all occupants are seated.
- Keep your hands on the steering wheel and your eyes on the path ahead.



OPERATOR SAFETY

3

- Use extra care in congested areas or when backing up. Always back up slowly, and watch carefully.
- Avoid starting or stopping abruptly.
- Vary the speed of the golf car to match the terrain of the course.
- Avoid turning the steering wheel too sharply at higher speeds to avoid tipping or rolling the golf car.
- Always drive slowly straight up or straight down slopes – never at an angle to avoid tipping or rolling the golf car.
- Do not make any modification or addition which affects capacity or safe operation, or make any changes not in accordance with the owner's/operator's manual.

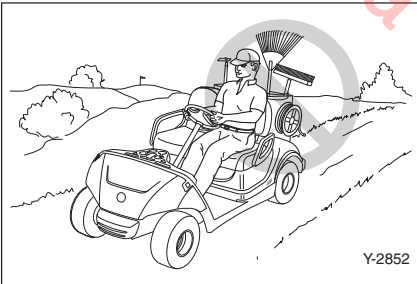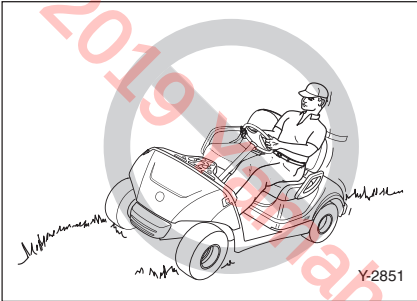



SAFETY CONSIDERATIONS

Like all machines, golf cars can cause injury if improperly used or maintained. This section contains broad safety practices required for safe golf car operation. Before golf cars are operated, golf course personnel should establish any additional safety practices that may be required for safe operation.

Experience has shown that golf cars are safe when operated in accordance with the safety warnings affixed to every golf car. This safe operation is enhanced when golf cars are used according to the safety rules and practices established to meet the terrain and conditions of the course they are used on.

The information contained here is intended for golf course personnel responsible for golf car safety. If you are responsible for the operation and maintenance of this golf car, we encourage you to implement this golf car safety program.

DRIVER QUALIFICATIONS

Allow only authorized people to operate golf cars. It is recommended that only people who possess a valid motor vehicle driver's license be allowed to operate golf cars.

Place operation and safety instructions recommended by the golf car manufacturer, along with the golf course safety rules, in a conspicuous place near the golf car rental area or golf car pick-up area. It is also recommended that the following warning be posted in a conspicuous location:

WARNING

Do not operate golf cars when under the influence of alcohol or drugs. Death or serious personal injury can result from failing to comply with the safety and warning instructions affixed to the golf car.

GOLF COURSE SAFETY SURVEY

Perform safety surveys regularly to identify hazardous areas where golf cars should not be operated.

GOLF COURSE HAZARD PREVENTION

The following golf course hazards must be made safe:

- **Steep Grades.** Where steep grades exist, restrict golf cars to designated golf car pathways where possible. In addition, identify steep grades with a suitable warning like:

WARNING

Descend steep grades slowly with foot on brake. Death or serious personal injury can result from failing to comply with the safety and warning instructions affixed to the golf car.

- **Sharp Turns, Blind Corners, Bridge Approaches.** Chain or rope off these potentially hazardous areas or identify them with a suitable warning describing the nature of the hazard and the proper precautions to be taken to avoid the hazard.



SAFETY CONSIDERATIONS

- **Wet Areas.** Wet grass may cause a golf car to lose traction and may affect stability. Golf car operators should reduce speed in wet areas or during periods of inclement weather.
- **Loose Terrain.** Loose terrain may cause a golf car to lose traction and may affect stability. Repair loose terrain, chain or rope off these areas, or identify loose terrain with a suitable warning.
- **Golf Car and Pedestrian Interference.** Reroute golf car traffic or pedestrian traffic in congested areas wherever possible to prevent accidents. If it is impractical to reroute traffic, erect warning signs to warn pedestrians of golf car traffic, and to warn golf car operators to drive slowly, use caution, and watch for pedestrians.
- **Parts and Materials.** Use only replacement parts and materials recommended by the manufacturer.
- **Ventilation.** Properly ventilate all maintenance and storage areas in accordance with applicable fire codes and ordinances to avoid fire hazards. Ventilation is also required to remove hydrogen gas from the car storage areas during the battery charging process.

For electric powered golf cars, the amount of hydrogen gas emitted during charging depends on a number of factors, such as the condition of the batteries, the output rate of the battery charger, and the amount of time the batteries are on charge. Because of the highly volatile nature of hydrogen gas and its propensity to rise and accumulate at the ceiling in pockets, a minimum of 5 air changes per hour is recommended. Consult applicable fire and safety codes for the specific ventilation levels requirement, as well as requirements for the use of explosion proof electrical apparatus.

4

MAINTENANCE REQUIRED FOR GOLF CAR SAFETY

Practice the following to help ensure the safety of golf car operators:

- **Preventative Maintenance.** Perform all scheduled maintenance in accordance with manufacturer's recommendations to provide the golfing patron with a safe, properly operating golf car.
- **Personnel.** Allow only qualified, trained, and authorized personnel to inspect, adjust, and maintain golf cars.



SAFETY CONSIDERATIONS

SAFETY PRECAUTIONS DURING MAINTENANCE

When performing maintenance, follow all safety instructions contained in the manufacturer's operation and service manuals, as well as the following safety procedures:

- Properly immobilize golf car before beginning any maintenance to avoid any unexpected vehicle movement.
- Properly block chassis before working underneath golf car to avoid any unexpected vehicle movement.
- When working on the fuel system or the battery, do not smoke, or allow any sparks or open flames near the vehicle, to avoid any fires or explosions.
- Before working on an electric golf car, disable the car's electrical system in accordance with the manufacturer's instructions to avoid electrical shock or damage to the electrical system.
- Use only properly insulated tools when working on electrically powered golf cars or around batteries to avoid electrical shock or damage to the electrical system.
- Maintain all safety devices including brakes, steering mechanisms, warning devices, and governors, in a safe operating condition. Do not modify these safety devices as supplied by the manufacturer.
- After each maintenance or repair, the car must be driven by a qualified, trained, and authorized person – in an area free of pedestrian traffic – to ensure proper operation and adjustment.




- Record all maintenance performed in a maintenance record log by date, name of person performing maintenance, and type of maintenance. Periodically inspect maintenance log to ensure accurate and complete entries.
- Provide operator comment cards to assist in identifying non-periodic maintenance needs for specific golf cars.
- Maintain in a legible condition all nameplates, warnings, and instructions provided by the manufacturer.
- If new nameplates, warnings, or instructions are needed, contact your Yamaha Golf-Car Company dealer.

STORAGE AND BATTERY CHARGING

Take the following precautions to ensure maintenance worker safety:


- Only use battery charging facilities and procedures that are in accordance with applicable ordinances and regulations to avoid explosions, electrical shock or damage to the electrical system.
- Periodically inspect charging facilities and procedures to be certain that applicable safety codes, regulations, and procedures are being followed to avoid any fires or explosions.

CONTROLS

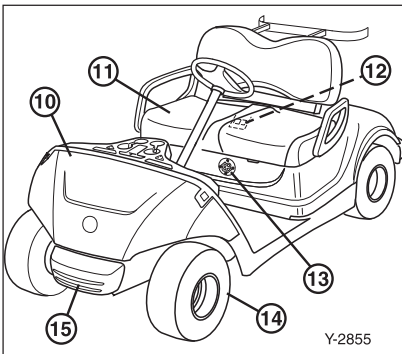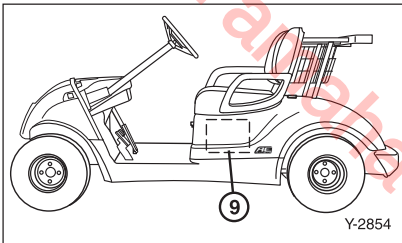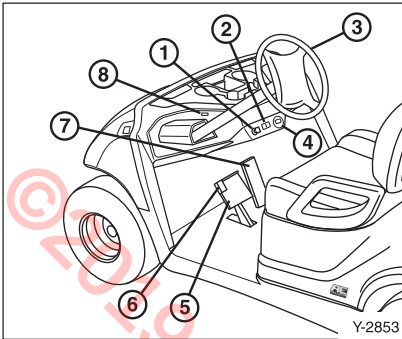

FEATURES

- ① Main switch
- ② Drive select switch
- ③ Steering wheel
- ④ Battery gauge
- ⑤ Brake pedal
- ⑥ Parking brake pedal
- ⑦ Accelerator pedal
- ⑧ USB ports
- ⑨ Batteries
- ⑩ Front body
- ⑪ Seat
- ⑫ Tow switch
- ⑬ DC charger receptacle
- ⑭ Front tire
- ⑮ Front bumper
- ⑯ Rear tire
- ⑰ Rear bumper
- ⑱ Rear body

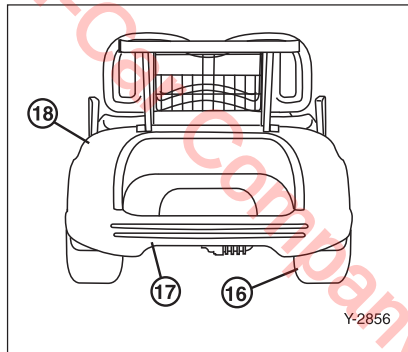


CONTROLS

MAIN SWITCH

The main switch controls the following items:


“OFF”

All electrical control circuits are switched off (controller remains energized). The golf car cannot be operated. The key can be removed only in this position.

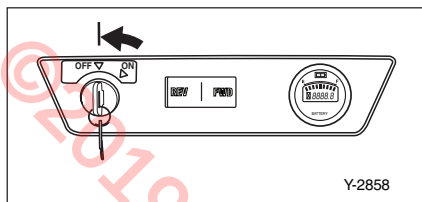

“ON”

Electrical circuits are switched on. The golf car can be driven.


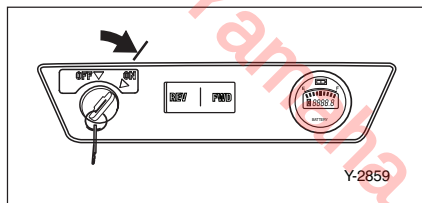


OPTIONAL BATTERY GAUGE

The battery gauge displays how much charge is left in the batteries. When the batteries are at full charge, all the LEDs will be lit.


As the battery energy decreases, the LEDs will move to the left toward the “E.” When the LED light below the “E” is the only one lit, the batteries must be charged.

Use the table to determine the remaining battery capacity. For example, if 7 of the 9 LED lights are lit, batteries still have approximately 47.4 volts left. When the batteries fall to 43.4 volts or less, 1 LED will blink on and off, meaning the batteries should be charged immediately.

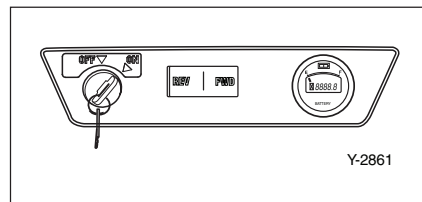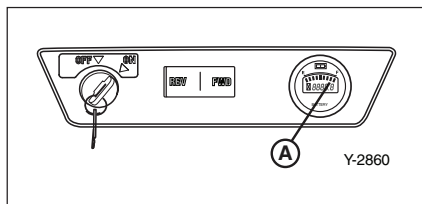

BAR LEVEL	9	8	7	6	5	4	3	2	1	1 BLINK
VOLT	48.95	47.8	47.4	46.9	46.4	46.0	44.8	44.0	43.5	43.4 >


CONTROLS

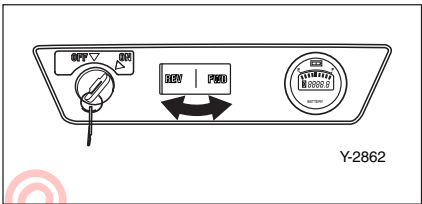

DRIVE SELECT SWITCH

The drive select switch is used to shift the golf car into forward or reverse. After coming to a complete stop, move the lever to the desired position.


Switch Position	Car Movement
FWD	FORWARD
REV	REVERSE

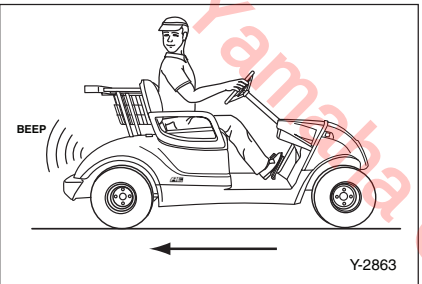

TIP

The reverse alarm will sound when the drive select switch is turned to "REV."

5

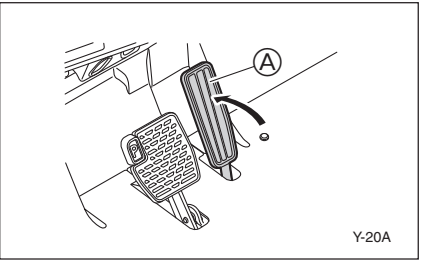


ACCELERATOR PEDAL

The accelerator pedal controls the golf car's speed.

Action	Car Speed
Depress pedal	Increase
Release pedal	Decrease

(A) Accelerator pedal

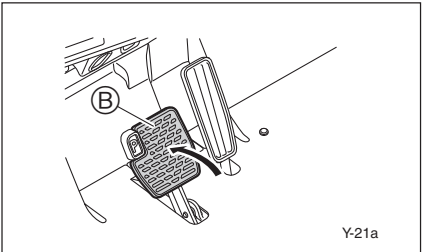


BRAKE PEDAL

Press down on the brake pedal to stop the golf car.

(B) Brake pedal

CONTROLS

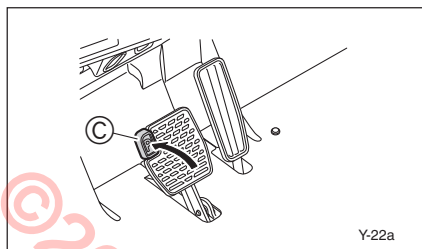

PARKING BRAKE PEDAL

Press down on the parking brake pedal whenever parking the golf car.


© Parking brake pedal

TIP

Release the parking brake by depressing the accelerator pedal.

⚠ WARNING

The parking brake will automatically release when the accelerator pedal is depressed. If the main switch is in the “ON” position, depressing the accelerator may suddenly cause the golf car to move. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

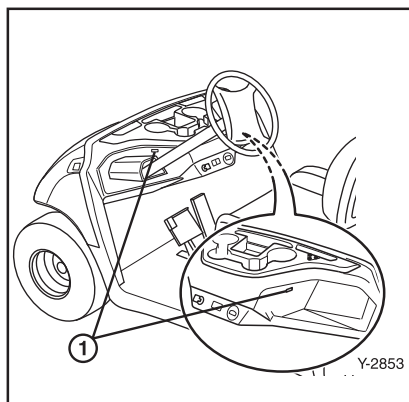


USB PORTS

A USB port is located inside the dash on the driver side and passenger side. These can be used to power or charge USB devices or accessories. The USB is only powered when the key is in the ON position.

① USB port

CONTROLS

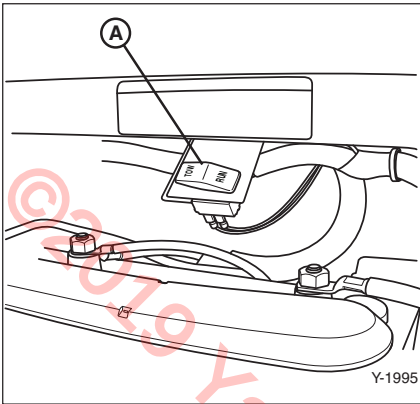

TOW SWITCH

Before operating the car, make sure the tow switch is in the “RUN” position.

Ⓐ Tow switch

NOTICE

Ensure that the “Drive Select Switch” is in the “FWD” position and then move the “TOW Switch” to “TOW” before towing.

After moving switch from “RUN” to “TOW,” wait 15 seconds minimum before switching again. Failure to do so may lead to drive system damage while towing.

PRE-OPERATION CHECKS

Pre-operation checks should be made each time you use your golf car. Get in the habit of performing the following checks in the same way so that they become second nature.

⚠ WARNING

To keep car from moving while performing pre-operation checks:

- Remove main switch key.
- Apply parking brake.


Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

PRE-OPERATION CHECKS

Refer to the Periodic Maintenance charts on pages 8-1 and 8-2.

SEAT

Open the seat for checking and servicing.

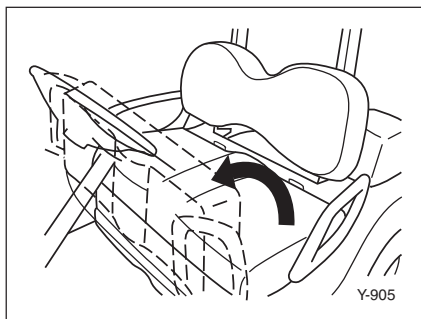

PRE-OPERATION CHECKS

BATTERIES

Check that the batteries are held securely in place to prevent them from being damaged from vibration or jarring. Also check that no battery caps are missing to prevent battery acid from spilling from the batteries. Check the battery terminals for corrosion.

WARNING

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes or clothing. Ventilate when charging or using in enclosed space. Always shield eyes when working near batteries. KEEP OUT OF REACH OF CHILDREN.

6

TIRE CONDITION

Tire Air Pressure

Check the tire air pressure before operating the golf car.



Tire pressure:

137 kPa, 1.4 kgf/cm² (20 psi)


Tire Wear Limit

Check the tire surface for damage, cracks or embedded objects. When tire tread wears down to 1 mm (0.04 in.), replace the tire.

Ⓐ Wear limit

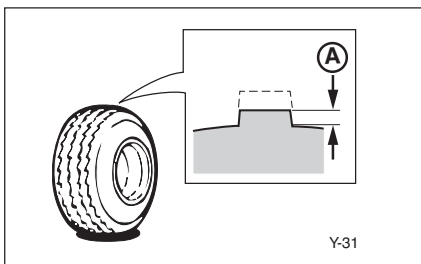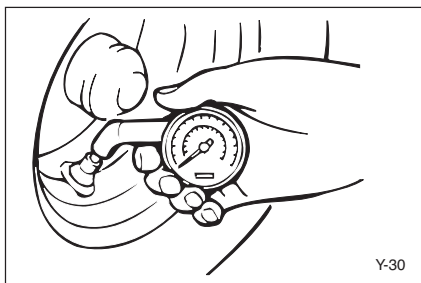

PRE-OPERATION CHECKS

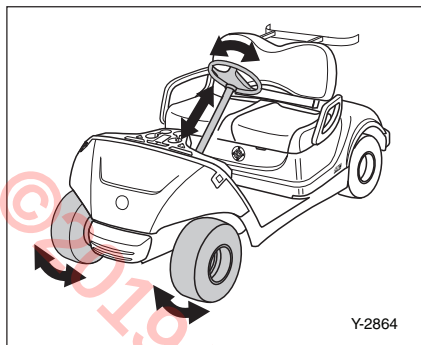


STEERING SYSTEM

Check the steering system for excessive free play by:

- moving the steering wheel up and down, and back and forth.
- turning the steering wheel slightly to the right and left.

If you feel excessive free play, or hear rattling sounds which may indicate loose steering components, consult a Yamaha dealer.

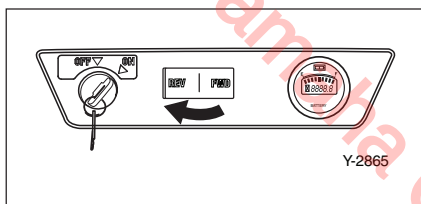

REVERSE ALARM

Check the reverse alarm by moving the drive select switch to "REV" for reverse. The alarm should sound.


PEDAL OPERATION

Check the following pedal controls for proper operation. If a pedal does not work properly, consult a Yamaha dealer.

Accelerator Pedal


⚠ WARNING

With the main switch in the "OFF" position, make sure the accelerator pedal operates smoothly.

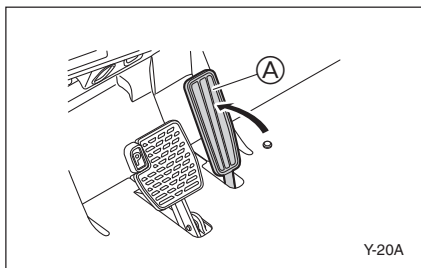

- Ⓐ Accelerator pedal


PRE-OPERATION CHECKS

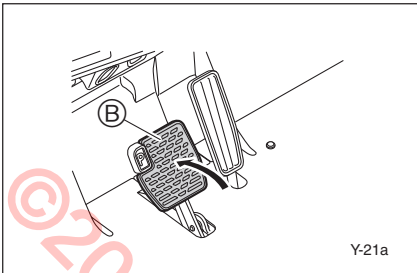

Brake Pedal

Make sure the brake pedal feels firm when pressed and returns to its original position when released.

Ⓑ Brake pedal

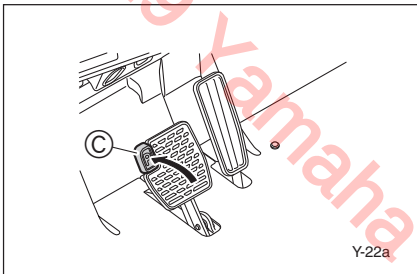

Parking Brake Pedal

Make sure the parking brake pedal locks in place with a positive click, and releases when the accelerator pedal is pressed.

Ⓒ Parking brake pedal

TIP


Release the parking brake by depressing the accelerator pedal.

6

BODY AND CHASSIS

Before each use, visually inspect the golf car body and chassis for damage and/or missing parts.

OPERATION

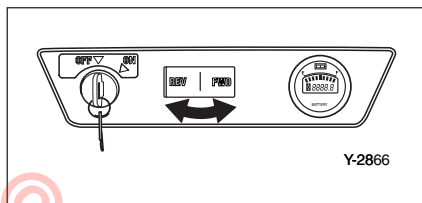

STARTING

1. With the parking brake applied, turn the drive select switch to “FWD” for forward, or “REV” for reverse.

NOTICE

Do not shift from “FWD” forward to “REV” reverse while the golf car is moving. Transmission damage can result.

2. Turn the main switch to “ON.”

WARNING



Do not depress the accelerator pedal when turning on the main switch or the golf car may start moving unexpectedly. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

3. Check that your path is clear in the direction you plan to go, and slowly depress the accelerator pedal. The golf car will start to move.

Ⓐ Accelerator pedal

TIP

The parking brake automatically releases when the accelerator pedal is depressed.

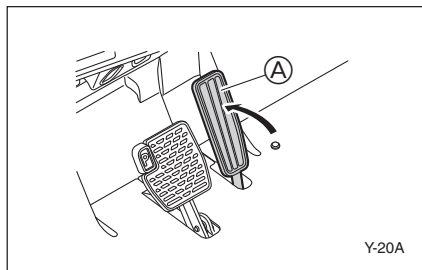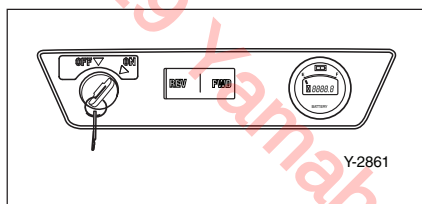

STOPPING

To stop the golf car, gradually press down on the brake pedal.


- Ⓐ Brake pedal

NOTICE

Do not hold the golf car on an incline with the accelerator – use the brake. Transmission damage can result.

When the car has come to a stop, apply the parking brake pedal and turn the main switch to “OFF.”

- Ⓑ Parking brake pedal

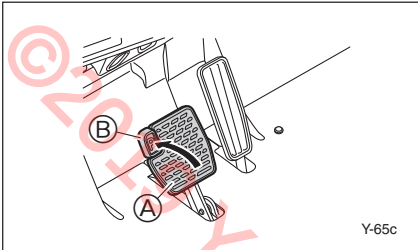

MAINTENANCE

PERIODIC MAINTENANCE CHARTS

Regular maintenance is required for the best performance and safe operation of your golf car.

⚠ WARNING

Be sure to turn off the main switch and apply the parking brake when you perform maintenance, unless otherwise specified. If the owner is not familiar with servicing the machine, death or serious personal injury can result. When in doubt the work should be done by a Yamaha dealer or other qualified mechanic.

NOTICE

Yamaha Golf-Car Company does not approve the use of high-pressure washers to clean the products they manufacture. Doing so may damage the finish on the body or result in doing other damage not covered by warranty.

CS - CHECK CA - CHECK AND ADJUST R - REPLACE S - SERVICE CL - CLEAN AND LUBRICATE L - LUBRICATE

	Remarks	Daily Pre- Operation	40 rounds 20 hours 100 miles 160 kms (Every Month)	250 rounds 125 hrs 600 mls 1000 kms (Every 6 months)	500 rounds 250 hrs 1200 mls 2000 kms (Every Year)	1000 rounds 500 hrs 2500 mls 4000 kms (Every 2 years)	2000 rounds 1000 hrs 5000 mls 8000 kms (Every 4 years)	Page
PRE-OP	Charge	S	S	S	S	S	S	4-3/ 8-5
	Clean battery tops, check for tightness of hold-down screws and terminals	S	S	S	S	S	S	6-2/ 8-3
	Check brake pedal freeplay and adjust if necessary	CS	CA	CA	CA	CA	CA	6-4/ 8-11
	Check steering operation	CS	CS	CS	CS	CS	CS	6-3
	Check tire pressure, tread depth, tire surface for damage	CS	CA	CA	CA	CA	CA	6-2
	Check body and chassis for damage	CS	CS	CS	CS	CS	CS	6-4
	Check tightness of all bolts, nuts, screws and rivets	CS	CS	CS	CS	CS	CS	*
	Check reverse alarm operation	CS	CS	CS	CS	CS	CS	6-3
EVERY MONTH	Check electrolyte level		CS	CS	CS	CS	CS	8-3/8-4
	Check for loose or broken connections		CS	CS	CS	CS	CS	*
	Clean/Lube pedal control area		CL					—
EVERY 6 MONTHS	Check all wire insulation for cracks and/or worn spots			CS	CS	CS	CS	*
	Check brake cables for abrasion and damage, and check operation			CS				8-20
	Check shock absorbers for oil leaks and damaged springs			CS	CS	CS	CS	*

* Items without a page number reference should be serviced by a Yamaha dealer or other qualified mechanic. This manual does not contain these procedures. They are contained in the Service Manual.

MAINTENANCE

CS - CHECK CA - CHECK AND ADJUST R - REPLACE S - SERVICE CL - CLEAN AND LUBRICATE L - LUBRICATE

	Remarks	Daily Pre- Opera- tion	40 rounds 20 hours 100 miles 160 kms (Every Month)	250 rounds 125 hrs 600 mls 1000 kms (Every 6 months)	500 rounds 250 hrs 1200 mls 2000 kms (Every Year)	1000 rounds 500 hrs 2500 mls 4000 kms (Every 2 years)	2000 rounds 1000 hrs 5000 mls 8000 kms (Every 4 years)	Page
EVERY YEAR	Perform a discharge test				S	S	S	*
	Apply Terminal protectant				S	S	S	—
	Check rear axle bearing play for roughness or freeplay				CS	CS	CS	*
	Check steering knuckle bushing freeplay / Adjust wheel alignment				CA	CA	CA	*
	Check wheel nut tightness, front wheel bearing play				CS	CS	CS	*
	Check transaxle oil level and inspect for leakage				CS	CS	CS	8-9
	Adjust parking brake release				CA	CA	CA	8-12
EVERY 2 YEARS	Replace brake cables					R		*
EVERY 4 YEARS	Replace transaxle oil						R	*
	Inspect brake shoes and adjust or replace if necessary						CA	*

* Items without a page number reference should be serviced by a Yamaha dealer or other qualified mechanic. This manual does not contain these procedures. They are contained in the Service Manual.

Battery Care

⚠ WARNING

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes, or clothing.

Antidote:

EXTERNAL: Flush with water.

INTERNAL: Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg, or vegetable oil. Call physician immediately.

EYES: Flush with water for 15 minutes and get prompt medical attention.

Batteries produce explosive gases. Keep sparks, flame, cigarettes, etc., away.

Ventilate when charging or using in enclosed space. Always shield eyes when working near batteries.

KEEP OUT OF REACH OF CHILDREN.

Six 8-volt deep cycle batteries provide power for your electric golf car and must be properly maintained and recharged for maximum performance and service life.

To maintain your batteries:



1. Clean the tops of the batteries with a solution of baking soda and water, as necessary, to remove corrosion.

NOTICE

Do not allow cleaning solution to enter battery cells. Serious battery damage can result.

2. Check the fluid level before and after charging.

MAINTENANCE

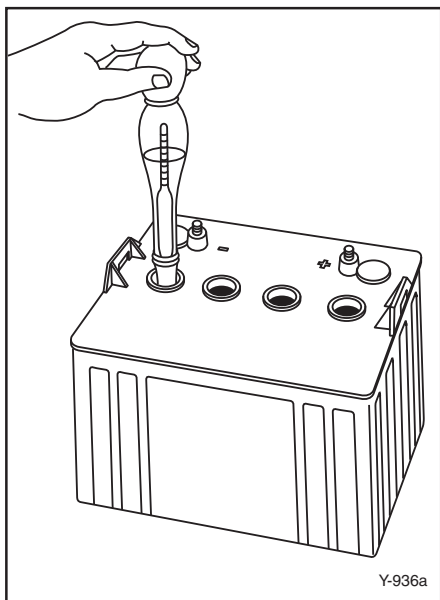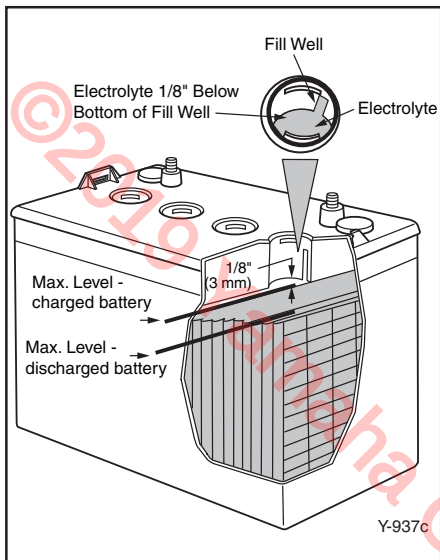

● **Before charging:** only add distilled water if fluid is below the top of the plates, and then add just enough to cover plates.

● **After charging:** HydroLink water system is available. Water is required to be added after charging the car. See Trojan HydroLink Battery Watering System operation manual for instructions.

3. Using a hydrometer, check the specific gravity of the battery fluid in each cell against the readings on the chart below. Consult a Yamaha dealer if any low readings are found, or if readings vary more than one point between cells.

Temperature		Satisfactory Uncorrected Hydrometer Reading
°C	°F	
48.9	120	1.244
43.3	110	1.248
37.8	100	1.252
32.2	90	1.256
26.7	80	1.260
21.1	70	1.264
15.6	60	1.268
10.0	50	1.272
4.4	40	1.276
-1.1	30	1.280

MAINTENANCE

Battery Charging

⚠ WARNING

Read and understand the owner's manual provided with your golf car's battery charger before charging batteries. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

⚠ WARNING

Explosive hydrogen gas is produced while batteries are being charged. Only charge batteries in well ventilated areas (a minimum of five air changes per hour is recommended). Death or serious personal injury can result from failing to comply with the safety instructions in this manual.


To charge the batteries in your golf car, follow the instructions contained in your battery charger's owner's manual. The following is a summary of the charging steps.

1. Turn main switch key to "OFF" position.

NOTICE

Always put the tow switch in the "TOW" position before charging battery or damage to the electrical system may result.


2. Lift up the seat and move the tow switch to the TOW position.

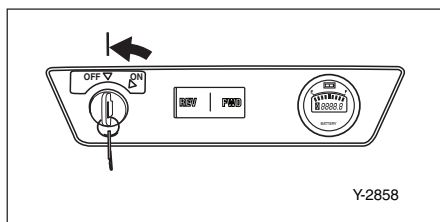

MAINTENANCE

NOTICE

Use only battery chargers that are rated for use with 48-volt Yamaha Golf Cars. Serious battery damage can result. Thoroughly read and understand the user manual supplied with your 48-volt charger.

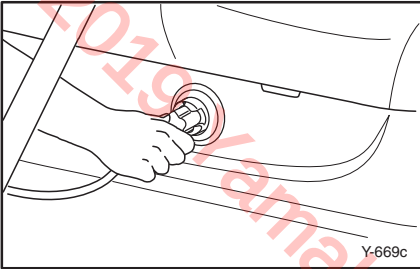

3. With the charger properly connected and grounded (see charger's owner's manual), insert the DC output into the DC charger receptacle.

⚠ WARNING

Do not disconnect the DC output cord from the DC charger receptacle when the charger is on or an arc could occur that may cause an explosion.

4. The charger will turn off automatically when the batteries reach full charge.
5. After the charger has turned off, disconnect the DC output plug from the DC charger receptacle by grasping the plug body and pulling the plug straight out of the receptacle.

MAINTENANCE

Battery Installation

⚠ WARNING

When working with batteries, do not put wrenches or other metal objects across the battery terminals. An arc can occur causing an explosion or fire at the battery.

1. Install the battery holddown plates and torque to 7-9 Nm, 0.7-0.9 m•kg (62-80 in•lb) as shown.



- (A) Forward
- (B) Battery
- (C) Battery holddown plate

2. Connect the wire leads and torque to 9-10 Nm, 0.9-1.0 m•kg (80-89 in•lb) as shown.

⚠ WARNING

When installing batteries:

- Carefully place battery cables and hold-downs making sure that cables do not lay across vent caps.
- Always remove the negative (-) cable to the motor controller first, and install it last. A spark can occur causing an explosion or fire at the battery.

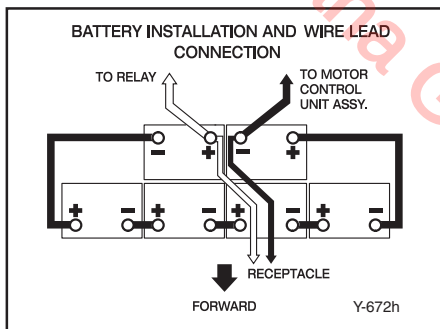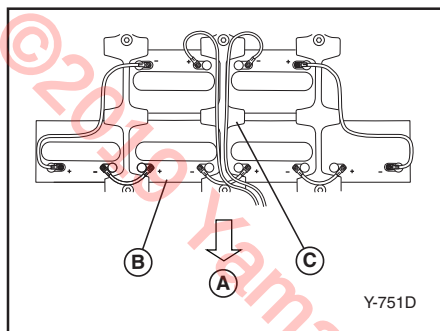

MAINTENANCE

NOTICE

Do not overtighten the battery holddown nuts. Excessive force will damage the battery casing.


Fuse Replacement

⚠ WARNING

Be sure to use the specified fuse. Using a wrong fuse can cause electrical system damage and create a fire hazard. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

NOTICE

When replacing a fuse be sure the main switch is turned off to prevent accidental short-circuiting and electrical system damage.

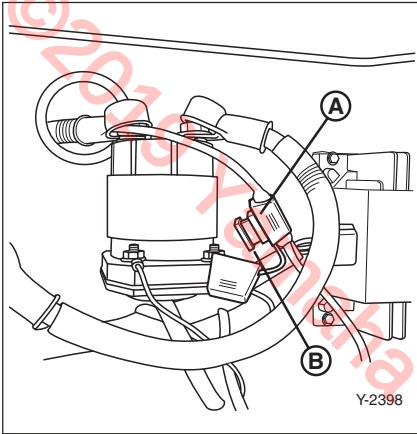

Fuse Type:
3 Amp, Blade Style

1. Locate the in-line fuse holder on the main wire harness through the service access panel on the back side of the golf car. The fuse is located on the inner left side of the car frame.
2. Pull fuse holder cover off.
3. Pull fuse out, inspect and replace if necessary.

- Ⓐ Fuse holder
Ⓑ Fuse

MAINTENANCE

BATTERY CHARGER

Prepare for Emergencies

Be prepared for possible injury or fire. Keep the following items handy:

- First aid kit
- Fire extinguisher
- Emergency phone numbers

Read the text located on the case of the charger before operating or using the charger.

Features

Switch-Mode Design: High-efficiency operation with smooth, ripple-free DC output.

10-LED Display: Displays state of charge and charge error conditions.

Charge Protection: Protects from improper connection, overload and excessive temperatures. Programmed safety features include charge time monitoring and over temperature protection.

Charge Algorithm: I-E-I - constant current/constant voltage/constant current charge profile.

Pre-Test: Performs several diagnostic tests before charging begins.

Multi-Charge Steps: Ensures a consistent and repeatable charge.

Step 1: Pre-test: Tests several conditions before charging begins. If a problem is detected, charging is terminated.

Step 2: Constant Current Step: Battery is charged with full rated output current, restoring up to 80% of charge.

Step 3: Constant Voltage Step: Regulated voltage "equalizes" individual battery cells, resulting in full charge delivered to the battery.

Step 4: Topping Off Step: Battery pack is brought slowly to full charge without excess gassing.

Step 5: Storage: Every 14th day and if voltage becomes less than 48V, charger restarts cycle to refresh batteries in storage.

Automatic Battery Equalization (Boosting): Automatically boosts battery pack when individual cell-voltages are not balanced and restores pack capacity.

MAINTENANCE

Installation

The AC line connected to the charger must be capable of supplying 12 Amperes to the charger. **AVOID** connecting a charger and another device to a single 15A/20A circuit or the circuit may become overloaded. Also, maximum Ampere varies depending on AC voltage. Please refer to “AC Input” in General Specifications.

WARNING

RISK OF FIRE - Use this charger only on circuits with a 15-amp or higher branch circuit protection (circuit breaker or fuse) in accordance with the national electrical code, ANSI/NFPA 70 and all applicable local codes and ordinances.

When using an extension cord, use only a grounded, 3-wire, 12-AWG cord no longer than 15 m (50'). The use of an improper extension cord could result in a risk of a fire or electric shock.

WARNING


The output of chargers with greater than 48 volts may pose an energy and/or shock hazard under normal use.

MAINTENANCE

Mounting

⚠ WARNING

This charger is not designed for on-board use. Improper mounting or installation could result in a risk of fire or damage to the golf car.

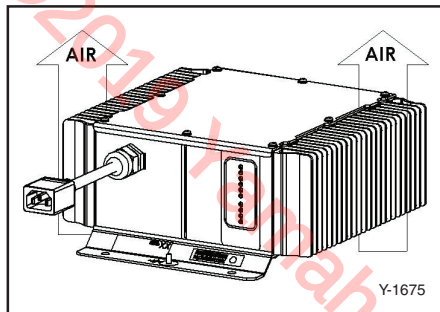

Mount the charger on a shelf or on the wall with adequate ventilation. Ideally it will be mounted horizontally with airflow from below. If it will be mounted vertically, it is recommended that the AC-input cord be at the lower end of the charger.

Keep the charger free of oil, dirt, mud or dust to keep the cooling fins operating as efficiently as possible.

Mount the charger by the mounting plate using appropriate fasteners.

TIP

The charger's AC plug must be located at least 46 cm (18") above the ground and the display visible to the user.

⚠ WARNING

Chargers can ignite flammable materials and vapors. Do not use near fuels, grain dust, solvents or other flammables.

MAINTENANCE

Grounding

The battery charger must be grounded to reduce the risk of electric shock. The charger is equipped with a 3-prong AC cord set. The AC cord set must be connected to an appropriate receptacle that is properly installed and grounded in accordance with the National Electrical Code and all local codes and ordinances.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of an electric shock.

The conductor with insulation that has an outer surface that is green, with or without yellow stripe(s), is the equipment-grounding conductor. If repair or replacement of the charger's AC cord set is necessary, do not connect the equipment-grounding connector to a live terminal.

Charging

WARNING

To reduce the risk of an electric shock, connect only to a properly grounded, single-phase (3-wire) outlet. Also, refer to grounding instructions.

WARNING

Risk of electric shock! Do not touch any uninsulated parts of the charger output plug, DC charger receptacle or battery terminals.

WARNING

Surfaces may be hot. To avoid risk of burns, do not touch.

MAINTENANCE

NOTICE

Charge only 48-volt battery systems manufactured by Trojan Battery Company. Damage to the charger and batteries may result if this charger is used on the wrong battery type.

⚠ WARNING

Visually and manually inspect to verify that the DC output cord, plug and battery charging receptacle are in good working condition before each and every use. Do not use the charger under any of the following conditions:

- The DC charging receptacle does not grip the DC cord set plug tightly, is loose or does not make a good electrical connection.
- The DC cord set plug or charging receptacle feels hotter than normal.
- The DC cord set plug or charging receptacle contacts are bent, corroded, or are dark or bluish in appearance.
- The DC cord set plug, cords, receptacle or equipment-charging wiring are cut, worn, broken or have any exposed conductors.
- The DC cord plug, cords, charger or receptacles are damaged or distressed in any way.

Using the charger with any of the above symptoms could result in a fire, property damage or personal injury.

⚠ WARNING

Do not disconnect the DC cord set plug from the DC charger receptacle when the charger is on. If the charger must be stopped, first disconnect the AC power supply cord from its AC outlet, and then disconnect the charger DC cord set plug from the DC charger receptacle.

⚠ WARNING

Whenever removing AC or DC cord set plugs from receptacles, pull from the plug body and not from their respective cords.

The instructions printed on the charger (shown below) are for daily reference. The charger is factory preset for use with Trojan 48-volt golf car batteries.


MAINTENANCE

OPERATING INSTRUCTIONS

1. PLUG AC CORD INTO A GROUNDED RECEPTACLE
2. PLUG DC CORD INTO DC CHARGER RECEPTACLE
3. CHARGE CYCLE WILL BEGIN AFTER A FEW SECONDS AND AMMETER WILL TURN ON
4. CHARGER SHUTS OFF AUTOMATICALLY WHEN BATTERIES ARE CHARGED


Connect charger's AC cord set to AC power. Then, connect the DC cord set plug to the vehicle charging receptacle by grasping the plug handle and pushing the plug straight into the DC charger receptacle. The charger will start automatically.

Upon connection to AC power source, the lower four LEDs come on as a Power-On Self-Test, then the AC power LED turns on. Upon connection to battery pack, output indicators turn on to indicate charging is active.

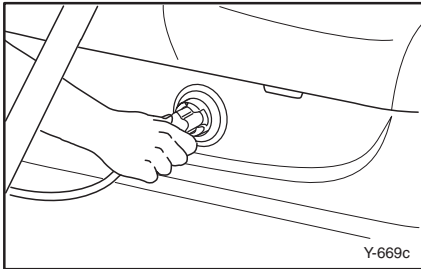


MAINTENANCE

Under normal charge circumstances, the LEDs operate as follows:

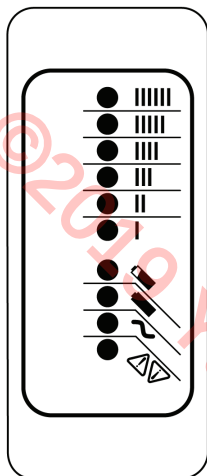

Ammeter
(Amber)

 

On:

Displays approximate scale of current output during Step 2.

Blinking:

High internal charger temperature. Current output reduced.

80% Charge
(Amber)



On:

80% charged, Step 2 complete. Begin Step 3.

Blinking:

With no battery connected, indicates algorithm # selected by number of flashes at startup.

100% Charge
(Green)



On:

Charging complete. Charger in Storage Mode.

Blinking:

Step 3 complete. Begin Step 4.

AC On
(Amber)



On:

AC power good. Charger may be overheated.

Blinking:

Move charger to cooler location.

Fault
(Red)



Blinking:

Charger error. Refer to **Troubleshooting** on next page.

Y-1679

To reset charger after 100% charge (Green LED), disconnect the DC plug from battery for more than 30 seconds. Then, reconnect DC plug.

Troubleshooting

1. LED Error Codes (For Battery Condition)

WARNING

Incorrect reassembly may result in a risk of electric shock or fire. The following procedures are intended only to determine if a malfunction may exist in the charger.

WARNING

To reduce the risk of electric shock, always disconnect the charger's AC cord set plug from AC power and its DC cord set plug from batteries before attempting any maintenance or cleaning.

WARNING

Do not operate the charger if it is malfunctioning. Personal injury or property damage could result.

MAINTENANCE

If a fault occurs, count the number of red flashes between pauses and refer to the table below:

Red Flashes	Cause	Solution
	Battery High Voltage	Check battery size and condition and reset charger (interrupt DC connection for 15 seconds).
	Battery Low Voltage	Check battery size and condition and reset charger (interrupt DC connection for 15 seconds).
	Charge Timeout caused by battery pack not reaching required voltage. Charger output was reduced due to high temperatures.	Check connections. Operate charger at a lower ambient temperature.
	Check Battery: Battery could not be trickle charged up to minimum voltage.	Check for shorted or damaged cells.
	Over-Temperature: Charger shut down due to high internal temperature.	Ensure sufficient cooling air flow and reset charger (interrupt DC connection for 15 seconds).
	Charger Internal Fault	Reset charger (interrupt AC power for 15 seconds). Return to qualified service depot if fault persists.

WARNING

Have qualified service technician inspect if problems persist.

MAINTENANCE



2. Hardware System Faults

Problem Description	Cause	Remedy
Charger does not start. No LEDs illuminate or blink when AC cord is connected.	No AC power to charger.	Ensure correct voltage at AC outlet. Check AC cord connections. Replace AC cord if damaged.
Charger does not start charging when DC cord set is plugged into charger receptacle and the Amber AC On LED is illuminated.	Incorrect wiring or disconnection from DC cord, charger receptacle and batteries. Battery voltage less than 20 Volts.	Ensure polarity for wiring is correct from DC cord, charger receptacle and batteries. Check battery pack voltage.
Charger runs longer than 20 hours.	Charger may be in “boosting” stage.	Confirm Green 100% LED is blinking. (This indicates boosting.)

WARNING

Have qualified service technician inspect if problems persist.

MAINTENANCE

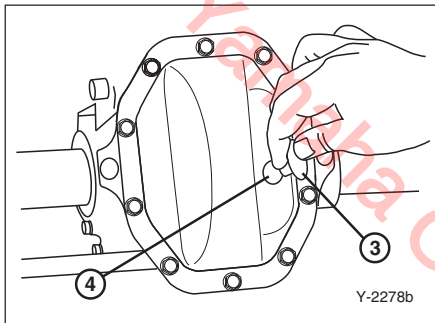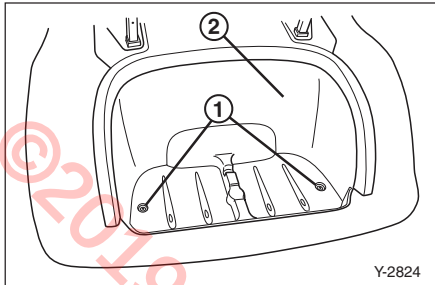

Transaxle Oil


To check transaxle oil level:

1. Place the golf car on a flat, level surface.
2. Remove two bolts (1) and remove the bag holder insert (2).
3. Place an oil pan under the transaxle case.
4. Clean the area around the oil level plug (3) and then remove the plug.


NOTICE

Do not allow foreign material to enter transaxle. Serious transaxle damage can result.

5. The oil level should be right at the bottom of the oil level plug hole (4) or just starting to flow out of the hole.
6. If needed, add Yamalube SAE 90 gear oil until it starts to flow from the oil level plug hole.
7. Allow excess gear oil to flow out of the hole until it stops.
8. Install the oil level plug.
9. Install the bag holder insert (2) and secure with two bolts (1).

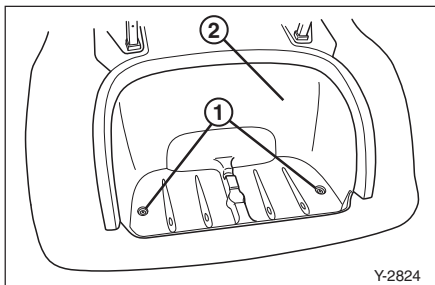

MAINTENANCE

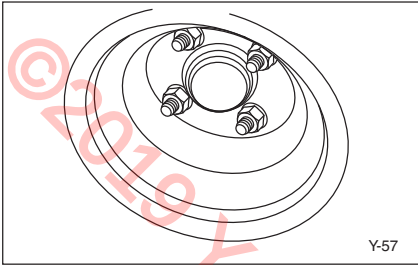

⚠ WARNING

Before performing wheel or brake maintenance, verify that the main switch is in the “OFF” position. Accidental starting of the vehicle could cause the vehicle to move, causing death or serious personal injury.

Wheel Replacement

To remove and install a wheel on your golf car:

1. With the wheels blocked to prevent the golf car from moving, loosen the wheel nuts.
2. Elevate the golf car with a jack and remove the wheel nuts and the wheel.
3. Reverse the removal steps when installing the wheel.

Wheel nut tightening torque:
80 Nm, 8.0 m·kg (58 ft·lb)

Brake Adjustment

The brakes on your golf car are self-adjusting.

Before you operate the golf car, press down on the brake pedal several times to make sure the brakes are functioning properly.


⚠ WARNING

Consult your Yamaha dealer before using your golf car if you suspect brake problems. Brake failure could result in a serious accident. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

MAINTENANCE

Brake Pedal Free Play Adjustment


Check the brake pedal free play by pressing against the pedal with two fingers (using light force) and measuring the distance the pedal travels before resistance is felt.

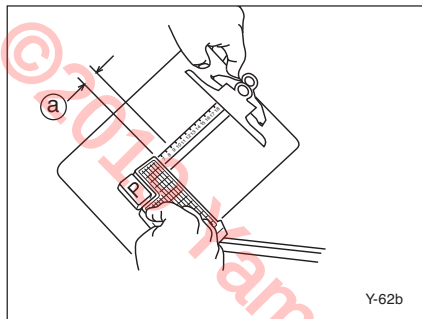

Brake pedal free play (a):
50-55 mm (1.97-2.17 in.)


To adjust the brake pedal free play:


1. Remove the floor mat and service lid from the floor of the golf car.
2. If the free play distance needs adjusting, loosen the lock nut (A) and turn the adjusting nut (B) in or out until free play specification is met. Then tighten the lock nut in place.

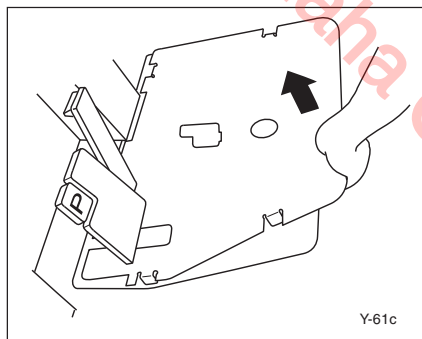

WARNING

Do not over-tighten the brake cables. Over-tightening will increase brake wear and affect overall performance of golf car. Premature brake wear can result. Death or serious personal injury can result from failing to comply with the warning labels in this manual.

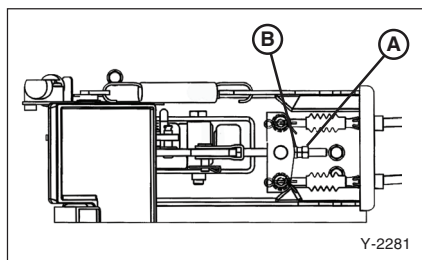

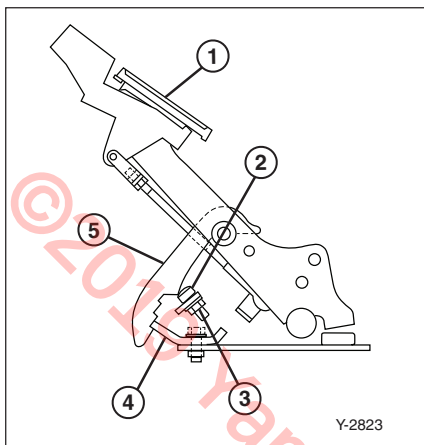

Parking Brake Release Adjustment

NOTICE

Before performing parking brake release adjustment, adjust brake pedal free play.

1. Apply pressure to the parking brake pedal until the brake nail catches the first latch position on the sector.
2. Loosen the locknut and turn the bolt counterclockwise until it contacts the sector.
3. Turn the bolt clockwise $\frac{3}{8}$ (120 degrees), then tighten locknut.

- ① Parking brake pedal
- ② Bolt
- ③ Locknut
- ④ Brake nail
- ⑤ Sector

STORAGE

Perform the following preparations when storing your golf car for extended periods of time:

NOTICE

Yamaha Golf-Car Company does not approve the use of high-pressure washers to clean the products they manufacture. Doing so may damage the finish on the body or result in doing other damage not covered by warranty.

TIP

Turn main switch key to "OFF" position, lift seat and switch tow switch in the "TOW" position. Remove key from main key switch, and store key in a safe place.

CHASSIS PREPARATION

1. Verify the tire pressure is set to 137 kPa, 1.4 kgf/cm² (20 psi).
2. Clean exterior of the golf car and apply a rust inhibitor.
3. Cover the golf car with a breathable cover and store it in a dry, well-ventilated area.

BATTERY PREPARATION

1. Have the batteries recharged every 60-90 days to keep them fully charged. The batteries must be kept fully charged to avoid damage.

NOTICE

Do not allow cleaning solution to enter battery cells. Serious battery damage can result.

2. Clean the top of the batteries with a solution of baking soda and water, as necessary, to remove corrosion.

SPECIFICATIONS

GENERAL SPECIFICATIONS

Items	DR2E19 AC
Dimensions: Overall length Overall width Overall height (steering height) Height of floor Wheelbase Tread: Front Rear Min. ground clearance	2395 mm (93.4 in.) 1200 mm (47.2 in.) 1190 mm (46.9 in.) 310 mm (12.2 in.) 1640 mm (64.6 in.) 870 mm (34.3 in.) 980 mm (38.6 in.) 116 mm (4.5 in.)
Weight: Dry weight (with suntop, without battery)	273.5 kg (603 lb)
Performance: Factory speed setting Maximum speed Turning radius Seating capacity	19 km/h (12 mph) 24 km/h (15 mph) 2.8 m (9.2 ft) 2 persons per seat

SPECIFICATIONS

BATTERIES

Items	DR2E19 AC
Battery:	Trojan - Golf Car Type T-875 (6x8-volt) RC: minimum 117 min

CHASSIS

Items	DR2E19 AC
Steering system: Type Steering angle (L.H.) Steering angle (R.H.)	Rack and Pinion 1.85 turn 1.85 turn
Brakes: Brake system Type of brake Brake pedal freeplay linkage adjustment (Brake cable end play)	Mechanical drum brake on each rear wheel with self-adjusters Dual internal expanding shoe Leading/trailing shoes (self-adjusting) 50-55 mm (1.97-2.17 in.) 0.004-0.02 in. (0.1-0.5 mm)
Parking brake: Type	Foot type; rear wheel parking brake with automatic release.
Wheel: Tire size: Front Rear Rim size: Tire pressure:	18 x 8.50-8.00/4 PR 18 x 8.50-8.00/4 PR 7.00-1-8.00 138 kPa, 1.4 kgf/cm ² (20 psi)

10

TRANSMISSION

Items	DR2E19 AC
Differential/reduction gear	Secondary reduction system helical gear Secondary reduction ratio: Forward 12.44:1; Reverse 12.44:1 Differential type bevel gear Lubricant/capacity Yamalube SAE 90 gear oil/355 cc (355 mL, 0.38 US qt)

General Specifications

DC Output – see Operating Instructions

Voltage - nom (V)	48
Voltage - max (V)	67.2
Current - max (A)	18
Battery Type	Specific to selected algorithm
Reverse Polarity	Electronic protection – auto-reset
Short Circuit	Electronic current limit



AC Input

Voltage - max (Vrms)	85-265
Frequency (Hz)	45-65
Current - max (Arms)	12A @ 104VAC / 11.5A @ 110VAC / 6.1A @ 200VAC / 5.6A @ 220VAC / 5.4A @ 230VAC / 5.1A @ 240VAC
Current - nom (Arms)	10A @ 120VAC / 6A @ 200VAC / 5A @ 230VAC
AC Power Factor	>0.98 at nominal input current

Mechanical


Dimensions	28.0 x 24.5 x 14.0 cm (11 x 9.7 x 5.5")
Weight	<5 kg (12 lbs)
Environmental	Enclosure: IP46
Operating Temperature	-30°C to +50°C (-22°F to 122°F), derated above 30°C, below 0°C
Storage Temperature	-40°C to +70°C (-40°F to 158°F)
AC Input Connector	IEC320/C14 (require ≥ 1.8 m localized cord)
Safety Timeout	20.5 hours (24.5 hours when boosting)

Mechanical Drawings

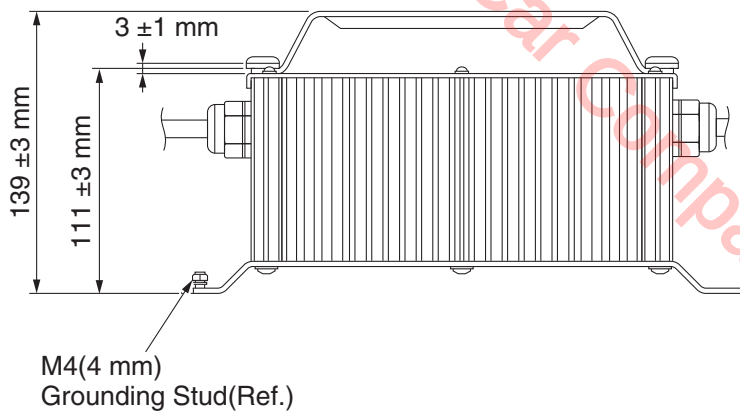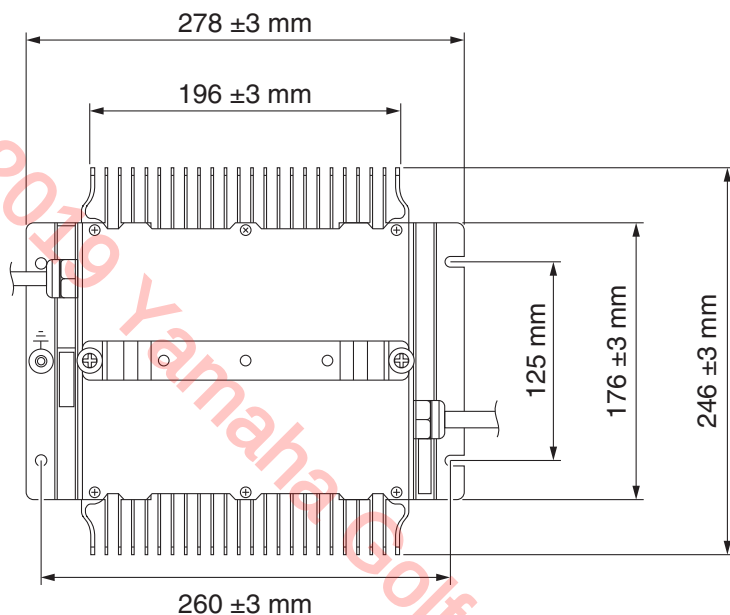

WIRING

WIRING

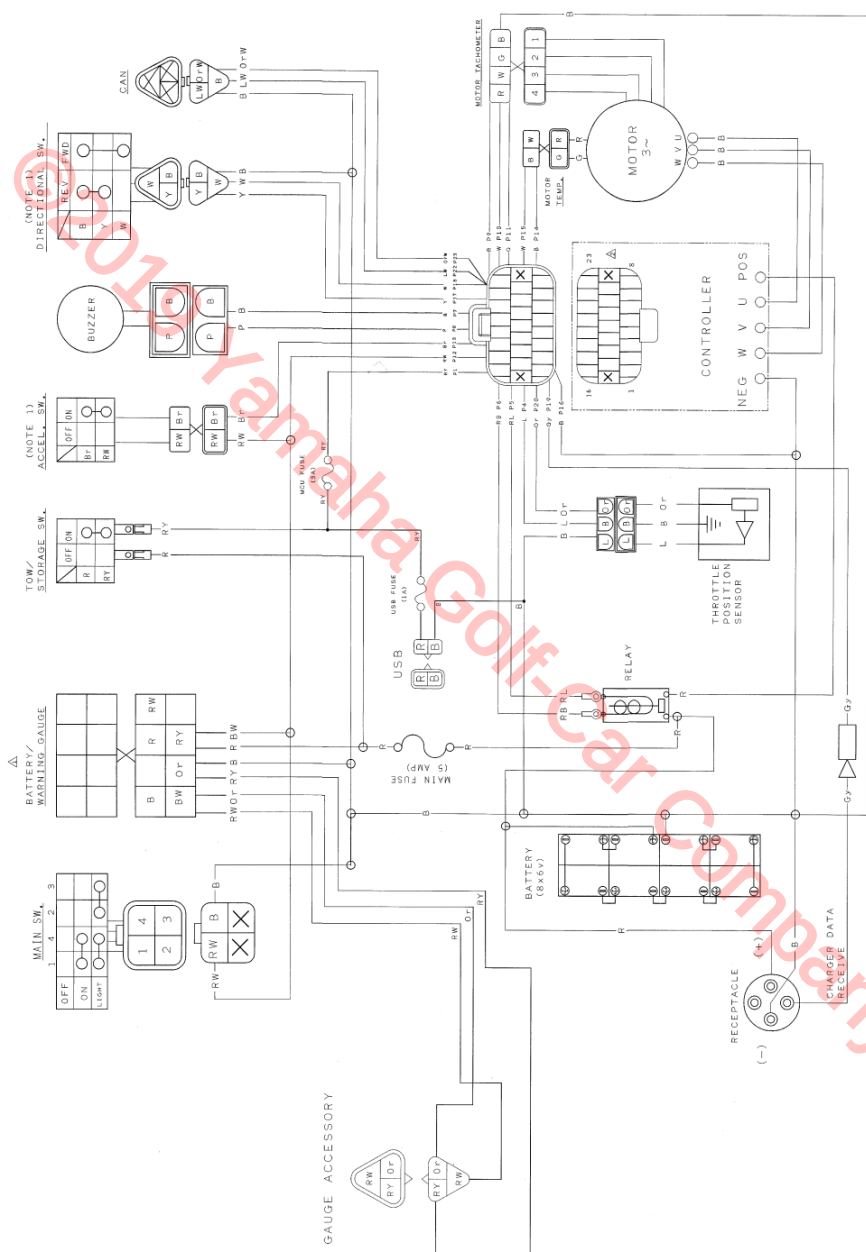

Y-2867

NOTES

©2019 Yamaha Golf-Car Company

NOTES

©2019 Yamaha Golf-Car Company

NOTES

©2019 Yamaha Golf-Car Company

©2019 Yamaha Golf-Car Company

©2019 Yamaha Golf-Car Company



PRINTED IN USA
2018.12-0.3x2 CR
(E)