



OWNER'S / OPERATOR'S MANUAL



READ THIS MANUAL CAREFULLY!
It contains important safety information.

DR2E17 AC

ADVENTURER SPORT

2+2 VEHICLE

INTRODUCTION

Congratulations on your purchase of a Yamaha Adventurer Sport 2+2 Vehicle. This manual contains information you will need for proper operation, maintenance, and care of your sport vehicle. A thorough understanding of these simple instructions will help you to obtain maximum enjoyment from your new Yamaha.

If you have any questions about the operation or maintenance of your sport vehicle, please consult a Yamaha dealer.

Yamaha Motor Corporation USA

**DR2E17 Adventurer Sport 2+2 Vehicle
Owner's/Operator's Manual
© 2017 by Yamaha Motor Corporation
USA
1st edition
All rights reserved. Any reprinting or
unauthorized use without the written
permission of
Yamaha Motor Corporation USA
is expressly prohibited.
Printed in U.S.A.
LIT-19626-93-13**



J2H-F8199-22

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following notations:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

A NOTICE indicates special precautions that must be taken to avoid damage to the four-passenger vehicle or other property.

TIP

A TIP provides key information to make procedures easier or clearer.

TIP

Yamaha continually seeks advancements in product design and quality; therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your vehicle and this manual. If you have any questions concerning this manual, please consult your Yamaha dealer.

Read and understand this manual completely before operating your vehicle. This manual should be considered a permanent part of your vehicle and should remain with the vehicle when resold.

CONTENTS

WARRANTY

IMPORTANT LABELS

SAFETY INFORMATION

CONTROLS

PRE-OPERATION CHECKS

OPERATION

MAINTENANCE

STORAGE

SPECIFICATIONS

WIRING

WARRANTY

1

LIMITED 2-YEAR WARRANTY FOR TRANSPORTATION AND UTILITY VEHICLES

Yamaha Golf-Car Company hereby warrants that any new Yamaha utility vehicle or any multi passenger cars or specialty vehicles purchased from Yamaha, or an Authorized Dealer or Distributor in the United States will be free from defects in material and workmanship for TWO years from date of purchase, subject to the stated limitations. DURING THE PERIOD OF WARRANTY, any authorized Yamaha golf car service technician, dealer, or distributor will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the vehicle's warranty period. All parts replaced under warranty become property of Yamaha Golf-Car Company.

Common Parts		Electric Car Specific	
Frame	2 Years	Battery - Trojan ' T875 ' without HydroLink Watering System	4 Years or 23,500 amp-hours whichever comes first *Detailed condition on the next page
Transaxle	2 Years	Electric Motor	2 Years
Pedals	2 Years	Motor Controller / Charger	2 Years
Brakes (excluding shoes / pads)	2 Years	Charger Cord	2 Years
Electrical wires, switches, and relays	2 Years	Charger Receptacle	2 Years
Suspension / Steering components	2 Years	Throttle Position Sensor	2 Years
Seats	2 Years	GAS Car specific	
Sun Top	2 Years	Exhaust / Intake / Generator	2 Years
Bumpers / Body Parts	2 Years	Gas Engine	2 Years
Floor Mats	2 Years	Throttle Cables / Controls	2 Years
Scorecard Holders	2 Years	Battery	1 Years
Bag Carrier	2 Years	Clutch (excluding drive belt)	2 Years
Common Accessories			
Windshield	3 Years	All Remaining Parts	1 years
Head Light	2 Years		
Tail Light	2 Years		

EXCLUSIONS from this Warranty shall include any failures caused by:

- Abnormal strain, neglect, or abuse, including lack of proper maintenance, and use contrary to the Owner's/Operator's Manual instructions.
- Accident or collision damage.
- Installation of parts or accessories that are not original equipment.
- Fading, rust, or deterioration due to exposure or ordinary wear and tear.
- Modifications or alterations that affect the car's condition, operation, performance, or durability, or which makes the car serve a purpose other than use as a two-person, golf course vehicle.
- Damage due to improper transportation.
- Acts of God, i.e. lightning, hail damage, flooding, fire, etc.

This Limited Warranty does not cover any parts replaced due to normal wear or routine maintenance, including oil and air filter elements, brake shoes, tire wear, spark plugs, starter and clutch drive belts. Any charges incurred in transporting a golf car or charger to and from an authorized Yamaha golf car dealer for service or in performing field service are also excluded from this warranty. Gasoline powered golf car starting batteries on vehicles equipped with a golf course GPS device, or any other device with a parasitic current draw, unless the vehicle is equipped from the factory with an optional deep cycle starting battery, are also excluded from this warranty.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to operate and maintain the golf car and charger as specified in the appropriate Owner's/Operator's Manual, and give notice to an authorized Yamaha golf car dealer of any and all apparent defects within ten (10) days after discovery, and make the vehicle or charger available at that time for inspection and repairs by the dealer's authorized representative.

WARRANTY TRANSFER: This warranty is to the original owner only and is not transferable.

Yamaha Golf-Car Company makes no other warranty of any kind, expressed or implied. All implied warranties of merchantability and fitness of merchantability and fitness for a particular purpose which exceed the obligations and time limits stated in this warranty are hereby disclaimed by Yamaha Golf-Car Company and excluded from this Warranty. Some states do not allow limitations on how long implied warranty lasts, so the above limitation may not only apply to you. Also excluded from this Warranty is any incidental or consequential damages including loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This Warranty give you specific legal rights, and you may also have other rights, which vary, from state to state.

Yamaha Motor Corporation, USA, KENNESAW, GEORGIA 30144

EFFECTIVE DATE: 7/1/16

WARRANTY

1

YAMAHA FOUR-YEAR LIMITED WARRANTY FOR TROJAN BRAND ELECTRIC GOLF CAR AND UTILITY VEHICLE BATTERIES WHEN CHARGED WITH A YAMAHA 48-VOLT CHARGER

Yamaha Golf-Car Company (herein referred to as "YGC") hereby warrants to the Original Retail Purchaser or Lessee of a YAMAHA The Drive golf car or PTV, Adventurer utility vehicle, or YAMAHA Concierge transportation or specialty car purchased from Yamaha, or an Authorized Dealer or Distributor in the United States, that the Trojan batteries charged with a YAMAHA battery charger will be free from defects in materials and workmanship, and will provide "36-hole performance" as follows:

- 4-years or 23,500 amp-hours with T-875
- 4-years or 25,000 amp-hours with T-875 batteries & the addition of a factory-installed Trojan HydroLink Battery Watering System.

WARRANTY LIMITATIONS

Yamaha Golf-Car Company's and Trojan Battery Company's limit of liability shall be to replace a defective battery. Replacement shall mean furnishing a new battery or used battery with sufficient life to complete the remainder of the warranty term, at no cost to the purchaser during the limited warranty period, except for labor or transportation expenses.

The following conditions apply:

- Amp-hours will be determined either through the Genius controller or through other means as necessary in the event of a controller failure or replacement.
- This warranty only applies to factory installed Trojan battery sets charged with a Yamaha battery charger.
- The customer must perform (or have a contracted Yamaha Dealer perform) all periodic maintenance and discharge testing as specified in the Yamaha Service Manual Maintenance Schedule. No labor or transportation expenses are included in this limited warranty. Maintenance records must be kept.
- YGC supplied or approved replacement batteries may be of a different brand or capacity, but are warranted to provide 36-hole performance for the remainder of the original warranty term.
- "36-hole performance" is defined as 60-minutes discharge time as tested and recorded using a Lester model #1770 discharge machine at an ambient temperature of between 60 and 100 degrees F (16 and 38 degrees C). Ambient temperatures between 60 and 80 degrees F (16 and 27 degrees C) must be corrected using the formula: Adjusted Discharge Time = (Discharge Minutes) / (1 - ((80-TEMP)/100) x 0.64).
- The customer must notify the Dealer within 10 days that a vehicle has failed to make 36 holes per day. YGC reserves the right to test and recharge any battery in question.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE VOID AND EXCLUDED SUBSEQUENT TO ONE YEAR FROM THE DATE OF PURCHASE. THE REPLACEMENT OF THE BATTERY IS THE EXCLUSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY. YAMAHA MAKES NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND, AND NO REPRESENTATIVE, EMPLOYEE, DISTRIBUTOR OR DEALER OF YAMAHA HAS THE AUTHORITY TO MAKE OR IMPLY ANY REPRESENTATION, PROMISE OR AGREEMENT WHICH IN ANY WAY VARIES THE TERMS OF THIS LIMITED WARRANTY.

LIMITED WARRANTY EXCLUSIONS

Without limiting the generality of the foregoing in any way, and as part of its limited warranty exclusion, YAMAHA does not warrant that its battery is suitable for use in any application other than in a golf car or utility vehicle. As in the use of any battery, a prudent owner will read and study the charger owner's manual, the vehicle owner's manual, the operator's instructions, and the battery warning labels; and will exercise due care in working on or around batteries.

THE PROVISIONS OF THIS LIMITED WARRANTY SHALL NOT APPLY IF BATTERIES ARE SUBJECT TO ANY OF THE FOLLOWING CONDITIONS:

- Abuse or neglect such as improper fluid levels, loose wiring, rusted or corroded hardware.
- Lack of proper maintenance as outlined in the electric vehicle Owner's/Operator's Manual. For example, lack of regular battery watering or adding water to the battery before charging.
- Damage caused by improper installation of the battery.
- Neglect, breakage, freezing, fire, explosion, wreckage, the addition of any chemical, or the operation of the battery in an uncharged condition (below half-charge – 1.200 specific gravity).
- Battery charged by systems other than the original equipment type battery charger.
- On fleet golf cars, the use of any non-YAMAHA supplied electrical devices that consume more than one amp-hour per round or two amp-hours per day of battery energy. Examples of these devices include, but are not limited to: heating or cooling systems; GPS (global position system) devices; information gathering devices; lights; radios or stereos; or yardage measuring devices.
- Less than one charger per car or inadequate facility electrical power to power all chargers. Examples include more than one charger on a single circuit, circuit rating of less than 15 amps, or not enough circuits for the number of cars.
- In fleet applications, less than one battery charger per vehicle. For example, using only 10 battery chargers to charge a 15 car fleet.
- The use of any system that does not allow the battery chargers to shut off automatically. For example, timer systems that are designed to switch battery charger AC power on and off during peak demand hours.
- Damage not resulting from a defect in materials or workmanship or which occurs due to abuse or neglect (including failure to provide reasonable and necessary maintenance), accident, alteration or acts of God is excluded from this limited warranty.

THIS BATTERY IS INTENDED TO BE USED BY PERSONS WITH TRAINING AND EXPERIENCE WITH BATTERIES AND ONLY IN YAMAHA ELECTRIC VEHICLES. ANY OTHER USE RENDERS THE LIMITED WARRANTIES EXPRESSED HEREIN AND ALL IMPLIED WARRANTIES NULL AND VOID AND SAME ARE HEREBY EXCLUDED.

ALSO EXCLUDED FROM THIS LIMITED WARRANTY ARE ANY AND ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF USE OR REVENUE, LOSS OF TIME, INCONVENIENCE OR ANY OTHER ECONOMIC LOSS.

Some states do not allow limitation on the duration of an implied warranty, exclusions or limitations of incidental or consequential damages. Therefore, the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

For further information or to submit a warranty claim, contact your local Yamaha Golf-Car Dealer or Yamaha's customer relations at (800) 962-7926.

Yamaha Motor Corporation, USA
Kennesaw, GEORGIA 30144

EFFECTIVE DATE: 07/01/16


LIT-13710-EL-14

IMPORTANT LABELS

SAFETY AND INSTRUCTION LABELS

2

Please read the following labels carefully before operating your sport vehicle, and promptly replace any labels which become damaged or removed. Death or serious personal injury can result from failing to read and comply with the safety instruction labels.

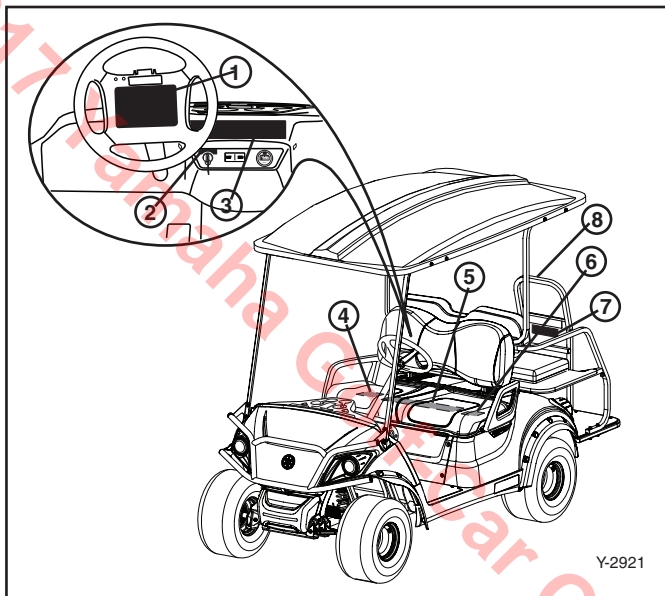

Y-2921

1

WARNING

To reduce the risk of accidents and injury or DEATH:

- This vehicle is recommended only for operators 16 and older with a valid motor vehicle license. Adults must supervise use by minors. Check state laws for minimum age requirements.
- Never travel at speeds too fast for the terrain, visibility conditions, or your experience.
- Drive with extra caution in congested areas, when operating in reverse, and when driving on wet, rough, or loose surfaces.
- This vehicle may go faster than the intended speed for golf course pathways. Do not use on such pathways without specific permission from golf course management.

OPERATING INSTRUCTIONS

- Read the warning label on the beverage holder panel before operating.
- Be sure occupants are seated.
- Select "FORWARD" OR "REVERSE" then turn main switch to "ON".
- Press the accelerator pedal to start moving. The motor will start and the parking brake will release automatically.
- To stop, release the accelerator pedal and press the brake pedal. Press the parking brake until it locks whenever leaving the vehicle.
- Come to a complete stop before reversing direction.
- Read the Owner's/Operator's Manual for more information.



ATTENTION

- This vehicle was not manufactured for use on public streets and does not comply with federal motor vehicle safety standards applicable to passenger cars.

YAMAHA

JP0-K7458-00

2



2

J2H

IMPORTANT LABELS

2

NOTICE / NOTIFICATION

Move switch to the "TOW" position before towing or storage. Failure to do so may lead to:

- Drive system damage when towing.
- Complete battery discharge and battery damage when storing long term.
- After moving switch from "RUN" to "TOW", wait 15 seconds minimum before switching again.

YAMAHA

TOW SWITCH



Mettre l'interrupteur a position "TOW" avant de remorquer ou avant l'entreposage. Non-observation pourrait:

- Dommerages de système d'entraînement en remorquant.
- Causer une decharge totale de la batterie et endommager la batterie pendant l'entreposage a long terme.
- Apres avoir change l'interrupteur de position "RUN" a position "TOW", attendre un minimum de 15 seconds avant de le remettre.

JW9-K8298-10

7

WARNING

To reduce the risk of accidents and injury or death:

CARRYING PASSENGERS

- Do not allow more than 2 passengers in this seat.
- Maximum load in seat: 181 kg (400 lb)
- Remain fully seated and hold on to the hand holds when in motion.
- Keep entire body inside vehicle.
- Do not allow children to ride unsupervised in this seat.

CARRYING CARGO

- When seat is flipped down, do not carry passengers in cargo area.
- Maximum load in cargo area (including footrest and bag/well): 110 kg (250 lb)
- Load may affect handling and stability.
- Secure cargo so that it will not shift - a loose load could change handling unexpectedly or be thrown forward and strike occupants.

- Keep weight in the cargo area centered side to side, and as low and as far forward as possible. Top-heavy loads increase the risk of overturn.
- When loaded with cargo:
 - Reduce speed and allow more room to stop.
 - Turn gradually and go slowly.
 - Avoid hills and rough terrain.
- Read Owner's/Operator's Manual before loading.



Static electricity sparks can ignite fuel vapor causing FIRE or EXPLOSION.

- Do not fill portable fuel container (gas can) in vehicle.
- Set fuel container on the ground and touch fuel nozzle to the unopened container before removing cap.
- Keep the fuel nozzle in contact with the container while fueling.
- Tighten cap before putting fuel container in vehicle.

- Keep hands, body, other persons, away from pinch points on surface below when flipping the seat.

JOB-K8683-00

8

WARNING

Improper tire pressure or overloading can cause loss of control. To reduce the risk of accidents and injury or death:

- Operating tire pressure: set with tires cold.


Tire size	Recommended	
	Front	Rear
20x10-8 4-ply	84 kPa, 12 psi	97 kPa, 14 psi
20x10-8 4-ply	152 kPa, 22 psi	152 kPa, 22 psi
18x8.50-8 4-ply	152 kPa, 22 psi	152 kPa, 22 psi

Never set tire pressure below minimum. Tire may dislodge from rim.

YAMAHA

JOB-F1686-00

IMPORTANT LABELS

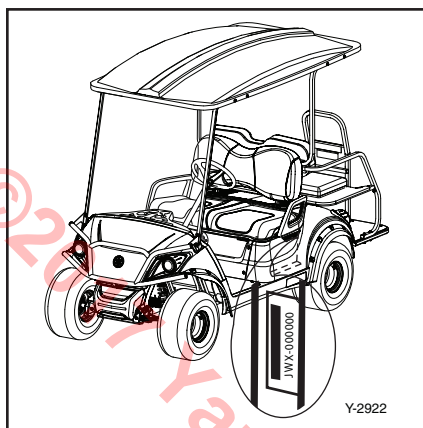

SERIAL NUMBER

The sport vehicle serial number is identified in the location shown.

TIP

The first three digits of the serial number are for model identification; the remaining digits are the unit production number. Keep a record of these numbers for reference when ordering parts from a Yamaha Golf-Car Company dealer.

2



SAFETY INFORMATION

3

Yamaha sport vehicles are designed to be simple to operate. However, be sure to observe the following to reduce the risk of serious injury or death due to loss of control and other hazards:

BEFORE OPERATING THE SPORT VEHICLE



- Read this Owner's/Operator's manual and all safety and instruction labels on the sport vehicle before operating.
- Perform the pre-operation checks found in Section 5 of this manual.
- This vehicle is recommended only for operators 16 and older with a valid motor vehicle license. Adults must supervise use by minors. Check state laws for minimum age requirements.
- Do not allow more than two occupants per seat. This sport vehicle is restricted to four occupants.
- Never give a ride to a passenger who is unable to put both feet firmly on the floorboard while seated with his or her back against the backrest.
- Never carry passengers on the cargo bed.
- Do not operate the sport vehicle while under the influence of alcohol or drugs; their effect on vision and judgment make operating a sport vehicle dangerous.
- This vehicle was not manufactured for use on public streets and does not comply with federal motor vehicle safety standards applicable to passenger cars.





SAFETY INFORMATION

3

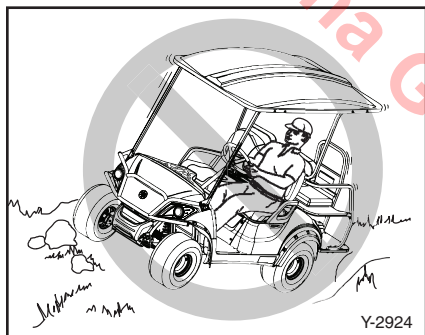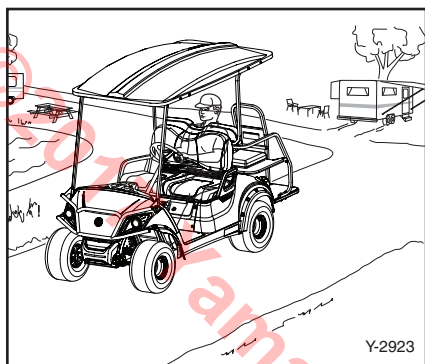

- Do not operate the sport vehicle on public streets, roads or highways unless allowed by law or the local regulating authority.
- Do not make any modification or addition which affects capacity or safe operation, or make any changes not in accordance with the Owner's/Operator's manual.

WHILE OPERATING THE SPORT VEHICLE

- Keep your entire body inside the sport vehicle, remain seated and hold on when the vehicle is in motion.
- Do not start the sport vehicle until all occupants are seated.
- Always keep both hands on the steering wheel when driving. Always go at a speed that is proper for the terrain, visibility, and operating conditions, and your experience. Go slowly and be extra careful when operating on unfamiliar terrain. Always be alert to changing terrain conditions when driving the vehicle.
- Never operate on excessively rough, slippery, or loose terrain.
- Use extra care in congested areas or when backing up. Always back up slowly, and watch carefully. Avoid starting or stopping abruptly.
- Avoid turning the steering wheel too sharply at higher speeds to avoid tipping or rolling the vehicle.
- Never attempt jumps or other stunts.



SAFETY INFORMATION

3

- Always drive slowly straight up or straight down slopes – never at an angle to avoid tipping or rolling the vehicle. Never operate the vehicle on slopes that are too steep for it or for your abilities.
- Never operate on slopes that are slippery or ones where you will not be able to see far enough ahead of you. Never go over the top of a slope at speed if you cannot see what is on the other side.
- Always check terrain carefully before going down slopes. Go as slowly as possible. Never go down a slope at high speed.
- Always check for obstacles before operating in a new area.
- Never operate the vehicle in fast flowing water or water deeper than 15 cm (6 in). Remember that wet brakes may have reduced stopping ability. Test your brakes after leaving water. If necessary, apply them several times to let friction dry out the linings.

CARRYING PASSENGERS

- This vehicle is designed to carry the driver and up to three passengers. When a seat is flipped down, do not carry passengers in the cargo area.
- Do not allow more than 2 people in each bench seat.
- Maximum load per seat: 181 kg (400 lb)
- Passengers must remain fully seated and hold on to the handrails when in motion.
- Do not allow children to ride unsupervised in the rear bench seat.



SAFETY INFORMATION

ACCESSORIES AND LOADING

Accessories

Accessories can affect the handling and control of your vehicle. Keep the following in mind when considering an accessory or operating a sport vehicle which has accessories.

- Choose only accessories designed for your sport vehicle. Your Yamaha dealer has a variety of genuine Yamaha accessories. Other accessories may also be available on the market. However, it is not possible for Yamaha to test all non-Yamaha accessories, nor have any control over the quality or suitability of them. Choose a genuine Yamaha accessory, or one that is equivalent in design and quality.

- Accessories should be rigidly and securely mounted. An accessory which can shift position or come off while you are operating could affect your ability to control the sport vehicle.
- Do not mount an accessory where it could interfere with your ability to control the sport vehicle. Examples include (but are not limited to) an object that limits your ability to turn the steering wheel or one that limits your view.
- Use extra caution when driving a sport vehicle with accessories. The sport vehicle may handle differently than it does without accessories.



SAFETY INFORMATION

3

Loading

Cargo can change the stability and handling of a sport vehicle. You must use common sense and good judgment when carrying cargo. Keep the following points in mind:

- Never exceed the weight limits shown on page 9-1. An overloaded sport vehicle can be unstable.
- Capacity for cargo area (including footrest and bagwell: 110 kg (250 lb))
- Cargo should be as far forward on the cargo area as possible, and distributed evenly from side to side. Be sure cargo is secured so that it cannot move around during operation.
- Make sure the load does not interfere with controls or your ability to see where you are going.
- Drive more slowly than you would without a load. The more weight you carry, the slower you should go. Although conditions vary, it is good practice not to exceed low range whenever you are carrying heavier loads or when towing a trailer.
- Allow more braking distance. A heavier vehicle takes longer to stop. Do not brake abruptly when carrying loads on the cargo bed.
- Avoid making sharp turns unless at very slow speeds to avoid tipping or rolling the vehicle.
- Avoid hills and rough terrain. Choose terrain carefully. Added weight affects the stability and handling of the sport vehicle.

MAINTENANCE REQUIRED FOR SPORT VEHICLE SAFETY

Practice the following to help ensure the safety of vehicle operators and passengers:

- **Preventative Maintenance.** Perform all scheduled maintenance in accordance with manufacturer's recommendations to provide the user with a safe, properly operating vehicle.
- **Personnel.** Allow only qualified, trained and authorized personnel to inspect, adjust and maintain the vehicle.
- **Parts and Materials.** Use only replacement parts and materials recommended by the manufacturer.
- **Ventilation.** Properly ventilate all maintenance and storage areas in accordance with applicable fire codes and ordinances to avoid fire hazards. Ventilation is also required to remove hydrogen gas from the vehicle storage areas during the battery charging process.

For electric powered vehicles, the amount of hydrogen gas emitted during charging depends on a number of factors, such as the condition of the batteries, the output rate of the battery charger and the amount of time the batteries are on charge. Because of the highly volatile nature of hydrogen gas and its propensity to rise and accumulate at the ceiling in pockets, a minimum of five air changes per hour is recommended. Consult applicable fire and safety codes for the specific ventilation levels requirement, as well as requirements for the use of explosion proof electrical apparatus.



SAFETY INFORMATION

3

SAFETY PRECAUTIONS DURING MAINTENANCE

When performing maintenance, follow all safety instructions contained in the manufacturer's operation and service manuals, as well as the following safety procedures:

- Properly immobilize vehicle before beginning any maintenance to avoid any unexpected vehicle movement.
- Properly block chassis before working underneath vehicle to avoid any unexpected vehicle movement.
- When working on the battery, do not smoke, or allow any sparks or open flames near the vehicle, to avoid any fires or explosions.
- Before working on an electric vehicle, disable the car's electrical system in accordance with the manufacturer's instructions to avoid electrical shock or damage to the electrical system.
- Use only properly insulated tools when working on electrically powered vehicles or around batteries to avoid electrical shock or damage to the electrical system.
- Maintain all safety devices, including brakes, steering mechanisms, warning devices and governors, in a safe operating condition. Do not modify these safety devices as supplied by the manufacturer.
- After each maintenance or repair, the vehicle must be driven by a qualified, trained and authorized person – in an area free of pedestrian traffic – to ensure proper operation and adjustment.

- Record all maintenance performed in a maintenance record log by date, name of person performing maintenance and type of maintenance. Periodically inspect maintenance log to ensure accurate and complete entries.
- Maintain in a legible condition all nameplates, warnings and instructions provided by the manufacturer.
- If new nameplates, warnings or instructions are needed, contact your Yamaha dealer.


STORAGE AND BATTERY CHARGING

Take the following precautions to ensure maintenance worker safety:


- Only use battery changing and charging facilities and procedures that are in accordance with applicable ordinances and regulations to avoid explosions, electrical shock or damage to the electrical system.
- Periodically inspect charging facilities and procedures to be certain that applicable safety codes, regulations and procedures are being followed to avoid any fires or explosions.

CONTROLS


4

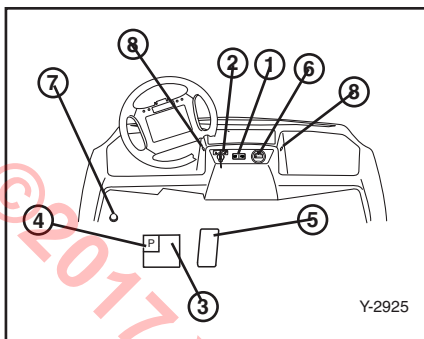

Y-2925

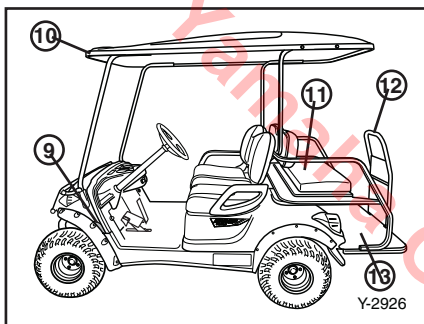


Y-2926

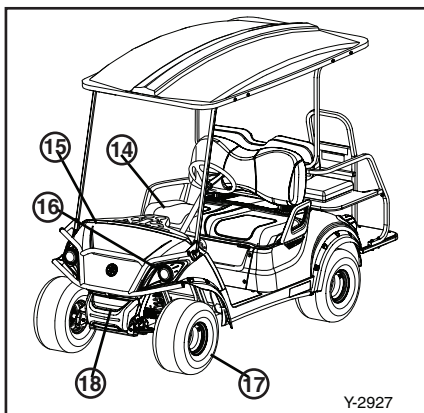


Y-2927

FEATURES

- | | |
|-----------------------|-------------------------|
| ① Drive select switch | ⑬ Rear footrest |
| ② Main/Light switch | ⑭ Front seat |
| ③ Brake pedal | ⑮ Front body |
| ④ Parking brake pedal | ⑯ Headlights |
| ⑤ Accelerator pedal | ⑰ Front tire |
| ⑥ Battery gauge | ⑱ Front bumper |
| ⑦ Horn switch | ⑲ Rear body |
| ⑧ USB ports | ⑳ Rear tire |
| ⑨ Reflector | ㉑ Rear bumper |
| ⑩ Sun roof | ㉒ Taillights |
| ⑪ Rear seat | ㉓ Side handrail |
| ⑫ Rear handrail | ㉔ Batteries |
| | ㉕ Tow switch |
| | ㉖ DC charger receptacle |

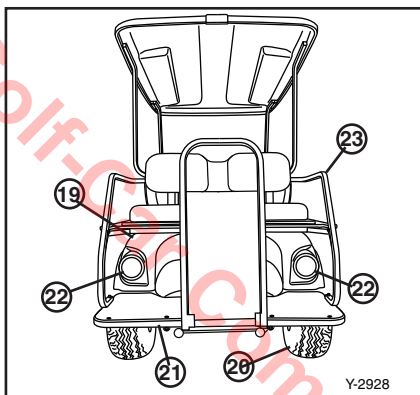


Y-2928

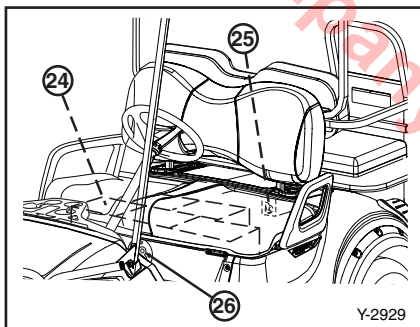

Y-2929

CONTROLS

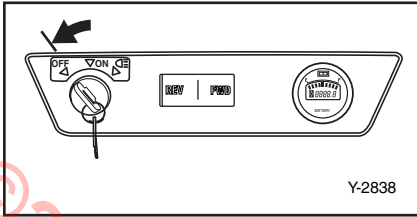


MAIN SWITCH

The main switch controls the following items:

“OFF”


All electrical circuits are switched off (motor controller unit remains energized). The sport vehicle cannot be operated. The key can be removed only in this position.

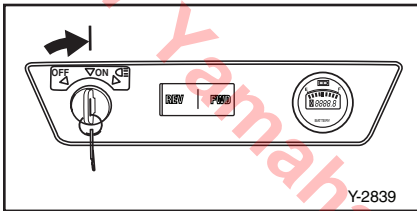

“ON”


The electrical power circuit is switched on. The sport vehicle can be driven.

4

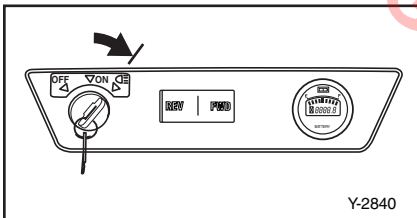

“ON” WITH LIGHTS

The functions for this position are the same as for the ON position; however, this position will activate the headlights and taillights.

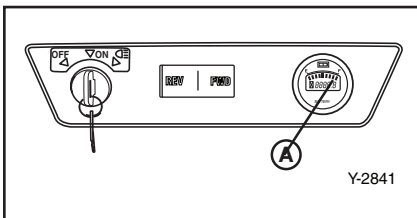


BATTERY GAUGE

The battery gauge displays how much charge is left in the batteries. When the batteries are at full charge, all the LEDs will be lit.

Ⓐ Battery gauge


CONTROLS

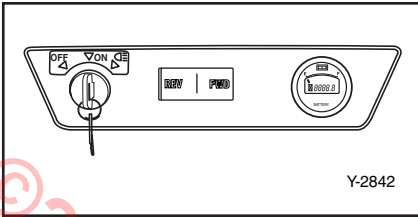

As the battery energy decreases, the LEDs will move to the left toward the “E.” When the LED light below the “E” is the only one lit, the batteries must be charged.

Use the table to determine the remaining battery capacity. For example, if 7 of the 9 LED lights are lit, batteries still have approximately 47.4 volts left. When the batteries fall to 43.4 volts or less, 1 LED will blink on and off, meaning the batteries should be charged immediately.

BAR LEVEL	9	8	7	6	5	4	3	2	1	1 BLINK
VOLT	48.95	47.8	47.4	46.9	46.4	46.0	44.8	44.0	43.5	43.4 >

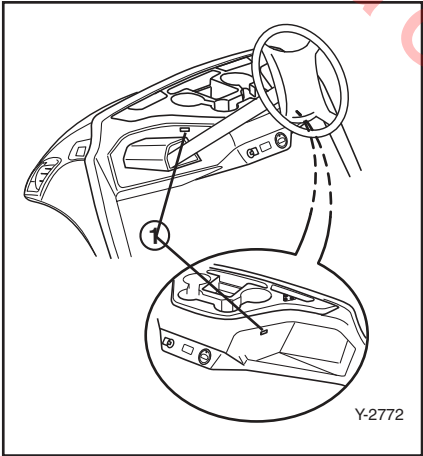


USB PORTS

A USB port is located inside the dash on the driver side and passenger side. These can be used to power or charge USB devices or accessories. The USB is only powered when the key is in the ON position.

- ① USB port


CONTROLS

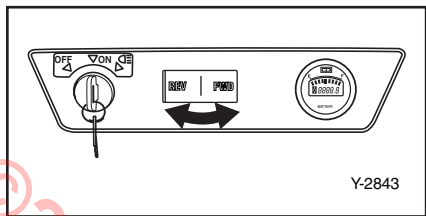

DRIVE SELECT SWITCH


The drive select switch is used to shift the sport vehicle into forward or reverse. After coming to a complete stop, move the switch to the desired stop, move the switch to the desired position.

Switch Position	Car Movement
FWD	FORWARD
REV	REVERSE

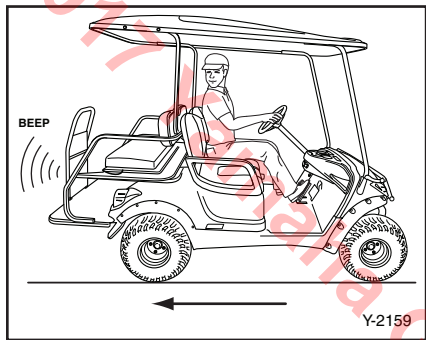

TIP

The reverse alarm will sound when the drive select switch is turned to "REV."

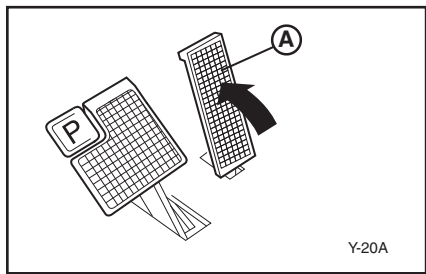


ACCELERATOR PEDAL

The accelerator pedal controls the sport vehicle's speed.

Action	Car Speed
Depress pedal	Increase
Release pedal	Decrease

Ⓐ Accelerator pedal

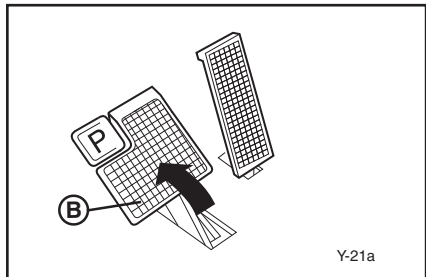


BRAKE PEDAL

Press down on the brake pedal to stop the sport vehicle.

Ⓑ Brake pedal

CONTROLS

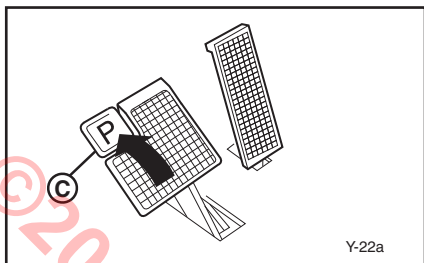

PARKING BRAKE PEDAL


Press down on the parking brake pedal whenever parking the sport vehicle.

© Parking brake pedal

TIP

Release the parking brake by depressing the accelerator pedal.

The parking brake will automatically release when the accelerator pedal is depressed. If the main switch is in the "ON" position, depressing the accelerator may suddenly cause the sport vehicle to move. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

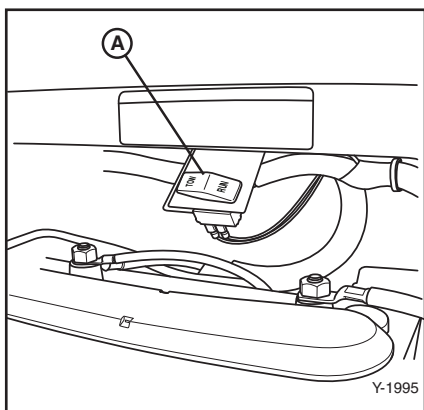

TOW SWITCH

Before operating the vehicle, make sure the tow switch is in the "RUN" position.


Ⓐ Tow switch

NOTICE

Ensure that the "Drive Select Switch" is in the "FWD" position and then move the "TOW Switch" to "TOW" before towing.


After moving switch from "RUN" to "TOW," wait 15 seconds minimum before switching again. Failure to do so may lead to drive system damage while towing.

CONTROLS

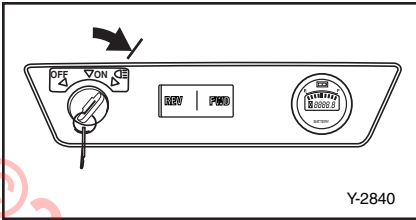

HEADLIGHT/TAILLIGHT ON POSITION

Turn the main switch all the way to the right to the second ON position. This will activate the headlights and taillights.

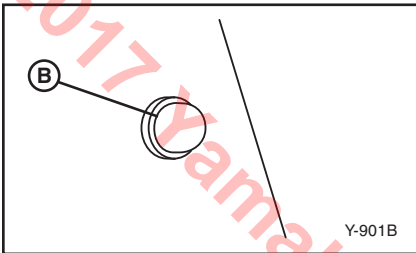


HORN SWITCH

The horn is located adjacent to the brake pedal, and is activated by depressing with your foot.

Ⓑ Horn switch

TIP

It is advisable to sound the horn when approaching blind corners.

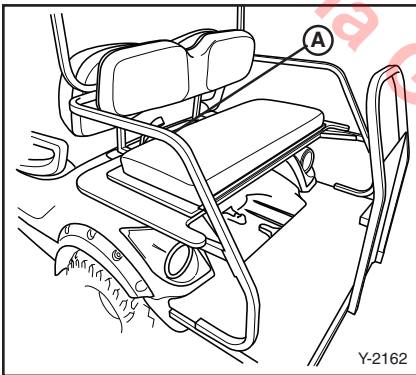


REAR SEAT

The rear seat is designed to carry a maximum of two passengers. All passengers should remain inside the sport vehicle, remain seated with their feet on the rear footrest and hold onto the handrails while the vehicle is in motion.

The rear seat can be folded down to a cargo bed. Grab the strap and lift up the seat and fold it to the rear of the vehicle.

Ⓐ Strap

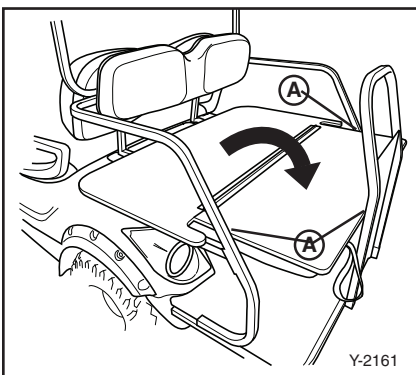

There are several pinch points for the rear seat when folding it down. Use care when folding the seat down so nothing is in the area of these pinch points.

Ⓐ Pinch points

CONTROLS

4

Never allow passengers to ride on the cargo bed when it is folded down. There is no seating and passengers can easily fall off. Death or serious personal injury can result in failure to comply.

Always make sure your cargo is secure when using the cargo bed. Tie the load down with cords or straps where needed.

PRE-OPERATION CHECKS

Pre-operation checks should be made each time you use your sport vehicle. Get in the habit of performing the following checks in the same way so that they become second nature.

To keep vehicle from moving while performing pre-operation checks:

- Remove main switch key.
- Apply parking brake.

Death or serious personal injury can result from failing to comply with the safety instructions in this manual.


5

PRE-OPERATION CHECKS

Refer to the Periodic Maintenance charts on pages 7-1 and 7-2.

SEAT

Open the seat for checking and servicing.

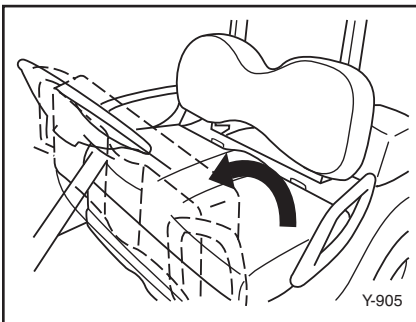

PRE-OPERATION CHECKS

BATTERY

Charge batteries before each use. See charging steps in Chapter 7, *Maintenance*.

Check that the batteries are held securely in place to prevent the batteries from being damaged from vibration or jarring. Also check that no battery caps are missing to prevent battery acid from spilling from the battery. Check the battery terminals for corrosion.

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes or clothing. Ventilate when charging or using in enclosed space. Always shield eyes when working near batteries. KEEP OUT OF REACH OF CHILDREN.

TIRE CONDITION

Tire Air Pressure

Check the tire air pressure before operating the sport vehicle.

Tire pressure:



Front: 82 kPa (12 psi)

Rear: 96 kPa (14 psi)


Tire Wear Limit

Check the tire surface for damage, cracks or embedded objects. When tire tread wears down to 3 mm (0.12 in.), replace the tire.

Ⓐ Wear limit

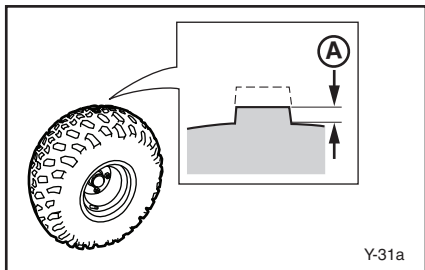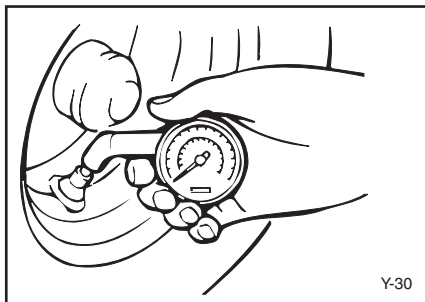

PRE-OPERATION CHECKS

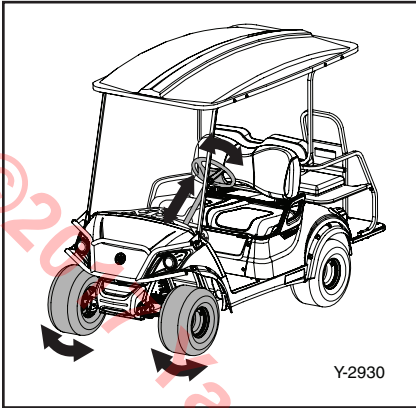


STEERING SYSTEM

Check the steering system for excessive freeplay by:

- moving the steering wheel up and down, and back and forth.
- turning the steering wheel slightly to the right and left.

If you feel excessive freeplay, or hear rattling sounds which may indicate loose steering components, consult a Yamaha dealer.

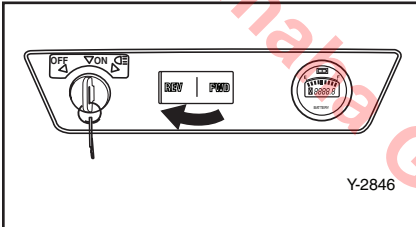


REVERSE ALARM

Check the reverse alarm by moving the drive select switch to "REV" for reverse. The alarm should sound.

5

PEDAL OPERATION

Check the following pedal controls for proper operation. If a pedal does not work properly, consult a Yamaha dealer.

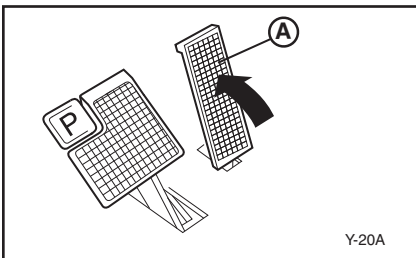


Accelerator Pedal

With the main switch in the "OFF" position, make sure the accelerator pedal operates smoothly.

Ⓐ Accelerator pedal

PRE-OPERATION CHECKS

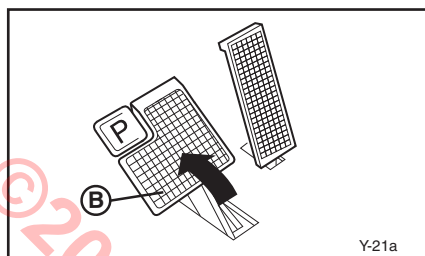


Brake Pedal

Make sure the brake pedal feels firm when pressed and returns to its original position when released.

Ⓑ Brake pedal

Consult your Yamaha dealer before using your sport vehicle if you suspect brake problems.

5

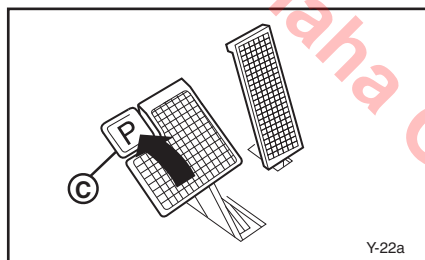

Parking Brake Pedal

Make sure the parking brake pedal locks in place with a positive click, and releases when the accelerator pedal is pressed.


Ⓒ Parking brake pedal

TIP

Release the parking brake by depressing the accelerator pedal.


Headlights/Taillights

Ensure the headlights and taillights are operational.

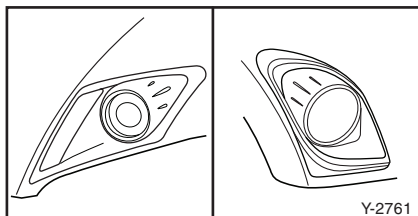

Never operate the sport vehicle at night or during inclement weather without properly working headlights/taillights. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

PRE-OPERATION CHECKS

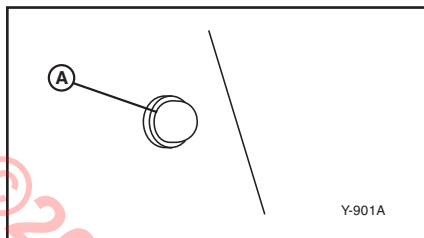

Horn Switch



Make sure the horn operates correctly.

- Ⓐ Horn switch


BODY AND CHASSIS

Before each use, visually inspect the sport vehicle body and chassis for damaged and/or missing parts.

OPERATION

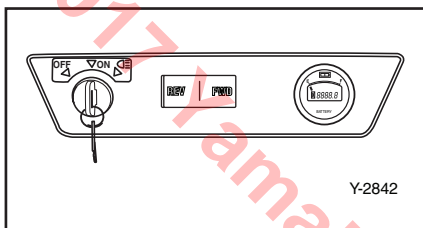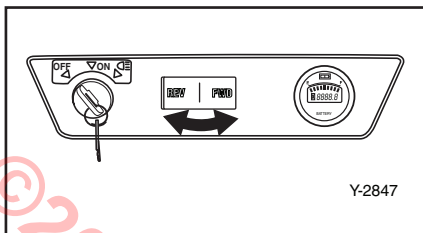

6

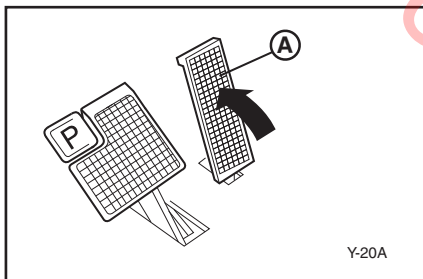

STARTING

1. With the parking brake applied, turn the drive select switch to “FWD” for forward, or “REV” for reverse.

NOTICE

Do not shift from “F” (forward) to “R” (reverse) while the sport vehicle is moving. Transmission damage can result.

2. Turn the main switch to “ON.”

Do not depress the accelerator pedal when turning on the main switch or the sport vehicle may suddenly start moving. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.


3. Check that your path is clear in the direction you plan to go, and slowly depress the accelerator pedal. The sport vehicle will start to move.

Ⓐ Accelerator pedal

TIP

The parking brake automatically releases when the accelerator pedal is depressed.

OPERATION

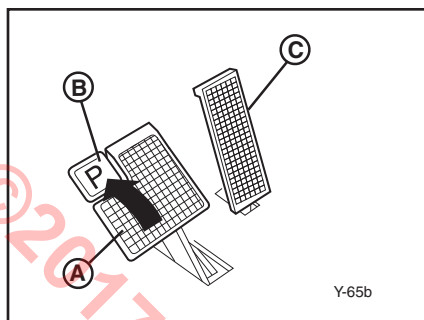

STOPPING

To stop the sport vehicle, gradually press down on the brake pedal.

(A) Brake pedal

When the sport vehicle has come to a stop, apply the parking brake pedal and turn the main switch to "OFF"

(B) Parking brake pedal

NOTICE

Do not hold the sport vehicle on an incline with the accelerator – use the brake. Transmission damage can result.

6

LOADING

Cargo can change the stability and handling of a vehicle.

You must use common sense and good judgment when carrying cargo. Keep the following points in mind:

- Never exceed the weight limits shown. An overloaded vehicle can be unstable.
- Load cargo on the cargo bed as close to the center of the vehicle as possible to avoid tipping the vehicle.

MAXIMUM LOADING LIMIT

- Vehicle Rated Capacity (passengers/cargo/trailer/access) 340 kg (749.6 lb)
- G.V.W. (curb & vehicle rate capacity) 886 kg (1,954 lb)

OPERATION

- Cargo should be as far forward on the bed as possible, and distributed evenly from side to side. Be sure cargo is secured so that it cannot move around during operation.

- Make sure the load does not interfere with controls or your ability to see where you are going.

- Drive more slowly than you would without a load. The more weight you carry, the slower you should go.

- Allow more braking distance. A heavier vehicle takes longer to stop.

- Avoid making sharp turns unless at very slow speeds to avoid tipping or rolling the vehicle.

- Avoid hills and rough terrain. Choose terrain carefully. Added weight affects the stability and handling of the vehicle.

Uncontrolled Movement Hazard

- Never exceed the stated load capacity for this vehicle.
- Distribute the load evenly.
- Secure cargo in cargo bed.
- Reduce speed and allow greater distances for braking.

Fall and Thrown Object Hazard

- Do not carry passengers in the cargo bed.

Fire or Explosion Hazard

- Do not fill fuel containers on the cargo bed.
- Set fuel container on the ground.
- Keep fuel nozzle in contact with can inlet while filling.
- Tighten cap before setting fuel container on cargo bed.

MAINTENANCE

PERIODIC MAINTENANCE CHARTS

Regular maintenance is required for the best performance and safe operation of your sport vehicle.

Be sure to turn off the main switch and apply the parking brake when you perform maintenance, unless otherwise specified. If the owner is not familiar with servicing the machine, death or serious personal injury can result. When in doubt the work should be done by a Yamaha dealer or other qualified mechanic.

NOTICE

Yamaha Golf-Car Company does not approve the use of high-pressure washers to clean the products they manufacture. Doing so may damage the finish on the body or result in doing other damage not covered by warranty.

CS - CHECK CA - CHECK AND ADJUST R - REPLACE S - SERVICE CL - CLEAN AND LUBRICATE L - LUBRICATE

	Remarks	Daily Pre- Operation	40 rounds 20 hours 100 miles 160 kms (Every Month)	250 rounds 125 hrs 600 mls 1000 kms (Every 6 months)	500 rounds 250 hrs 1200 mls 2000 kms (Every Year)	1000 rounds 500 hrs 2500 mls 4000 kms (Every 2 years)	2000 rounds 1000 hrs 5000 mls 8000 kms (Every 4 years)	Page
PRE-OP	Charge	S	S	S	S	S	S	7-5/7-6/ 7-7
	Clean battery tops, check for tightness of hold-down screws and terminals	S	S	S	S	S	S	7-3/5-2/ 8-1
	Check brake pedal freeplay and adjust if necessary	CS	CA	CA	CA	CA	CA	7-12
	Check steering operation	CS	CS	CS	CS	CS	CS	5-3
	Check tire pressure, tread depth, tire surface for damage	CS	CA	CA	CA	CA	CA	5-2
	Check body and chassis for damage	CS	CS	CS	CS	CS	CS	5-5
	Check tightness of all bolts, nuts, screws and rivets	CS	CS	CS	CS	CS	CS	*
	Check reverse alarm operation	CS	CS	CS	CS	CS	CS	5-3
EVERY MONTH	Check electrolyte level		CS	CS	CS	CS	CS	7-4
	Check for loose or broken connections		CS	CS	CS	CS	CS	*
	Check pedal operation		CS					5-3
EVERY 6 MONTHS	Check all wire insulation for cracks and/or worn spots			CS	CS	CS	CS	*
	Check shock absorbers for oil leaks and damaged springs			CS	CS	CS	CS	*

* Items without a page number reference should be serviced by a Yamaha dealer or other qualified mechanic. This manual does not contain these procedures. They are contained in the Service Manual.


MAINTENANCE

CS - CHECK CA - CHECK AND ADJUST R - REPLACE S - SERVICE CL - CLEAN AND LUBRICATE L - LUBRICATE

	Remarks	Daily Pre- Opera- tion	40 rounds 20 hours 100 miles 160 kms (Every Month)	250 rounds 125 hrs 600 mls 1000 kms (Every 6 months)	500 rounds 250 hrs 1200 mls 2000 kms (Every Year)	1000 rounds 500 hrs 2500 mls 4000 kms (Every 2 years)	2000 rounds 1000 hrs 5000 mls 8000 kms (Every 4 years)	Page
EVERY YEAR	Perform a discharge test				S	S	S	*
	Apply Terminal protectant				S	S	S	—
	Check rear axle bearing play for roughness or freeplay				CS	CS	CS	*
	Check steering knuckle bushing freeplay / Adjust wheel alignment				CA	CA	CA	*
	Check wheel nut tightness, front wheel bearing play				CS	CS	CS	7-11
	Check transaxle oil level and inspect for leakage				CS	CS	CS	7-10
	Check pedal stop operation and adjust if necessary				CA	CA	CA	*
	Adjust parking brake release				CA	CA	CA	7-13
EVERY 4 YEARS	Replace transaxle oil						R	*
	Inspect brake shoes and adjust or replace if necessary						CA	*

* Items without a page number reference should be serviced by a Yamaha dealer or other qualified mechanic. This manual does not contain these procedures. They are contained in the Service Manual.

MAINTENANCE

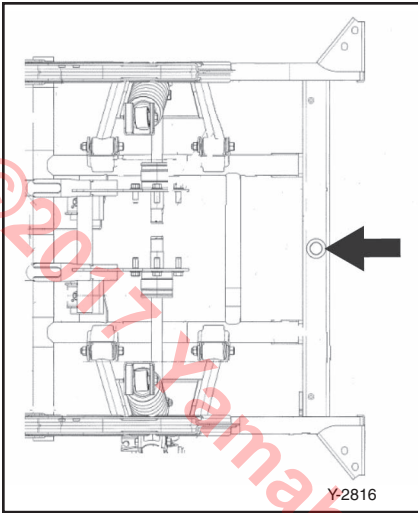

Rear Lifting Point

If the rear of the car needs to be lifted for a maintenance procedure, make sure it is lifted at the correct rear lifting point (see arrow).

Battery Care

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. It contains sulfuric acid. Avoid contact with skin, eyes or clothing.

Antidote:

EXTERNAL: Flush with water

INTERNAL: Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Call physician immediately

EYES: Flush with water for 15 minutes and get prompt medical attention.

Batteries produce explosive gases. Keep sparks, flame, cigarettes, etc., away.

Ventilate when charging or using in an enclosed space. Always shield eyes when working near batteries.

KEEP OUT OF REACH OF CHILDREN.

Six 8-volt deep-cycle batteries provide power for your vehicle and must be properly maintained and recharged for maximum performance and service life.

To maintain your batteries:

1. Clean the tops of the batteries with a solution of baking soda and water, as necessary, to remove corrosion.

MAINTENANCE

NOTICE

Do not allow cleaning solution to enter battery cells. Serious battery damage can result.

2. Check the fluid level before and after charging.



- **Before charging:** Only add distilled water if fluid is below the top of the plates, and then add just enough to cover plates.
- **After charging:** Open the vent caps and look inside the fill wells. Add distilled water until the electrolyte level is 3 mm (1/8") below the bottom of the fill well. A piece of rubber can be used safely as a dipstick to help determine this level. Clean, replace and tighten all vent caps.

NOTICE

Normal tap water contains minerals which are harmful to a battery; therefore, refill only with distilled water.

3. Using a hydrometer, check the specific gravity of the battery fluid in each cell against the readings on the chart below. Consult a Yamaha dealer if any low readings are found, or if readings vary more than one point between cells.

7

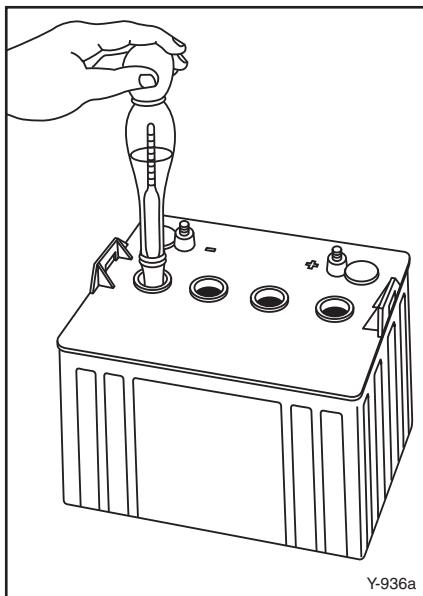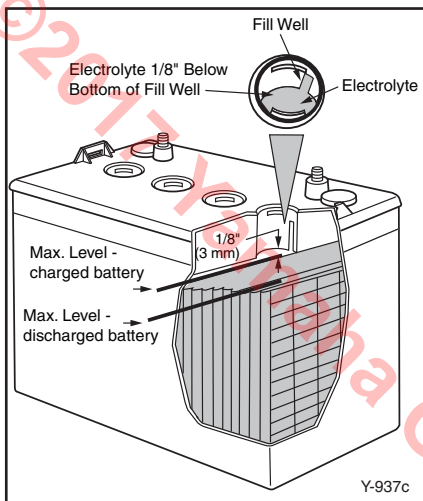

MAINTENANCE

Temperature		Satisfactory Uncorrected Hydrometer Reading
°C	°F	
48.9	120	1.244
43.3	110	1.248
37.8	100	1.252
32.2	90	1.256
26.7	80	1.260
21.1	70	1.264
15.6	60	1.268
10.0	50	1.272
4.4	40	1.276
-1.1	30	1.280


Battery Charging

Read and understand the owner's manual provided with your vehicle's battery charger before charging batteries. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

Explosive hydrogen gas is produced while batteries are being charged. Only charge batteries in well-ventilated areas (a minimum of five air changes per hour is recommended). Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

To charge the batteries in your vehicle, follow the instructions contained in your battery charger's owner's manual. The following is a summary of the charging steps.

MAINTENANCE

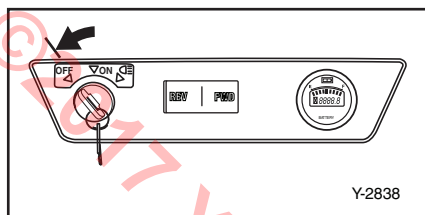

NOTICE

Do not attempt to recharge your vehicle's batteries without thoroughly reading and understanding the owner's manual provided with your charger.

1. Turn main switch key to "OFF" position.

NOTICE

Always put the tow switch in the TOW position before charging battery or damage to the electrical system may result.

2. Lift up the seat and move the tow switch to the TOW position.

NOTICE



Use only battery chargers that are rated for use with 48-volt Yamaha vehicles. Serious battery damage can result. Thoroughly read and understand the user manual supplied with your 48-volt charger.

3. With the charger properly connected and grounded (see charger's owner's manual), insert the DC output into the DC charger receptacle.

Do not disconnect the DC output cord from the DC charger receptacle when the charger is on or an arc could occur that may cause an explosion.

- ① Red Power ON LED
- ② Yellow Charging LED
- ③ Green Charged LED

7

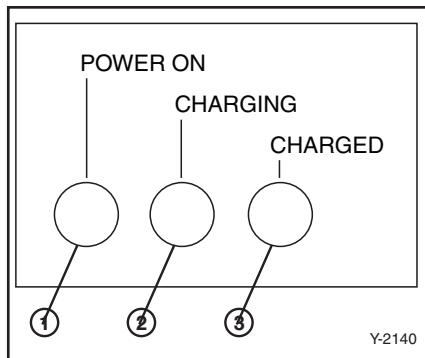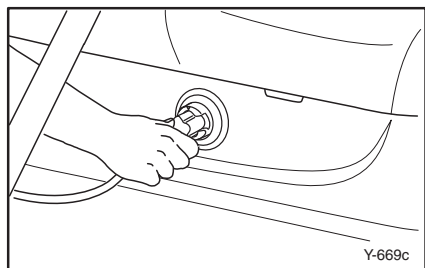


MAINTENANCE

4. When the charger is plugged into the AC power, the Power ON LED illuminates continuously.
5. If any of the LEDs blink for several minutes after the charger is turned on, there is a problem with the batteries or the charger. Contact your Yamaha Dealer.
6. During normal charging, the Charging LED continually illuminates.
7. The Charged LED illuminates automatically when the batteries reach full charge.
8. After the Charged LED is illuminated, disconnect the DC output plug from the DC charger receptacle by grasping the plug body and pulling the plug straight out of the receptacle.

Battery Installation


7

When working with batteries, do not put wrenches or other metal objects across the battery terminals. An arc can occur causing explosion of the battery.

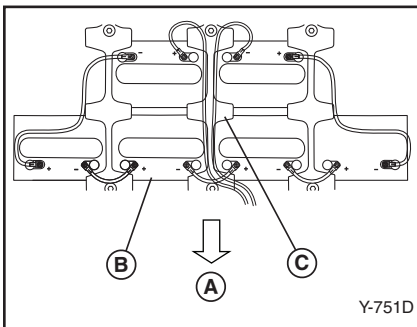

1. Install the battery hold-down plates and torque to 7-9 Nm, 0.7-0.9 m·kg (62-80 in·lb) as shown.
 - (A) Forward
 - (B) Battery
 - (C) Battery hold-down plate
2. Connect the wire leads and torque to 9-10 Nm, 0.9-1.0 m·kg (80-89 in·lb) as shown.

MAINTENANCE

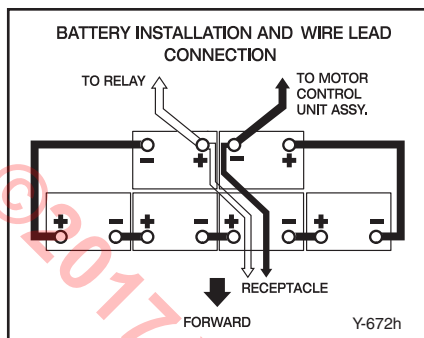

When installing batteries:

- Carefully place battery cables and hold-downs making sure that cables do not lay across vent caps.
- Always remove the negative (-) cable to the motor controller first and install it last. A spark can occur causing an explosion or fire at the battery.

NOTICE

Do not over-tighten the battery holddown nuts. Excessive force will damage the battery casing.

MAINTENANCE

Fuse Replacement

Be sure to use the specified fuse. Using a wrong fuse can cause electrical system damage and create a fire hazard.


NOTICE

When replacing a fuse, be sure the main switch is turned off to prevent accidental short-circuiting and electrical system damage.

1. Locate the in-line fuse holder on the main wire harness adjacent to the tow switch.
2. Pull fuse holder cover off.
3. Pull fuse out, inspect and replace if necessary.



- (A) Fuse holder
(B) Fuse

7

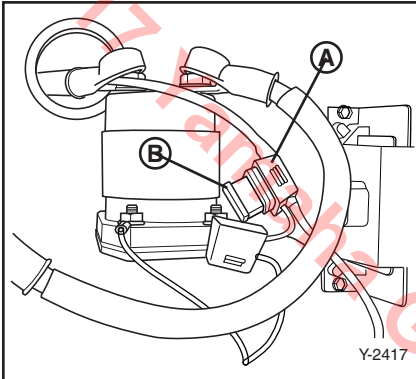


Fuse Type:
10 Amp, Blade Style

MAINTENANCE

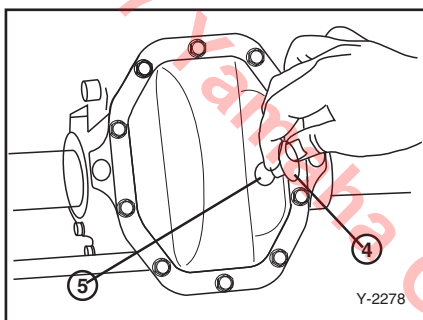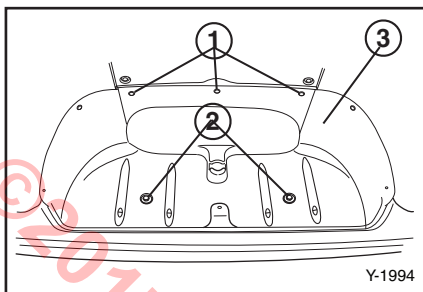

7

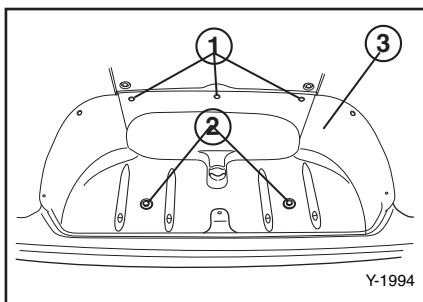

Transaxle Oil

To check transaxle oil level:

1. Place the sport vehicle on a flat, level surface.
2. Remove plastic rivets ① and two bolts ②, and remove the bag holder insert ③.
3. Place an oil pan under the transaxle case.
4. Clean the area around the oil level plug ④ and then remove the plug.

NOTICE

Do not allow foreign material to enter transaxle. Serious transaxle damage can result.


5. The oil level should be right at the bottom of the oil level plug hole ⑤ or just starting to flow out of the hole.
6. If needed, add SAE 90 gear oil until it starts to flow from the oil level plug hole.
7. Allow excess gear oil to flow out of the hole until it stops.
8. Install the oil level plug.
9. Install the bag holder insert ③ and secure with two bolts ② and seven plastic rivets ①.

TIP

For transaxle oil replacement, consult a Yamaha dealer or other qualified mechanic.

MAINTENANCE

Before performing wheel or brake maintenance, verify that the main switch is in the “OFF” position. Accidental starting of the vehicle could cause the vehicle to move, causing death or serious personal injury.

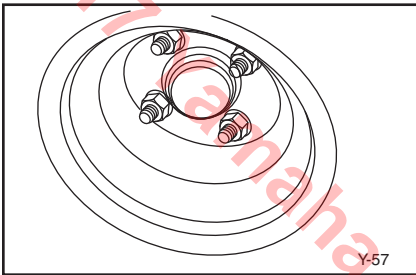

Wheel Replacement

To remove and install a wheel on your sport vehicle:

1. With the wheels blocked to prevent the sport vehicle from moving, loosen the wheel nuts.
2. Elevate the sport vehicle with a jack and remove the wheel nuts and the wheel.
3. Reverse the removal steps when installing the wheel.

Wheel nut tightening torque:
88 Nm, 8.8 m·kg (65 ft·lb)


Brake Adjustment

The brakes on your sport vehicle are self-adjusting.

Before you operate the sport vehicle, press down on the brake pedal several times to make sure the brakes are functioning properly.

Consult your Yamaha dealer before using your sport vehicle if you suspect brake problems. Brake failure could result in a serious accident. Death or serious personal injury can result from failing to comply with the safety instructions in this manual.

MAINTENANCE

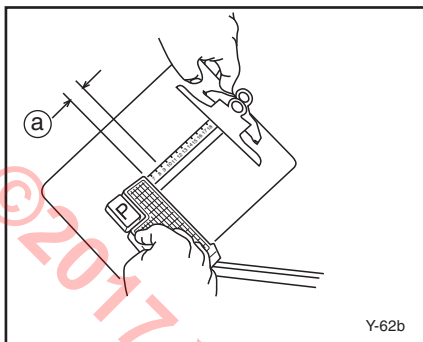



Brake Pedal Free Play Adjustment

Check the brake pedal free play by pressing against the pedal with two fingers (using light force) and measuring the distance the pedal travels before resistance is felt.

Brake pedal free play (a):
50-55 mm (1.97-2.17 in.)


To adjust the brake pedal free play:

1. Remove the floor mat and service lid from the floor of the sport vehicle.
2. If the free play distance needs adjusting, loosen the lock nut (A) and turn the adjusting nut (B) in or out until the free play specification is met. Then tighten the lock nut in place.

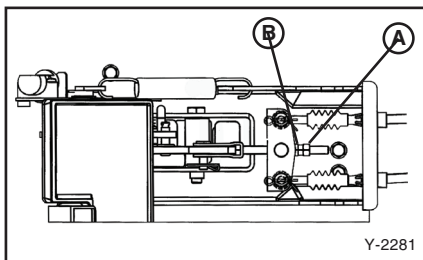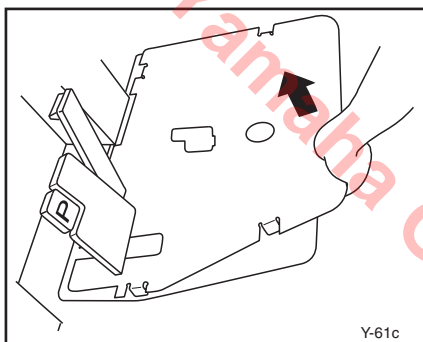

Do not over-tighten the brake cables. Over-tightening will increase brake wear and affect overall performance of sport vehicle. Premature brake wear can result. Death or serious personal injury can result from failing to comply with the warning labels in this manual.

MAINTENANCE

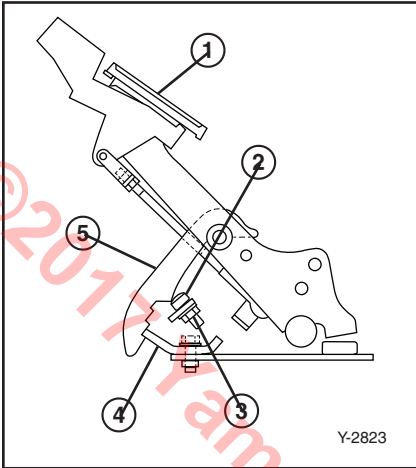

Parking Brake Release Adjustment


NOTICE

Before performing parking brake release adjustment, adjust brake pedal free play.

1. Apply pressure to the parking brake pedal until the brake nail catches the first latch position on the sector.
2. Loosen the locknut and turn the bolt counterclockwise until it contacts the sector.
3. Turn the bolt clockwise $3/8$ (120 degrees), then tighten locknut.

- ① Parking brake pedal
- ② Bolt
- ③ Locknut
- ④ Brake nail
- ⑤ Sector



MAINTENANCE

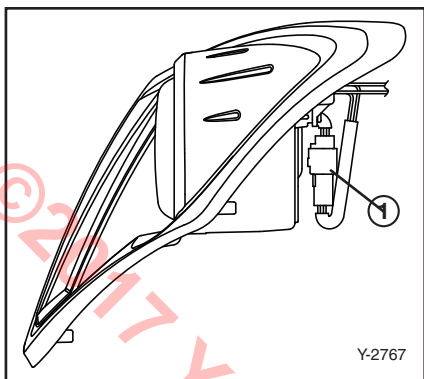

Replacing a Headlight Bulb

If the headlight burns out, replace it as follows:

1. Disconnect the wire connector ① from the headlight assembly.
2. Remove the three screws ② and remove the light control unit.
3. Remove the four screws ③ to remove the headlight assembly from the holder.
4. Remove the headlight assembly from the holder.
5. Install new headlight assembly into holder and secure with the four screws.
6. Install the light control unit and fasten with three screws.
7. Connect the wire connector to the headlight assembly.

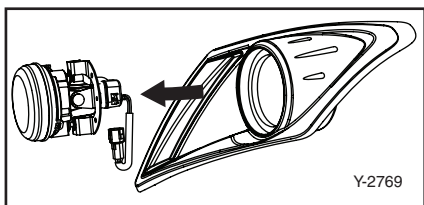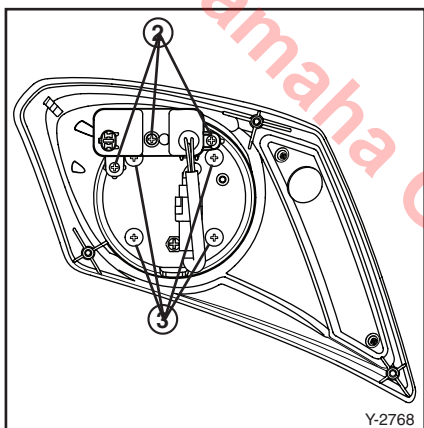

MAINTENANCE

Adjusting a Headlight


NOTICE

It is recommended to have the headlight adjustment performed by a Yamaha dealer.

TIP

The screw can be accessed from under the fender.


1. Using a Phillips head screwdriver, turn the adjusting screw ①.
2. Turning the screw clockwise will lower the beam and turning the screw counter-clockwise will raise the beam.

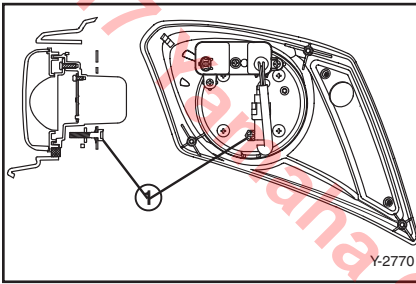

7

Replacing a Taillight Bulb

1. If a taillight bulb burns out, replace the bulb assembly ① by removing the rubber grommet ② from the bezel assembly ③.
2. Remove the wire connector, replace the bulb, and reinstall by fitting the rubber grommet ② over the bulb assembly ① and bezel ③.

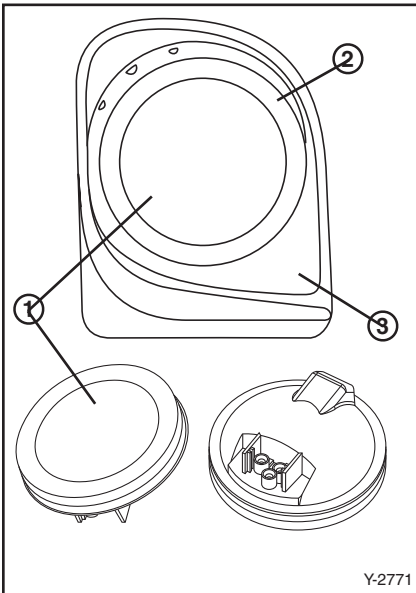

STORAGE

Perform the following preparations when storing your vehicle for extended periods of time.

NOTICE

Yamaha Golf-Car Company does not approve the use of high-pressure washers to clean the products they manufacture. Doing so may damage the finish on the body or result in doing other damage not covered by warranty.

TIP

Turn main switch key to "OFF" position, remove key and store key in a safe place.

CHASSIS PREPARATION

1. Verify the tire pressure is set to:
Front: 82 kPa (12 psi)
Rear: 96 kPa (14 psi)
2. Clean exterior of the vehicle and apply a rust inhibitor.
3. Cover the vehicle with a breathable cover and store it in a dry, well-ventilated area.

BATTERY PREPARATION

1. Recharge the batteries and check the fluid levels at least once a month.

NOTICE

Do not allow cleaning solution to enter battery cells. Serious battery damage can result.

2. Clean the tops of the batteries with a solution of baking soda and water, as necessary, to remove corrosion.

SPECIFICATIONS

GENERAL SPECIFICATIONS

Items	SPORT VEHICLE
Dimensions:	
Overall length	2750 mm (108.3 in.)
Overall width	1291 mm (50.8 in.)
Overall height (steering height)	1277 mm (50.3 in.)
Floor board height	375 mm (14.8 in.)
Wheelbase	1646 mm (64.8 in.)
Tread:	
Front	963 mm (37.9 in.)
Rear	1022 mm (40.2 in.)
Minimum ground clearance	134 mm (5.3 in.)
Weight:	
Dry weight	528.5 kg (1,165 lb)
Performance:	
Factory and maximum speed setting	24 km/h (15 mph)
Minimum turning radius	3.0 m (9.8 ft)
Seating capacity	Two occupants per seat, four occupants maximum
Vehicle rated capacity (passengers, cargo, trailer, access)	340 kg (749.6 lb)
Gross vehicle weight (curb & vehicle rate capacity)	886 kg (1,954 lb)
Fuel tank capacity	22.0 L (5.8 U.S. gallons)

SPECIFICATIONS

ENGINE

Items	SPORT VEHICLE
Description:	
Engine type	4-stroke, Gasoline, OHV
Number of cylinders	Single
Displacement	357 cm ³
Bore x stroke	85 x 63 mm (3.30 x 2.48 in.)
Compression ratio	8.1:1
Rated output	8.5 kw (11.4 hp)/3500 rpm
Cooling system	Forced air-cooled
Starting system	Starter
Ignition system	TCI Magneto
Spark plug type	BPR2ES
Spark plug gap	0.7-0.8 mm (0.028-0.031 in.)
Lubrication system	Splash
Engine oil type	YAMALUBE SAE 10W30 4-cycle oil
Engine oil capacity	1.0 L, 1000 cc (1.0 US qt)
Oil change quantity	1.0 L, 1000 cc (1.0 US qt)

TRANSMISSION

Items	SPORT VEHICLE
Differential/reduction gear:	Secondary reduction system helical gear Secondary reduction ratio: Forward 12.44:1; Reverse 12.44:1 Differential type bevel gear Lubricant/capacity SAE 90 gear oil/ 475 cc (475 mL, 0.50 US qt)

SPECIFICATIONS

BATTERIES

Items	SPORT VEHICLE
Battery:	Trojan - Golf Car Type T-875 (6x8volt) RC: minimum 117 min

CHASSIS

Items	SPORT VEHICLE
Steering system: Type Steering angle (L.H.) Steering angle (R.H.)	Rack and Pinion 1.85 turn 1.85 turn
Brakes: Brake system Type of brake Brake pedal freeplay linkage adjustment (Brake cable end play)	Mechanical drum brake on each rear wheel with self-adjusters Dual internal expanding shoe Leading/trailing shoes (self-adjusting) 50-55 mm (1.97-2.17 in.) 0.004-0.02 in. (0.1-0.5 mm)
Parking brake: Type	Foot type; parking brake with automatic release
Wheel: Tire size: Front Rear Rim size: Tire pressure:	 20 x 10-8.00/PR 20 x 10-8.00/PR 8 x 7 Front: 82 kPa (12 psi) Rear: 96 kPa (14 psi)
Lights: Bulb voltage, wattage x quantity: Headlight Taillight	LED 13.5 V / 14.5 W x 2 12 V / 2.1 amp and .48 amp x 2

SPORT VEHICLE WIRING DIAGRAM



NOTES

©2017 Yamaha Golf-Car Company

NOTES

©2017 Yamaha Golf-Car Company